



# **THERMO KING**

*Operator's Manual*

## **Precedent™ C-600**

TK 55692-2-OP (Rev. 1, 10/14)

**Precedent™**

**C-600**

**TK 55692-2-OP (Rev. 1, 10/14)**

**Copyright© 2013 Thermo King Corp., Minneapolis, MN, USA**

**Printed in USA**

# Disclaimer

This manual is published for informational purposes only. Thermo King Corporation makes no representations or warranties, express or implied, with respect to the information, recommendations and descriptions contained in this manual and such information, recommendations and descriptions should not be regarded as all-inclusive or covering all contingencies. In the event you have any questions or require further information, please contact your local Thermo King dealer.

The procedures described herein should only be undertaken by suitably qualified personnel. Failure to implement these procedures correctly may cause damage to the Thermo King unit or other property or personal injury.

Thermo King Corporation and its affiliates shall have no liability in contract or tort (including negligence and/or strict liability) or otherwise, to any person or entity for any personal injury, property damage or any other direct, indirect, special or consequential damage or liability whatsoever, arising out of or resulting from any actions by any person that are contrary to this manual or any of the information, recommendations or descriptions contained herein or the failure of any person to implement the procedures described herein correctly or to follow caution and safety decals located on the Thermo King unit.

# Table Of Contents

<b>Introduction</b> .....	<b>7</b>	<b>Unit Description</b> .....	<b>18</b>
<b>EPA Emission Control System Warranty Statement</b>	<b>8</b>	Unit Overview .....	18
<b>Safety Precautions</b> .....	<b>11</b>	Features and Options .....	19
General Safety Practices .....	11	Diesel Engine .....	20
Automatic Start/Stop Operation .....	12	ELC (Extended Life Coolant) .....	21
Electrical Hazard .....	12	EMI 3000 .....	22
Battery Installation and Cable Routing .....	12	Thermo King X430L Reciprocating Compressor .....	22
Refrigerant .....	13	Electronic Throttling Valve .....	22
Refrigerant Oil .....	14	SMART REEFER 4 (SR-4) Control System .....	23
First Aid .....	14	Diesel Operation .....	23
First Aid–Refrigerant .....	14	Electric Operation .....	24
First Aid–Refrigerant Oil .....	14	CYCLE-SENTRY Start-Stop Controls .....	24
Safety Decals and Locations .....	15	Data Logging .....	25
Condenser and Evaporator Fans .....	15	OptiSet Plus .....	26
High Voltage Components .....	15	FreshSet .....	26
Do Not Use Ether Starting Aids .....	17	Defrost .....	26
		Opening the Front Doors .....	27
		Engine Compartment .....	28
		Unit Protection Devices .....	28



**Remote Status Display (Optional) .....32**

**Manual Pretrip Inspection  
(Before Starting the Unit) .....35**

**Operating Instructions .....37**

**SMART REEFER 4 (SR-4) Controller Overview . . . . 37**

**Control Panel . . . . .38**

Control Panel Display . . . . .38

Display Icons . . . . .39

Hard Keys . . . . .40

Soft Keys . . . . .40

Turning Unit On . . . . .41

If a Flash Drive is Connected: . . . . .41

Configurable Soft Keys . . . . .43

Display Heater . . . . .44

If a Language is Enabled . . . . .44

If Log Alarms are Present . . . . .45

Turning The Unit Off . . . . .47

The Standard Display . . . . .47

The TemperatureWatch Display . . . . .48

Changing The Setpoint . . . . .49

Numerical Setpoints . . . . .49

Named Products - OptiSet Plus . . . . .50

Both Numerical Setpoints and Named Products . 50

Changing the Setpoint - Numerical Setpoint . . . . 51

Changing the Setpoint - Named Product . . . . . 55

Changing the Setpoint - Both Numerical Setpoint  
and Named Product Available . . . . . 59

Starting the Diesel Engine . . . . . 60

Starting the Electric Motor . . . . . 61

Switching from Diesel to Electric . . . . . 62

Switching from Electric to Diesel . . . . . 63

Initiating a Manual Defrost Cycle . . . . . 64

Terminating a Defrost Cycle . . . . . 67

Selecting Cycle Sentry or Continuous Mode . . . . . 67

Using the Gauges Key . . . . . 71

Gauges Available . . . . . 71

Using The Sensors Key . . . . . 73

Sensors Available . . . . . 74

Using the Main Menu . . . . . 75

Pretrip . . . . . 76

Performing a Pretrip Test . . . . . 78

Flash Drive . . . . . 83

Flash Drive Icon . . . . . 83

Selecting the Flash Drive Menu from the Main Menu  
(If Already Connected) . . . . . 84

Removing the Flash Drive . . . . . 85

Languages (If Enabled) . . . . .	86	<b>Optional Rear Remote Control Panel . . . . .</b>	<b>121</b>
Available Languages . . . . .	86	Rear Remote Control Panel Functionality . . . . .	121
Alarms . . . . .	90	Rear Remote Control Action Set to Run . . . . .	121
Log Alarms . . . . .	90	Rear Remote Control Action Set to STAND BY . . . . .	122
Check Alarms . . . . .	91	Keypad . . . . .	124
Shutdown Alarms . . . . .	91	Display . . . . .	125
Pretrip Alarms . . . . .	92	Reading a Typical Remote Standard Display . . . . .	126
Clearing Alarm Codes . . . . .	92	Remote Control Panel Lockout . . . . .	126
Displaying and Clearing Alarm Codes . . . . .	93	Turning the Unit ON or OFF (Configured for STAND	
Gauges . . . . .	98	BY Operation) . . . . .	127
Displaying Gauges . . . . .	98	Turning the Unit On and Off (Configured for RUN	
Sensors . . . . .	99	Operation) . . . . .	127
Displaying Sensors . . . . .	99	Changing the Setpoint . . . . .	128
Data Logger (CargoWatch) . . . . .	100	Selecting Cycle-Sentry or Continuous Mode . . . . .	129
Sending Start of Trip Marker to CargoWatch and Service-		Displaying the Discharge Air Temperature . . . . .	130
Watch Data Loggers . . . . .	101	Viewing and Clearing Alarm Codes . . . . .	131
Hourmeters . . . . .	104	Starting a Manual Defrost Cycle . . . . .	132
Viewing Hourmeters . . . . .	104	Sending a Start of Trip Marker . . . . .	133
Mode Menu . . . . .	106	Running a Pretrip Test . . . . .	134
SmartPower Electric Standby Option . . . . .	113		
Time . . . . .	117	<b>Loading and Enroute Inspections . . . . .</b>	<b>136</b>
Clear All ECU Faults . . . . .	118	Pre-Loading Inspection . . . . .	136
		Post-Loading Inspection . . . . .	138
		Enroute Inspections . . . . .	139

<b>Alarm Codes</b>	<b>142</b>
Introduction	142
Alarm Types	142
Clearing Alarm Codes	145
<b>Jump Starting</b>	<b>171</b>
<b>Specifications</b>	<b>175</b>
Engine	175
Belt Tension	178
Refrigeration System	179
Electrical Control System	181
Electrical Components	182
Electric Heater Strips	184
Electrical Standby (Smart Power Units Only)	184
Electric Motor and Overload Relay	184
Standby Power Cord Requirements	185
Electric Fuel Heater (Optional)	185

<b>Warranty</b>	<b>186</b>
<b>Glossary</b>	<b>187</b>
<b>Maintenance Inspection Schedule</b>	<b>193</b>
<b>Serial Number Locations</b>	<b>198</b>
<b>Emergency Cold Line</b>	<b>201</b>
<b>Recover Refrigerant</b>	<b>202</b>
<b>CALIFORNIA</b>	
<b>Proposition 65 Warning</b>	<b>203</b>
<b>Index</b>	<b>204</b>

# Introduction

There is nothing complicated about operating and maintaining your Thermo King unit, but a few minutes studying this manual will be time well spent.

Performing pre-trip checks and enroute inspections on a regular basis will minimize on-the-road operating problems. A regular maintenance program will also help to keep your unit in top operating condition. If factory recommended procedures are followed, you will find that you have purchased the most efficient and dependable temperature control system available.

All service requirements, major and minor, should be handled by a Thermo King dealer for four very important reasons:

- They are equipped with the factory recommended tools to perform all service functions
- They have factory trained and certified technicians
- They have genuine Thermo King replacement parts
- The warranty on your new unit is valid only when the repair and replacement of component parts is performed by an authorized Thermo King dealer.

***IMPORTANT: This manual is published for informational purposes only and the information furnished herein should not be considered as all-inclusive or meant to cover all contingencies. If more information is required, consult your Thermo King Service Directory for the location and telephone number of the local dealer.***

# EPA Emission Control System Warranty Statement

Thermo King warrants to the initial owner and each subsequent owner that the certified, non-road diesel engine in your unit is:

1. Designed, built and equipped so as to conform, at the time of sale, with all applicable regulations adopted by the United States Environmental Protection Agency (EPA).
2. Free from defects in materials and workmanship in specific emission related parts for a period of five years or 3,000 hours of operation, whichever comes first, after date of delivery to the initial owner.

If an emission-related part or component fails during the warranty period, it will be repaired or replaced. Any such part or component repaired or replaced under warranty is warranted for the warranty period.

During the term of this warranty, Thermo King will provide, through a Thermo King authorized service dealer or other establishment authorized by Thermo King, repair or replacement of any warranted part at no charge to the non-road engine owner.

In emergency, repairs may be performed at any service establishment, or by the owner, using any replacement part. Thermo King will reimburse the owner for their expenses, including diagnostic charges for such emergency repair. These expenses shall not exceed Thermo King's suggested retail price for all warranted parts replaced, and labor charges based on Thermo King's recommended time allowance for the warranty repair and the geographically appropriate hourly labor rate.

## EPA Emission Control System Warranty Statement

Any replacement part can be used for maintenance or repairs. The owner should ensure that such parts are equivalent in design and durability to genuine Thermo King parts. However, Thermo King is not liable for parts that are not genuine Thermo King parts.

A part not being available within 30 days or repair not being completed within 30 days constitutes an emergency.

As a condition of reimbursement, replaced parts and received invoices must be presented at a place of business of a Thermo King authorized service dealer or other establishment authorized by Thermo King.

This warranty covers the following emission-related parts and components:

- Fuel Injection System
- Intake Manifold
- Exhaust Manifold
- Miscellaneous hoses, clamps, connectors and sealing devices used in the above systems.

If failure of one of these parts or components results in failure of another part or component, both will be covered by this warranty.

## Responsibilities

This warranty is subject to the following:

### Thermo King Corporation Responsibilities

During the emission warranty period, if a defect in material or workmanship of a warranted part or component is found, Thermo King will provide:

- New, remanufactured, or repaired parts or components required to correct the defect.

***NOTE: Items replaced under this warranty become the property of Thermo King.***

- Labor, during normal working hours, required to make the warranty repair. This includes diagnosis and labor to remove and install the engine, if necessary.

### Owner Responsibilities

During the emission warranty period, the owner is responsible for:

- The performance of all required maintenance. A warranty claim will not be denied because the scheduled maintenance was not performed. However, if the lack of required maintenance was the reason for the repair, then the claim will be denied.
- Premium of overtime cost.
- Cost to investigate complaints that are not caused by defects in Thermo King material or workmanship.
- Providing timely notice of a warrantable failure and promptly making the product available for repair.

### Limitations

Thermo King is not responsible for resultant damages to an emission-related part or component resulting from:

- Any application or installation Thermo King deems improper as explained in this Operator's Manual, or any other manuals provided for the unit.
- Attachments, accessory items, or parts not authorized for use by Thermo King.
- Improper off-road engine maintenance, repair or abuse.
- Owner's unreasonable delay in making the product available after being notified of a potential product problem.

This warranty is in addition to Thermo King's standard warranty applicable to the off-road engine product involved.

Remedies under this warranty are limited to the provision of material and services as specified herein. Thermo King is not responsible for incidental or consequential damages such as downtime or loss of engine powered equipment.

# Safety Precautions

Thermo King recommends that servicing be done only by a Thermo King dealer. However, you should be aware of several safety practices. This chapter gives basic safety precautions for working with Thermo King units and describes the safety stickers on your unit that you should be familiar with.

## General Safety Practices



***DANGER: NEVER operate the unit with the compressor discharge valve closed. Doing so could cause the compressor to explode, causing death or serious injury.***



***WARNING: Always wear goggles or safety glasses when working with or around the refrigeration system or battery. Refrigerant or battery acid can cause permanent damage if it comes in contact with your eyes.***



***WARNING: Keep hands and loose clothing clear of fans and belts at all times when the unit is operating or when opening or closing compressor service valves.***



***WARNING: Exposed coil fins can cause painful lacerations. Service work on the evaporator or condenser coils should be done by a certified Thermo King technician.***



***WARNING: Do not apply heat to a closed cooling system. Before applying heat to a cooling system, drain it. Then flush it with water and drain the water. Antifreeze contains water and ethylene glycol. The ethylene glycol is flammable and can ignite if the antifreeze is heated enough to boil off the water.***



***CAUTION: Use extreme caution when drilling holes in the unit. Drilling into electrical wiring or refrigerant lines could cause a fire. Do not drill into structural components.***



### Automatic Start/Stop Operation

This unit is capable of automatic operation and could start at any time without warning.



**WARNING:** *The unit can start at any time without warning. Press the **OFF** key on the control panel and place the microprocessor On/Off switch in the Off position before inspecting or servicing any part of the unit.*

### Electrical Hazard



**DANGER:** *Dangerous three phase AC electric power is present whenever the unit is operating in either Diesel Mode or Electric Mode and whenever the unit is connected to a source of external standby power. Voltages of this magnitude can be lethal. Exercise extreme caution when working on the unit.*

### Battery Installation and Cable Routing



**WARNING:** *Improperly installed battery could result in a fire or explosion. A Thermo King approved battery must be installed and properly secured to the battery tray.*



**WARNING:** *Improperly installed battery cables could result in fire or explosion. Battery cables must be installed, routed and secured properly to prevent them from rubbing, chaffing or making contact with hot, sharp or rotating components.*



**WARNING:** *Do not attach fuel lines or any additional wiring harnesses to the battery cables as this could cause an electrical fire.*



**CAUTION:** *Do not connect other manufacturer's equipment or accessories to the Thermo King unit. This could result in severe damage to equipment and void the warranty.*



**CAUTION:** Set all unit electrical controls to the OFF position before connecting battery cables to the battery to prevent unit from starting unexpectedly and causing personal injury.



**CAUTION:** Always wear protective clothing, gloves and eye wear when handling and installing batteries. Battery acid can cause serious burns when exposed to eyes or skin. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters your eye, immediately flood it with running cold water for at least twenty minutes and get medical attention immediately.



**CAUTION:** Always cover battery terminals to prevent them from making contact with metal components during battery installation. Battery terminals grounding against metal could cause the battery to explode.

## Refrigerant

Although fluorocarbon refrigerants are classified as safe, use caution when working with refrigerants or in areas where they are being used.



**DANGER:** Fluorocarbon refrigerants can produce toxic gases. In the presence of an open flame or electrical short, these gases are severe respiratory irritants **CAPABLE OF CAUSING DEATH.**



**DANGER:** Fluorocarbon refrigerants tend to displace air and can cause oxygen depletion which could result in **DEATH BY SUFFOCATION.** Provide adequate ventilation in enclosed or confined areas.



**WARNING:** Fluorocarbon refrigerants evaporate rapidly, freezing anything they contact if accidentally released into the atmosphere from the liquid state.

## Safety Precautions

### Refrigerant Oil

Observe the following precautions when working with or around refrigerant oil:



**WARNING:** *Always wear goggles or safety glasses to protect eyes from refrigerant oil contact.*



**WARNING:** *Protect skin and clothing from prolonged or repeated contact with refrigerant oil. Rubber gloves are recommended.*



**WARNING:** *Wash thoroughly immediately after handling refrigerant oil to prevent irritation.*

### First Aid

#### First Aid–Refrigerant

**Eyes:** For contact with liquid, immediately flush eyes with large amounts of water. Get prompt medical attention.

**Skin:** Flush areas with large amounts of warm water. Do not apply heat. Wrap burns with dry, sterile, bulky dressing to protect from infection or injury. Get prompt medical attention.

**Inhalation:** Move victim to fresh air and restore breathing if necessary. Stay with victim until emergency personnel arrive.

#### First Aid–Refrigerant Oil

**Eyes:** Immediately flush eyes with large amounts of water for at least 15 minutes while holding the eyelids open. Get prompt medical attention.

**Skin:** Remove contaminated clothing. Wash thoroughly with soap and water. Get medical attention if irritation persists.

**Inhalation:** Move victim to fresh air and restore breathing if necessary. Stay with victim until emergency personnel arrive.

**Ingestion:** Do not induce vomiting. Immediately contact local poison control center or physician.

## Safety Decals and Locations

### Condenser and Evaporator Fans

Be aware of the warning nameplates near the condenser fans and evaporator fans (example in Figure 1).



AMA1581

Figure 1: Fan Warning

### High Voltage Components

Various components on the Precedent unit operate using 220/3/60 or 460/3/60 high voltage and are identified by warning nameplates (examples in Figure 2). All high voltage wiring is identified by ORANGE conduiting. Be aware of the locations of these components. Only certified, trained technicians can service them.



AMA1579




AMA1580

Figure 2: High Voltage Warning


**NOTE:** See Figure 3 and Figure 4 for high voltage component locations.

**Safety Precautions**

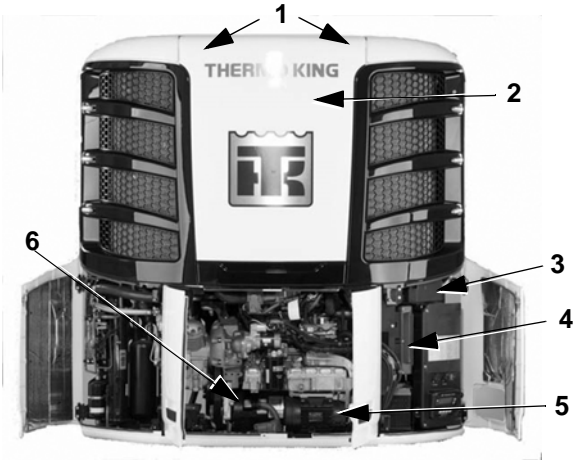

1.	Condenser Motors	4.	High Voltage Control Box
2.	Evaporator Motor	5.	AC Generator
3.	High Voltage Distribution Box	6.	Electric Standby Motor & Power Receptacle (SmartPower Option)


**Figure 3: High Voltage Component Locations (Front)**

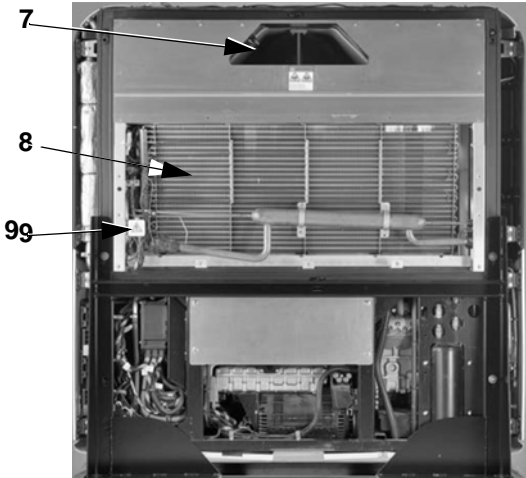

7.	Evaporator Motor	9.	High Voltage Junction Box
8.	High Voltage Heater Strips	All ORANGE conduiting contains High Voltage	

**Figure 4: High Voltage Component Locations (Rear)**

## Do Not Use Ether Starting Aids

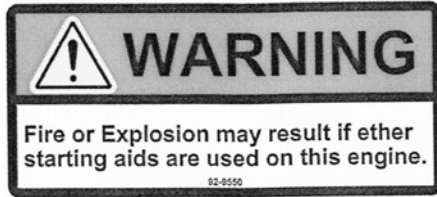

**Figure 5: Do Not Use Ether Starting Aids  
(Near Engine)**

# Unit Description

## Unit Overview

The Thermo King Precedent C-600 is a one piece, self-contained, diesel powered, air cooling/heating unit operating under the control of a SMART REEFER 4 (SR-4) programmable microprocessor controller. The unit mounts on the front of the trailer with the evaporator extending through an opening in the front wall.

The units feature all-new DDE (Diesel Direct Electric) architecture, the quiet running Thermo King TK486V25 engine and the Thermo King X-430 reciprocating compressor.

The C-600 is available in the following models:

**Standard :** Cooling and heating on diesel engine operation.

**SmartPower™ Option:** Cooling and heating on diesel engine operation and electric standby operation.

See the following Features and Options.



ARA1970

**Figure 6: C-600 Front View**

## Features and Options

The following chart lists key design features and options.

l Standard Features

m Option/Factory installed

o Option/Dealer Installed

<b>Precedent C-600 Key Features &amp; Options</b>	
SMART REEFER SR-4 Controller	l
SmartPower Electric Standby	m
SmartPower High-Output	m
SmartPower Prep Package	m
OptiSet Plus	l
ETV (Electronic Throttling Valve)	l
ServiceWatch Data Logger	l
CargoWatch Data Logger	l
CargoLink Sensor Kits	m / o
CargoLink Wireless Sensors	m / o
EMI-3000	l
High-Capacity Condenser Coil	l

<b>Precedent C-600 Key Features &amp; Options</b>	
Easy-access door design	l
Composite Exterior Panels	l
Long-Life Coolant/Silicone Hoses	l
Remote Status Display	m / o
Standard Unit Color White	l
Standard Grille Color Black	l
Directional Air Delivery	l
Vibration Isolation System	l
Aluminum Undermount Fuel Tank 50 Gal. (186 Liter)	l
Fuel Level Sensor	l
Severe Duty Package	m
Fuel Tanks with Ultrasonic Fuel level Sensor	m
Electric Fuel Heater	m
Frost Plug Heater	m
Alternator, 65 Amp, 12 Vdc	m
Appearance Packages	m




## Unit Description

Precedent C-600 Key Features & Options	
Fresh Air Exchange	m
Anti-Siphon Device	m
REB Wireless Communication Platform	m
TrackIng Telematics	m / o
PrimAir bulkhead and duct system	o
Rear Remote Control	o
Humidity Sensor	o
Battery Charger	m
Reliamax Battery, 12 Volt, Wet Cell	o
EON Battery, 12 Volt, Dry Cell	o
Remote Electric Power Receptacle	m

## Diesel Engine

The 4-cylinder TK486V25 is a water cooled, direct injection diesel engine. The engine is coupled directly to the compressor on Standard Units. A centrifugal clutch transfers power from the engine to the compressor on Smart Power Units. Belts transmit power to the AC generator, water pump, and alternator.

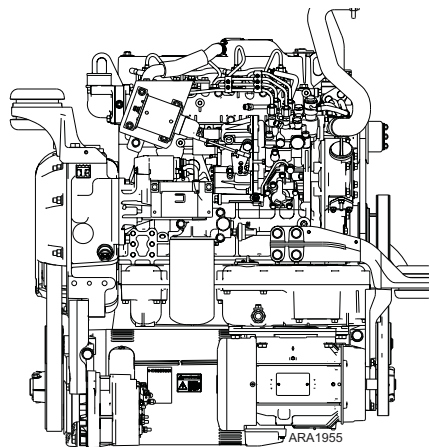

**Figure 7: TK486V25 Engine**


## ELC (Extended Life Coolant)

ELC (Extended Life Coolant) is standard equipment. The maintenance interval for ELC is five years or 12,000 hours. A nameplate on the coolant expansion tank identifies units with ELC (see “Safety Decals and Locations”). The new engine coolant, Chevron Extended Life Coolant, is RED in color instead of the previous GREEN or BLUE-GREEN colored conventional coolants.



**CAUTION:** Do not add “GREEN” or “BLUE-GREEN” conventional coolant to cooling systems using “RED” Extended Life Coolant, except in an emergency. If conventional coolant is added to Extended Life Coolant, the coolant must be changed after 2 years instead of 5 years.

**NOTE:** The use of 50/50% pre-mixed ELC is recommended to assure that de-ionized water is being used. If 100% full strength concentrate is used, de-ionized or distilled water is recommended instead of tap water to insure the integrity of the cooling system is maintained.

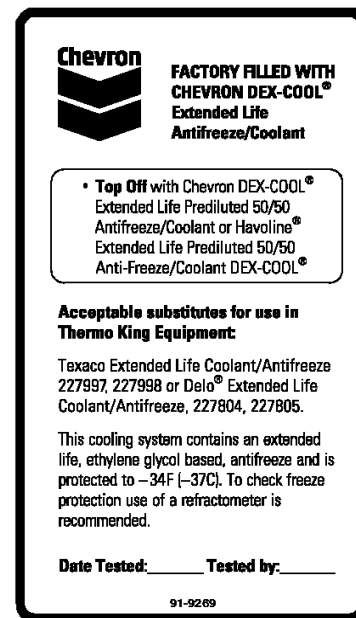

AJA1947

Figure 8: ELC (Extended Life Coolant) Nameplate (On expansion tank)

## Unit Description

### EMI 3000

EMI 3000 is an extended maintenance interval package. It is standard equipment. The EMI 3000 package consists of the following key components:

- EMI 3000-Hour Cyclonic Air Cleaner Assembly and Air Cleaner Element
- EMI 5-Micron 3000-Hour Fuel Filter
- EMI 3000-Hour Dual Element Oil Filter
- API Rating CI-4 Mineral Oil
- Five Year or 12,000 Hour ELC (Extended Life Coolant)

The EMI package allows standard maintenance intervals to be extended to 3,000 hours, or 2 years, whichever occurs first.

***NOTE: Units equipped with the EMI 3000 package do require regular inspection in accordance with Thermo King's maintenance recommendations.***

***NOTE: EMI 3000 oil filters and EMI 3000 air cleaners are NOT interchangeable with older style oil filters and air cleaners.***

### Thermo King X430L Reciprocating Compressor

The C-600 is equipped with a four cylinder 30.0 cu. in. (492 cm<sup>3</sup>) displacement Thermo King X430L reciprocating compressor.

### Electronic Throttling Valve

The ETV provides enhanced control of the refrigeration system as follows:

- Allows the refrigeration system to fully utilize the power capabilities of the engine under varying conditions
- Provides an additional measure of protection against high discharge pressures
- Protects the engine from high coolant temperature shutdowns
- Provides a means of precise temperature control.

## **SMART REEFER™ 4 (SR-4) Control System**

The SR-4 is a microprocessor control system designed for transport refrigeration. The SR-4 integrates the following functions: changing setpoint and operating mode, viewing gauge, sensor and hourmeter readings, initiating defrost cycles, and viewing and clearing alarms.

The microprocessor components are located inside the control box, which is located inside the lower roadside service door. It is used to operate the unit. The control panel is mounted on the face of the control box. It is clearly visible through an opening in the lower roadside service door.

See “Operating Instructions” for more information about the SR-4 Controller.

Depending on the air temperature in the trailer, as sensed by the microprocessor Base Controller, the unit will typically operate in one of the following modes:

## **Diesel Operation**

In diesel operation the microprocessor will select the operating mode from the following:

- High Speed Cool
- Low Speed Cool
- Low Speed Modulated Cool
- Null (CYCLE-SENTRY operation only)
- Low Speed Modulated Heat
- Low Speed Heat
- High Speed Heat
- Defrost

## Unit Description

### Electric Operation

In electric operation the microprocessor will select the operating mode from the following:

- Cool
- Modulated Cool
- Null (CYCLE-SENTRY operation only)
- Modulated Heat (Hot Gas only)
- Hot Gas Heat
- Full Heat (Hot Gas and Electric Heat)
- Defrost (Hot Gas and Electric Heat)

### CYCLE-SENTRY™ Start-Stop Controls

The CYCLE-SENTRY Start-Stop fuel saving system provides optimum operating economy.



***WARNING: The unit can start at any time without warning. Press the **OFF** key on the control panel and place the microprocessor On/Off switch in the Off position before inspecting or servicing any part of the unit.***

When CYCLE-SENTRY Mode is selected the unit will start and stop automatically to maintain setpoint, keep the engine warm and the battery charged. When Continuous Mode is selected, the unit starts automatically and runs continuously to maintain setpoint and provide constant airflow.

Your Thermo King unit provides a wide range of control and programming flexibility. However, pre-programming of the unit SR-4 microprocessor may prohibit operation in certain temperature ranges within some modes and may also prohibit certain modes of operation. If you have controller programming questions, contact your supervisor or your Thermo King dealer before requesting service.

## Data Logging


There are two separate data loggers. The data is downloaded through the USB ports on the front of the control box.

**ServiceWatch™:** ServiceWatch is standard equipment. It records operating events, alarm codes and compartment temperatures as they occur and at preset intervals. This information is typically used to analyze unit performance.

**CargoWatch™:** CargoWatch data logging requires the installation of optional sensors. Up to six temperature sensor/probes and four door switches can be installed. CargoWatch also logs the setpoint. Use a USB port to download the CargoWatch data. If optional temperature sensors are installed, their readings are displayed as Datalogger Sensor (1-6) Temperature in the sensor readings.

### USB Ports :

- The Flash Drive Only USB Port allows a USB Flash Drive that has been properly configured using the ThermoServ™ Service Tool to be connected to the unit.
- The PC Computer Only USB Port allows a PC Computer to be connected to the unit via a standard USB Cable.

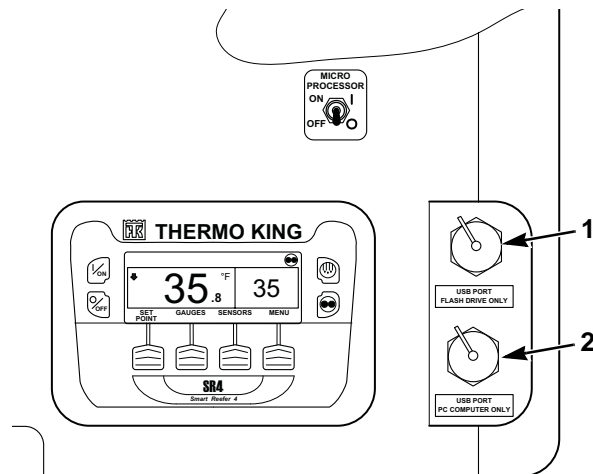

1.	Flash Drive Only USB Port
2.	PC Computer Only USB Port

**Figure 9: USB Ports**

### OptiSet™ Plus

OptiSet Plus is a group of programmable functions that control how the unit will operate with specific setpoints or named products. This assures that when a particular setpoint or named product is selected, the unit will always operate the same way. This allows an entire fleet to be configured to match the customers' needs. Contact your Thermo King dealer for information about programming OptiSet Plus.

### FreshSet™

FreshSet is included in OptiSet Plus. FreshSet is a demand base temperature control for fresh products. FreshSet modifies and adjusts unit airflow operation to control temperature and to maximize protection of cargo, while keeping operating costs to a minimum. Contact your Thermo King dealer for information about programming FreshSet.

### Defrost

Frost gradually builds-up on evaporator coils as a result of normal operation. The unit uses hot refrigerant to defrost the evaporator coil. Hot refrigerant gas passes through the evaporator coil and melts the frost. The water flows through collection drain tubes onto the ground. The methods of defrost initiation are Automatic, and Manual.

**Automatic Defrost:** The SR-4 automatically initiates timed or demand defrost cycles. The SR-4 microprocessor can be programmed to initiate timed defrost cycles at intervals of 2, 4, 6, 8, or 12 hours. Demand defrost cycles occur if the differences between the return air temperature, discharge air temperature, and coil temperature exceed certain limits. The unit can enter defrost cycles as often as every 30 minutes if required.

**Manual Defrost:** In Manual Defrost Mode, the operator initiates a defrost cycle. See "Initiating a Manual Defrost Cycle."

***NOTE: The unit will not perform a Manual Defrost Cycle unless the unit has been turned on with the ON key, the unit is running in Continuous or CYCLE-SENTRY Mode (or shut down in CYCLE-SENTRY Null Mode), and the coil temperature is below 45 F (7 C).***

## Opening the Front Doors

Pull the right door handle to unlatch the doors and access the engine compartment. Do not push the doors closed while holding the door latch handle open or the door will not close properly.



Figure 10: Door Latch Locations

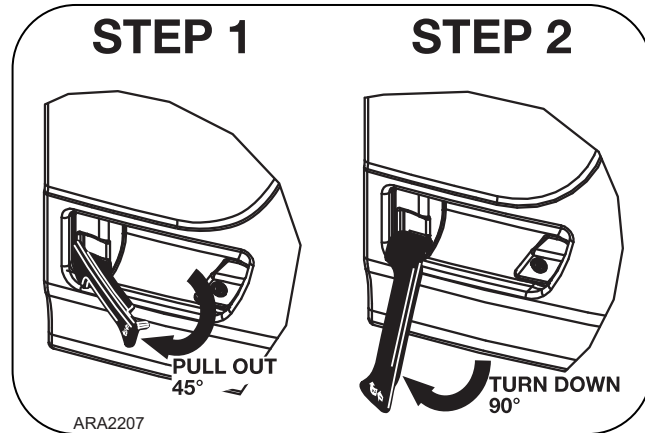


Figure 11: Door Latch Nameplate



# Engine Compartment

The following maintenance items can be checked visually.



**WARNING:** *The unit can start at any time without warning. Press the **OFF** key on the control panel and place the microprocessor On/Off switch in the Off position before inspecting any part of the unit.*

**Compressor Oil Sight Glass:** Use this sight glass to check the compressor oil level. Check the compressor oil when there is evidence of oil loss (leaks). Refer to the unit Maintenance Manual for the correct procedure.

**Engine Oil Dipstick:** Use the engine oil dipstick to check the engine oil level.



**CAUTION:** *Make sure the engine is turned off before attempting to check the engine oil.*

**Receiver Tank Sight Glass:** This sight glass indicates the level of refrigerant in the receiver tank. Refer to the unit Maintenance Manual for the correct procedure.

Operate the unit in high speed cool for approximately 15 minutes to stabilize operating conditions and temperature before attempting to check the refrigerant.

**NOTE:** *If the ball floats, there is sufficient refrigerant in the unit for that load at that particular trailer temperature. This test does not determine if the unit contains a full charge or an overcharge of refrigerant.*

## Unit Protection Devices

**Coolant Level Switch:** The coolant level switch closes if the coolant level drops below an acceptable level. If it stays closed for a specified time, the microprocessor records alarm code 37.

### Engine Coolant Temperature Sensor:

The microprocessor uses the engine coolant temperature sensor to monitor the engine coolant temperature. If the engine coolant temperature rises above an acceptable level, the microprocessor records alarm code 41 and possibly 18. The microprocessor might also shut the unit down.

**High Pressure Cutout Switch:** The high pressure cutout switch (HPCO) is located on the compressor discharge manifold. If the compressor discharge pressure becomes excessive, the switch opens the circuit to the run relay to stop the unit. The microprocessor will record Alarm Code 10.

**High Pressure Relief Valve:** This valve is designed to relieve excessive pressure in the refrigeration system. It is located on the receiver tank. If the high pressure relief valve opens, much of the refrigerant will be lost. Take the unit to a Thermo King dealer if this occurs.

**Low Oil Level Switch:** The low oil level switch closes if the oil drops below an acceptable level. If it stays closed for a specified time, the microprocessor shuts the unit down and records Alarm Code 66.

**Low Oil Pressure Switch:** The low oil pressure switch closes if the oil pressure drops below an acceptable level. If it stays closed for a specified time, the microprocessor shuts the unit down and records alarm code 19.

**Preheat Buzzer:** The preheat buzzer sounds when the base controller energizes the preheat relay. This warns anyone near the unit that the controller is about to start the engine.

**Overload Relay—Automatic Reset (SmartPower):** An overload relay protects the standby electric motor. The overload relay opens the circuit to the electric motor if the motor overloads for any reason (e.g., low line voltage or improper power supply) while the unit is on electric standby operation. The microprocessor will record Alarm Code 90.

**Smart FETs:** Smart FETs in the microprocessor protect some circuits and components from an overcurrent condition.


**Fuses:** A number of fuses, located on the microprocessor, protect various circuits and components. The microprocessor is located inside the control box. Refer to the appropriate Microprocessor Controller Diagnostic Manual for more information about the fuses.

## Unit Description

Fuse	Size	Function
F1	5A	2A Power for REB
F2	15A	On/Off Switch Circuit
F3	40A	Fuel Solenoid/Starter Circuit
F4	None	No Fuse - All Bosch and Thermo King Alternators (Note 1)
	2A	2A Fuse - All Prestolite Alternators
F5	60A	Preheat Circuit (Note 2)
F6	15A	High Speed Solenoid Circuit
F7	2A	8X Power for CAN bus
F8	5A	2A Power for CAN bus J12
F10	15A	On/Off Relay Circuit
F12	5A	2A Power for CAN bus J13
F13	2A	Status Light Circuit
F15	2A	SR-4 Power Supply Circuit
F20	2A	Alternator Sense Circuit
F25	10A	Fresh Air Door Circuit
F25	7.5A	High Pressure Cutout Circuit


***NOTE: Fuse F4 must be in place for Prestolite alternators to charge. Fuse F4 must be removed for Bosch and Thermo King alternators. Service Parts Base Controllers are shipped without the F4 fuse***

***NOTE: The F5 preheat fuse is a “slow blow” type fuse. It is designed for use with the Yanmar trailer engine air pre-heater. Always replace the fuse with the TK specified fuse.***

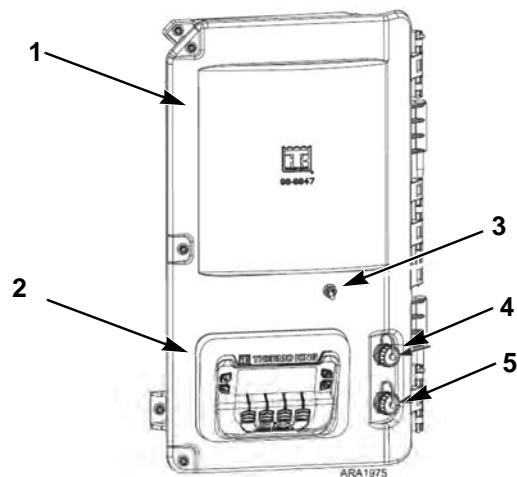

1.	Control Box	4.	PC Only USB Poet
2.	HMI Control Panel	5.	Flash Drive Only USB Port
3.	Microprocessor On/Off Switch		

**Figure 12: Control Box With Service Door Open**

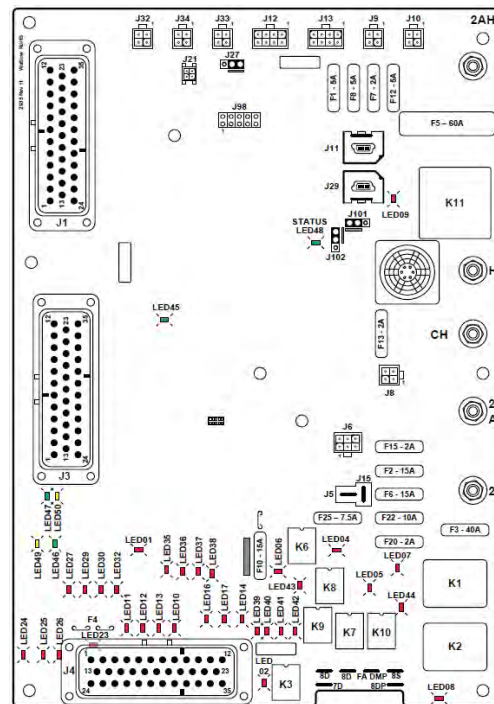

**Figure 13: SR-4 Controller**

# Remote Status Display (Optional)

The remote status display mounts on the cargo box for easy viewing of the unit's mode.

The remote status display indicates operating status as follows:

**White Status LEDs:** Illuminate the “T” portion of the TK logo when the unit is functioning properly with no alarm codes.



ARA1376

Figure 14: Remote Status Display (All LEDs Shown)



ARA1413

Figure 15: Normal Operation No Alarms

**Amber Status LEDs:** Illuminate the “K” portion of the TK logo when the unit has a check alarm code, but is still functioning properly. Check the unit as soon as possible to correct the alarm condition.



**Figure 16: Check Alarm**


**White and Amber Status LEDs:** The two bottom LEDs in the “T” (in white) and the four bottom LEDs in the “K” (in amber) are illuminated when the unit has a shutdown alarm code and the load integrity is at risk. Correct the alarm condition immediately.



**Figure 17: Shutdown Alarm**

# Remote Status Display (Optional)


Remote status displays that also show the fuel level or the fuel level and the box temperature are also available. The number of white LEDs illuminated in the fuel level indicator show the fuel level. When the fuel level falls below 10%, only the two amber LEDs at the top and bottom of the fuel level indicator are illuminated to indicate the low fuel level.

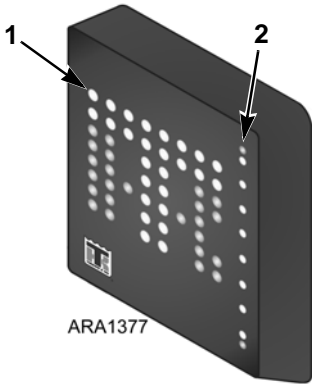

1.	Status Indicator
2.	Fuel Level Indicator

Figure 18: Remote Status Display with Fuel Level

The temperature display shows the box temperature, except when the unit is in defrost in which case it displays “dF”.

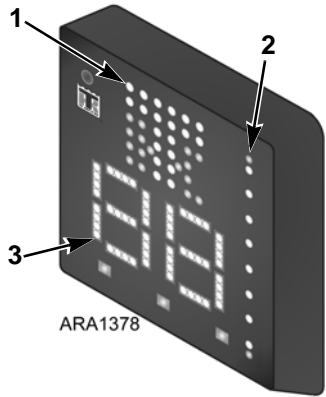

1.	Status Indicator
2.	Fuel Level Indicator
3.	Temperature Display

Figure 19: Remote Status Display with Fuel Level and Temperature

# Manual Pretrip Inspection (Before Starting the Unit)

Pretrip inspections are an important part of a preventative maintenance program designed to minimize operating problems and breakdowns. Perform this pretrip inspection before every trip involving refrigerated cargo.

**NOTE:** *Pretrip inspections are not intended to take the place of regular maintenance inspections.*

**Fuel:** Make sure the diesel fuel supply is adequate to guarantee engine operation to the next check point. Allow for maximum fuel consumption of one gallon per hour of engine operation.

**Engine Oil:** Check the engine oil level. It should be at the Full mark when the dipstick is threaded all the way into the oil pan. Do not overfill.



**CAUTION:** *Turn the engine off before checking the engine oil level.*

**Engine Coolant:** The engine coolant must have antifreeze protection to -30 F (-34 C). Add coolant if Alarm Code 37 is active. Check and add coolant to the expansion tank.



**WARNING:** *Do not remove the expansion tank cap while the coolant is hot.*

**Battery:** Make sure the battery terminals are tight and free of corrosion.

**Belts:** Make sure belts are in good condition and adjusted to the proper tension. For more information about belt tension, see the Specifications chapter.

**Electrical:** Check the electrical connections to make sure they are securely fastened. Wires and terminals should be free of corrosion, cracks, and moisture.

**Structural:** Visually inspect the unit for leaks, loose or broken parts, and other damage.



## **Manual Pretrip Inspection (Before Starting the Unit)**

**Coils:** Make sure the condenser and evaporator coils are clean and free of debris.

**Cargo Box:** Check the interior and exterior of the cargo box for damage. Any damage to the walls or insulation must be repaired.

**Cargo Doors:** Make sure that the cargo doors and weather seals are in good condition. The doors should latch securely and the weather seals should fit tightly.

**Defrost Drains:** Check the defrost drain hoses to make sure they are open.

# Operating Instructions

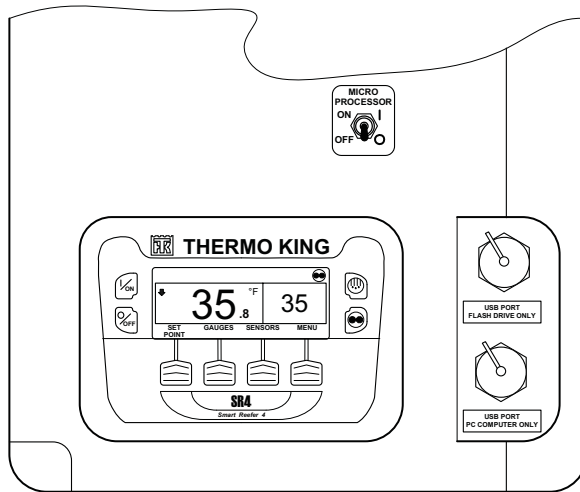


Figure 20: SR-4 Control Panel

## SMART REEFER 4 (SR-4) Controller Overview

Thermo King has applied the latest advances in computer technology to develop a device that controls temperature and unit function, and displays operating information quickly and accurately.

There is nothing complicated about learning to operate the SR-4 Controller, but you will find that a few minutes studying the contents of this manual will be time well spent.



***WARNING: Do not operate the SR-4 until you are completely familiar with the location and function of each control.***

## Operating Instructions

The microprocessor components are located inside the control box, which is located inside the lower roadside service door. The microprocessor is connected to a Human Machine Interface (HMI) Control Panel. It is used to operate the unit. The USB ports are used to retrieve data from the data logging system.

**Microprocessor On/Off Switch:** This switch supplies or removes electrical power to the microprocessor. The Microprocessor Power Switch is located above HMI Control Panel. It is hidden when the lower roadside body panel surrounding the Control Box is closed.



***WARNING: The unit can start at any time without warning. Press the **OFF** key on the control panel and place the microprocessor On/Off switch in the Off position before inspecting or servicing any part of the unit.***


## Control Panel

The control panel has a display and eight touch sensitive keys. The display is capable of showing both text and graphics. The four keys on the left and right sides of the display are “hard” (dedicated) keys. The four keys under the display are “soft” keys. The function of “soft” keys change depending on the operation being performed. If a soft key is active, its function will be shown in the display directly above the key.

## Control Panel Display

The display is used to supply unit information to the operator. This information includes setpoint, current box temperature operating information, unit gauge readings, system temperatures and other information as selected by the operator.

The default display is called the Standard Display. It is shown in Figure 21 and will be described in detail later in this chapter.

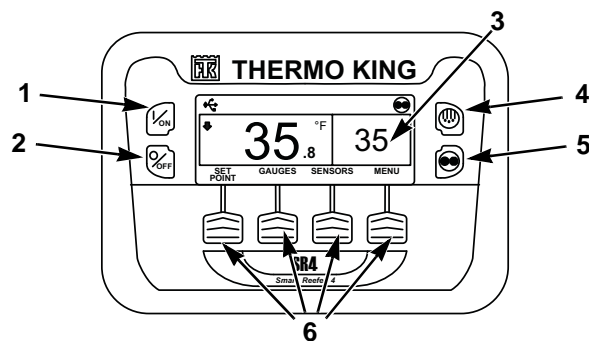

1.	On Key (Hard Key)
2.	Off Key (Hard Key)
3.	Display
4.	Defrost Key (Hard Key)
5.	CYCLE-SENTRY/Continuous Mode Key (Hard Key)
6.	Soft Keys

**Figure 21: Control Panel Display and Keys**

## Display Icons

Display symbols or Icons are used to present additional unit information




**Down-Pointing Arrow:** (At the left side of the display) Shows the unit is cooling. If the arrow were pointing upward the unit would be heating.



### **CYCLE SENTRY/Continuous Mode Key:**

The unit is running in Cycle Sentry Mode as shown by the Cycle Sentry Icon in the upper right corner of the display. If the Cycle Sentry icon is not present, the unit is running in Continuous Mode.



**USB:** The USB Icon in the upper left corner of the display will appear when a USB device is connected to either of the USB Ports on the Unit Control Panel.

### Hard Keys

The keys on either side of the display are dedicated or “hard” keys. Their function always remains the same.



**On Key:** Used to turn the unit on. First the display will briefly show the Thermo King Logo and then the statement “Configuring System - Please Wait”. When the power-up sequence is complete the display shows the Standard Display of box temperature and setpoint.



**Off Key:** Used to turn the unit off. First the display will briefly show “System is Powering Down - Please Wait. Press On to Resume” and then “Off” will appear momentarily. When the power-down sequence is complete the display will be blank. For more information see “Turning the Unit On and Off” later in this section.



**Defrost Key:** Press this key to initiate a Manual Defrost cycle.



**CYCLE SENTRY:** Used to select Cycle Sentry Mode or Continuous Mode operation if allowed by OptiSet Plus. For more information see “Selecting Cycle Sentry or Continuous Mode” later in this section.

### Soft Keys



The four “soft” keys under the display are multi-purpose keys. Their function changes depending on the operation being performed. If a soft key is active the key function is shown in the display directly above the key. The keys are numbered from left to right, with Key 1 on the far left and Key 4 on the far right.

#### Typical soft key applications:

- |          |              |           |
|----------|--------------|-----------|
| • MENU   | • CLEAR      | • NO      |
| • NEXT   | • HOURMETERS | • SENSORS |
| • + OR - | • GAUGES     | • EXIT    |
| • SELECT | • BACK       | • HELP    |

## Turning Unit On

The unit is turned on by pressing the ON Key (Figure 22) and off by pressing the OFF Key. When the On Key is pressed the display briefly shows the THERMO KING Logo as the display initializes.

**IMPORTANT:** The ON Key must be held down until the Thermo King Logo appears. If the ON Key is not held down long enough (approximately 1/2 second), the display may flicker but the unit will not start up. If this occurs, hold the ON Key down until the Thermo King logo appears.

**NOTE:** With extremely cold ambient temperatures it may take up to 15 seconds for the display to appear on initial startup.

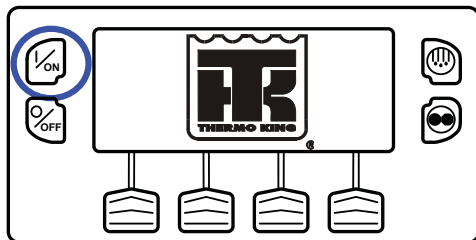


Figure 22: ON Key

Then the startup screen (Figure 23) appears while communications are established and the unit prepares for operation.


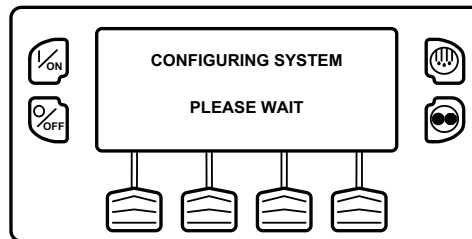


Figure 23: Startup Screen

## If a Flash Drive is Connected:


If a properly configured USB Flash Drive is inserted in the Flash Drive Only USB Port on the Control Panel when the unit is turned on, the display (Figure 24) will briefly show FLASH DRIVE.

## Operating Instructions

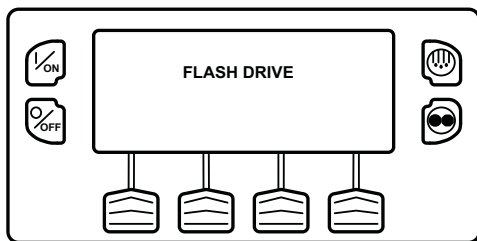

**Figure 24: Flash Drive**

Then FLASH DRIVE DETECTED and the Flash Drive Menu will appear on the display (Figure 25). The display will be shown for about 30 seconds and then the Standard Display will appear. To go to the Standard Display immediately press the EXIT Soft Key.

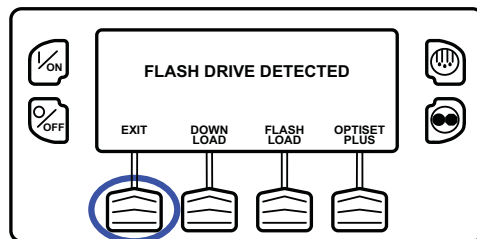

**Figure 25: Flash Drive Menu**

**IMPORTANT:** The engine start is not delayed by the Flash Drive Menu shown above. The engine start prompt will appear and the engine will start. After the engine is started the display will return to the Flash Drive Menu or the Standard Display.

If a properly configured USB Flash Drive is connected to the USB Flash Drive connector, this feature allows the operator to select the desired Flash Drive function. If enabled when the Flash Drive was configured, the following functions may be available:

- DOWNLOAD
  - “Download the ServiceWatch Data Logger
  - “Download the CargoWatch Data Logger
- FLASHLOAD
  - “Flash load Base Controller Software
  - “Flash load HMI Control Panel Software
- OPTISET PLUS
  - SEND
    - “Send OptiSet Plus files
  - RETRIEVE
    - “Retrieve OptiSet Plus files

The Flash Drive is also available from the Main Menu.

The Flash Drive Menu will time out about 30 seconds after the engine starts. When the Flash Drive Menu times out, the Standard Display will appear. To go to the Standard Display immediately press the EXIT Key.

## Configurable Soft Keys

When the Standard Display is shown, the default functions of the two center soft keys are GAUGES and SENSORS. (Figure 26)

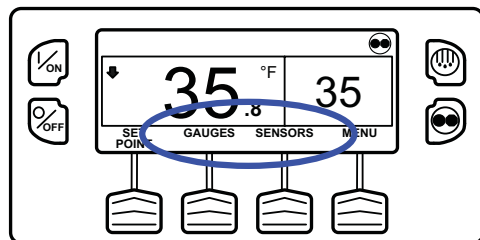


Figure 26: Soft Keys

The functions of these two keys can be changed as required for customer convenience. The functions of these two soft keys on the Standard Display can be re-assigned to any of the following functions using the Guarded Access > Main Menu Configuration menu:

Gauges	Pretrip	SOT (start of trip)
Sensors	Data Logger	Hourmeters

The GAUGES and SENSORS functions are always available from the Maintenance Menu.

In the example shown in Figure 27, the soft key functions from the Standard Display have been changed to PRETRIP and SOT (Start of Trip marker). The GAUGES and SENSORS functions are always available from the Maintenance Menu.

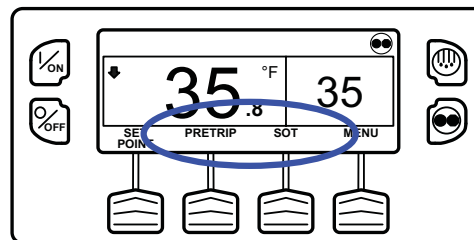


Figure 27: PRETRIP and SOT



### Display Heater

The HMI Control Panel is equipped with a display heater. This heater is needed to make the display visible in very cold ambient temperatures.

The HMI has its own internal temperature sensor for the display heater. The heater is energized when the unit is turned on and the ambient temperature is below 29.4 F (-2 C). The heater turns off when the temperature sensed by the internal sensor rises above 37.4 F (+3 C). The heater draws from 1.4 to 1.7 amps when energized.

The colder the ambient temperature the longer it will take for the heater to make the display visible on a cold startup. It may take 10-15 seconds for the display to appear with extremely cold temperatures.

### If a Language is Enabled

If more than one language has been enabled from the Guarded Access Language Menu, a prompt will appear to allow the desired language to be chosen as shown below. Only languages specifically enabled from the Guarded Access Menu are available. If a different language is desired, press the NO Key (Figure 28).

***IMPORTANT: The engine start is not delayed by the language prompt shown below. The prompt will appear for 10 seconds and then the engine will start. After the engine is started the display will return to the prompt shown.***


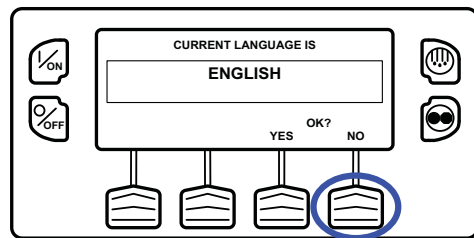


Figure 28: NO Key

The Language menu will appear as shown in Figure 29. Press the + or - Keys to select the desired language. When the desired language is shown press the YES Key to confirm the choice.

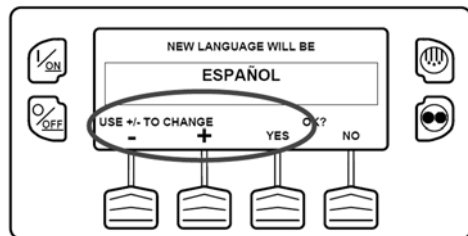


**Figure 29: + or -, then YES Key**

The display will briefly show PROGRAMMING LANGUAGE - PLEASE WAIT in the new language as shown in Figure 30.



**Figure 30: New Language**

The new language is confirmed, and then the Standard Display will appear in the new language as shown in Figure 31. The unit is ready to run.

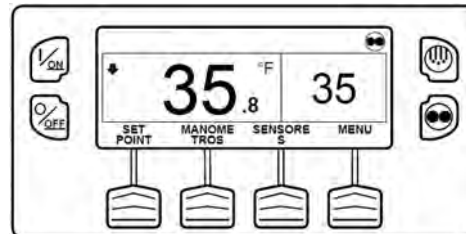

**Figure 31: Standard Display, New Language**


## If Log Alarms are Present

Log Alarms are indicated for 60 seconds each time the unit is turned on. This level of alarm serves as a notice to take corrective action before a problem becomes severe. Maintenance items such as maintenance hourmeter time-outs are log alarms. The Temperature Watch screen is not disabled if only log alarm(s) are active.

If log alarm(s) are present the Log Alarm notice shown in Figure 32 will appear on the display for 60 seconds. The remote indicator alarm light (if installed) will also be on during this period. After 60 seconds the Standard Display will appear

## Operating Instructions


and the remote indicator alarm light will go off. Pressing the EXIT soft key (Figure 32) will return to the Standard Display immediately.

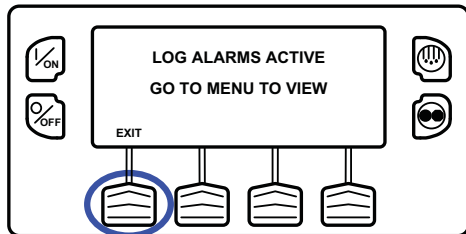

**Figure 32: Log Alarms Active**

***NOTE: The Alarm Icon does not appear on startup with log alarms present.***


When the unit is ready to run the Standard Display appears (Figure 33).

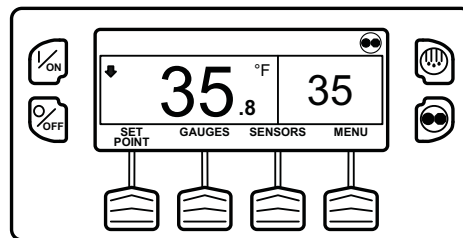

**Figure 33: Standard Display**


## Turning The Unit Off

Pressing the OFF Key stops unit operation. The unit shuts down immediately and the display briefly shows the power down message (Figure 34).

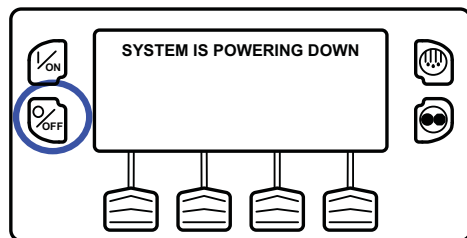

**Figure 34: Power Down Message**


The display briefly shows OFF (Figure 35) and then goes blank. To start the unit again, press the ON Key.

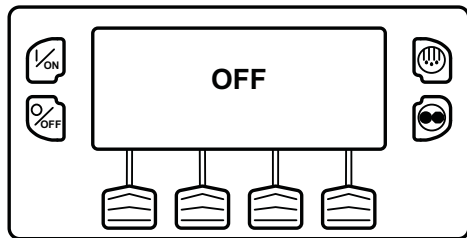

**Figure 35: Display Shows OFF**

## The Standard Display

The Standard Display is the default display that appears if no other display function is selected. The Standard Display shows the box temperature and setpoint. The box temperature is that measured by the controlling sensor, usually the return air sensor. The box temperature in Figure 36 is 35.8 F (2.1 C) with a 35 F (1.7 C) setpoint.

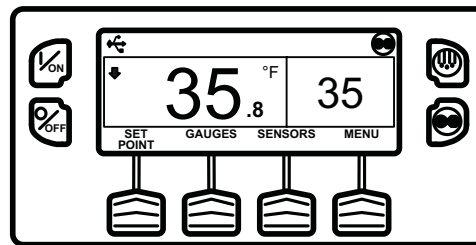


**Figure 36: Standard Display**



The down-pointing arrow at the left side of the display shows the unit is cooling. If the arrow were pointing upward the unit would be heating.



The unit is running in Cycle Sentry Mode as shown by the Cycle Sentry Icon in the upper right corner of the display. If the Cycle Sentry icon is not present, the unit would be running in Continuous Mode.



The USB Icon in the upper left corner of the display will appear when a USB Flash Drive is connected to the Flash Drive Only USB Port or a PC computer is connected to the PC Only USB Port on the Unit Control Panel.


Pressing the left soft key allows the user to change the SETPOINT, and pressing the right soft key accesses the MAIN MENU. The other two soft keys access the GAUGES menu and the SENSORS menu.

***NOTE: The functions of the GAUGES and SENSORS soft keys may be re-assigned to better suit customer requirements. The GAUGES and SENSORS functions are always available from the Maintenance Menu.***

## The TemperatureWatch Display

The TemperatureWatch Display appears 2 ½ minutes after the Standard Display appears so long as there is no key activity and no check, prevent or shutdown alarms are present. The TemperatureWatch Display will remain on until any key is pressed or a check, prevent or shutdown alarm occurs.

The TemperatureWatch Display shows the box temperature and setpoint. The large numbers allow unit conditions to be checked from a distance. The box temperature is that measured by the controlling sensor, usually the return air sensor. The box temperature in Figure 37 is 35.8 F (2.1 C) with a 35 F (1.7 C) setpoint. The Cycle Sentry icon in the upper right corner of the display shows that the unit is operating in Cycle Sentry Mode. If the Cycle Sentry icon is not present, the unit is running in Continuous Mode. The down-pointing arrow indicates that the unit is cooling. Pressing any soft key returns the display to the Standard Display.

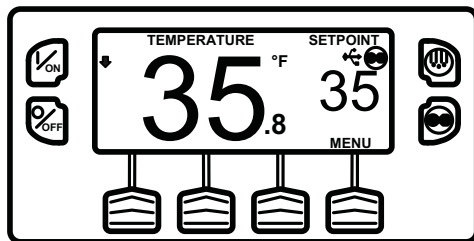

**Figure 37: TemperatureWatch Display**

If an alarm condition (other than a log alarm) is present, the TemperatureWatch Display will not appear. If an alarm condition occurs while the TemperatureWatch Display is present the display will return to the Standard Display to indicate that an alarm condition has occurred.

If the Defrost Key or Cycle Sentry Key is pressed, the display will return to the TemperatureWatch Display immediately after the defrost cycle is initiated or the operating mode is changed.


## Changing The Setpoint

The Setpoint is changed from the Standard Display. If the TemperatureWatch display is present, press any key to return to the Standard Display.

**IMPORTANT:** *If OptiSet Plus is in use there are several possible options when changing the setpoint.*

## Numerical Setpoints

If OptiSet Plus is not in use or if only Numerical Setpoints are enabled the left soft key will be labeled SETPOINT (Figure 38).

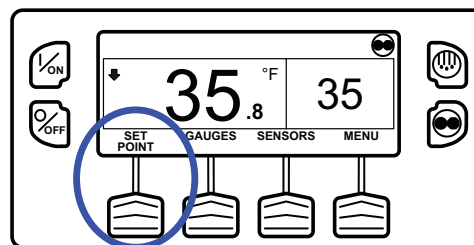

**Figure 38: Setpoint**

### Named Products - OptiSet Plus

OptiSet Plus allows the use of Named Products such as APPLES or BANANAS in place of a numerical setpoint. If only named products are enabled the left soft key will be labeled PRODUCT (Figure 39).

- A single setpoint temperature may be allowed for the specific named product.
- A numerical setpoint range may be allowed for the specific named product.

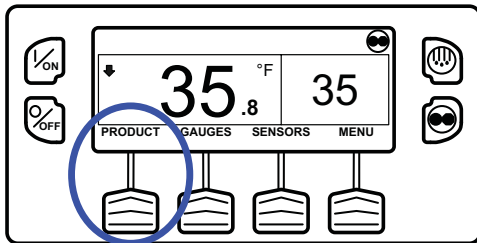


Figure 39: Left Soft Key Labeled “Product”

### Both Numerical Setpoints and Named Products

OptiSet Plus can allow the use of both Numerical Setpoints and Named Products. If both numerical setpoints and named products are enabled the left soft key will be labeled PRODUCT/SETPOINT (Figure 40).


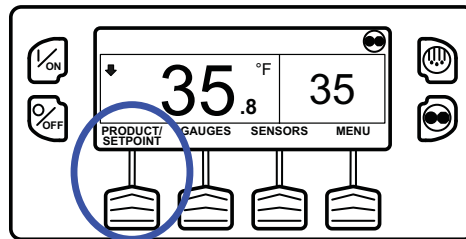


Figure 40: Left Soft Key Labeled “PRODUCT/SETPOINT”

## Changing the Setpoint - Numerical Setpoint


If the Temperature Watch display is shown, press any soft key to return to the Standard Display. From the Standard Display, press the SETPOINT Key.

The setpoint display appears (Figure 41).

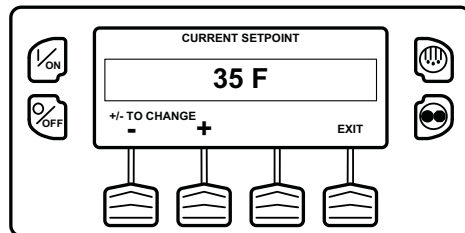

**Figure 41: Setpoint Display**

The “-” and “+” Keys are used to increase or decrease the setpoint until the desired setpoint is shown. In Figure 42 the setpoint has been changed to 40 F using the “+” Key.

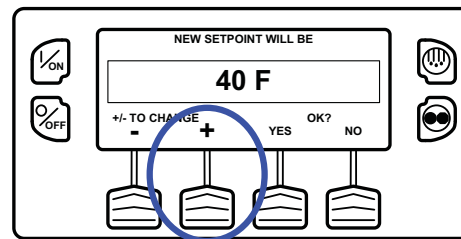


**Figure 42: Setpoint Changed Using “+” Key**

The YES and NO Keys (Figure 43) confirm the setpoint change. When the desired setpoint has been selected using the “+” and/or “-” Keys, press the YES Key to confirm and load the new setpoint. If the setpoint is changed using the “+” or “-” Keys, the change must be confirmed or rejected by pressing the YES or NO Key within 10 seconds of changing the setpoint. A warning beep will sound for 5 seconds as a reminder.

Failure to confirm the new setpoint by pressing Yes or No within 10 seconds of changing the setpoint will result in no setpoint change. In addition, Alarm Code 127 Setpoint Not Entered is set, to indicate that a setpoint change was initiated but not completed.




## Operating Instructions

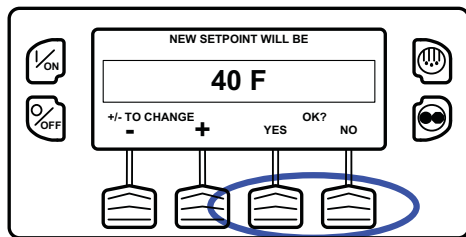

**Figure 43: Yes and No Keys**


After the YES Key has been pressed, the display briefly shows PROGRAMMING NEW SETPOINT - PLEASE WAIT. The display then confirms the new setpoint for several seconds (Figure 44):

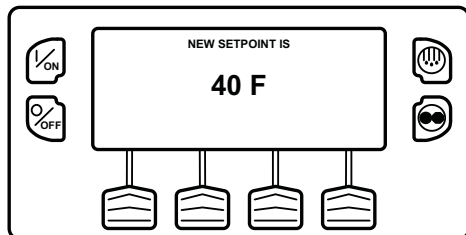

**Figure 44: New Setpoint**

If the NO Key is pressed the display will briefly show SETPOINT NOT CHANGED and return to the Standard Display. The Standard Display will show the old setpoint.

The display then returns to the Standard Display showing the new setpoint. Notice in Figure 45 that the arrow now points up to indicate that the unit is heating.

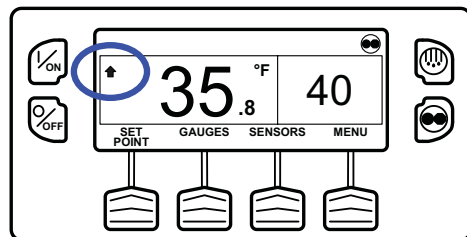

**Figure 45: Up Arrow**

**IMPORTANT:** If the setpoint is changed using the “+” or “-” Keys, the change must be confirmed or rejected by pressing the YES or NO Key within 10 seconds of changing the setpoint.

- If the YES Key is pressed, the setpoint change made with the “+” or “-” Key is accepted, the setpoint changes, and the display returns to the Standard Display.
- If the NO Key is pressed the setpoint change made with the “+” or “-” Key is not accepted, the setpoint is not changed, and the display returns to the Standard Display.
- If the YES or NO Key is not pressed within 10 seconds of making a change with the “+” or “-” Key, the setpoint is not changed and the display returns to the Standard Display. The display briefly shows [SETPOINT NOT CHANGED] and Alarm Code 127 Setpoint Not Entered is set, to indicate that a setpoint change was initiated but not completed.

See Figure 46 for an overview of the **Changing the Setpoint - Numerical Setpoint** procedure.


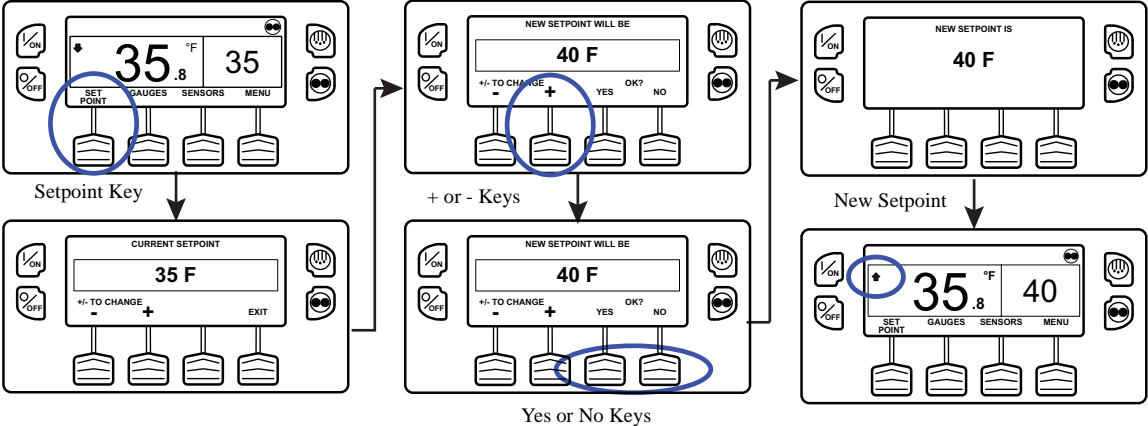


Figure 46: Changing the Setpoint - Numerical Setpoint


## Changing the Setpoint - Named Product

If the Temperature Watch display is shown, press any soft key to return to the Standard Display. From the Standard Display, press the PRODUCT Key. Note that PRODUCT is displayed in place of SETPOINT (Figure 47).

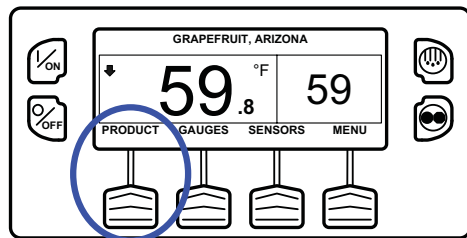


**Figure 47: Product Displayed**

The display briefly shows PRODUCT and then the setpoint display appears (Figure 48).

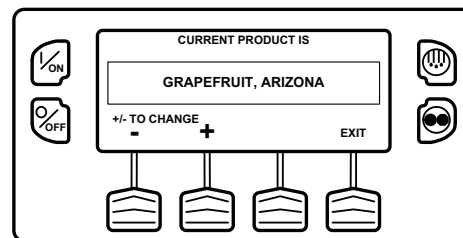

**Figure 48: Setpoint Display**

The “-” and “+” Keys are used to change the Named Product until the desired product is shown. In Figure 49 the product has been changed to Potato, Late Crop.

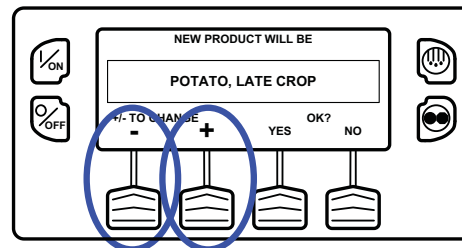


**Figure 49: Named Product**

## Operating Instructions


The YES and NO Keys confirm the product change (Figure 50). When the desired product has been selected using the “+” and/or “-” Keys, press the YES Key to confirm and load the new product. If the product is changed using the “+” or “-” Keys, the change must be confirmed or rejected by pressing the YES or NO Key within 10 seconds of changing the product. A warning beep will sound for 5 seconds as a reminder.

Failure to confirm the new product by pressing Yes or No within 10 seconds of changing the product will result in no product change. In addition, Alarm Code 127 Setpoint Not Entered is set, to indicate that the product change was initiated but not completed.

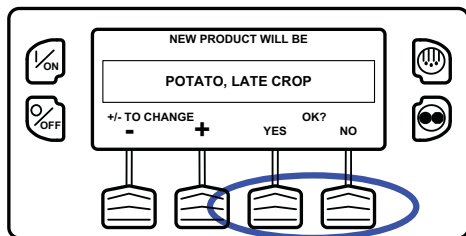

**Figure 50: Yes and No Keys**


After the YES Key has been pressed, the display briefly shows **PROGRAMMING NAMED PRODUCT - PLEASE WAIT**. The display then confirms the new setpoint for several seconds.

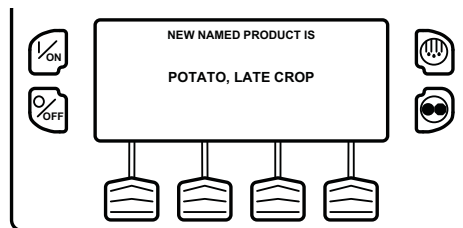

**Figure 51: New Named Product**

If the NO Key is pressed the display will briefly show **SETPOINT NOT CHANGED** and return to the Standard Display. The Standard Display will show the old setpoint.

The display then returns to the Standard Display showing the new named product. Notice that the arrow points down, to indicate that the unit is cooling (Figure 52).

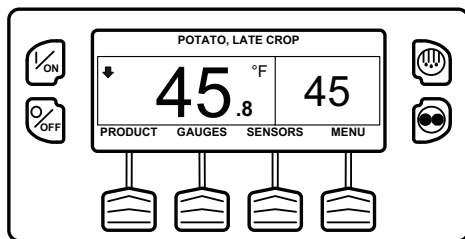

**Figure 52: Standard Display**

**IMPORTANT:** *If the named product is changed using the “+” or “-” Keys, the change must be confirmed or rejected by pressing the YES or NO Key within 10 seconds of changing the named product.*

- If the YES Key is pressed, the product change made with the “+” or “-” Key is accepted, the product changes, and the display returns to the Standard Display.
- If the NO Key is pressed the product change made with the “+” or “-” Key is not accepted, the product is not changed, and the display returns to the Standard Display.

- If the YES or NO Key is not pressed within 10 seconds of making a change with the “+” or “-” Key, the product is not changed and the display returns to the Standard Display. The display briefly shows [SETPOINT NOT CHANGED] and Alarm Code 127 Setpoint Not Entered is set, to indicate that the product change was initiated but not completed.

See Figure 53 for an overview of the **Changing the Setpoint - Named Product** procedure.


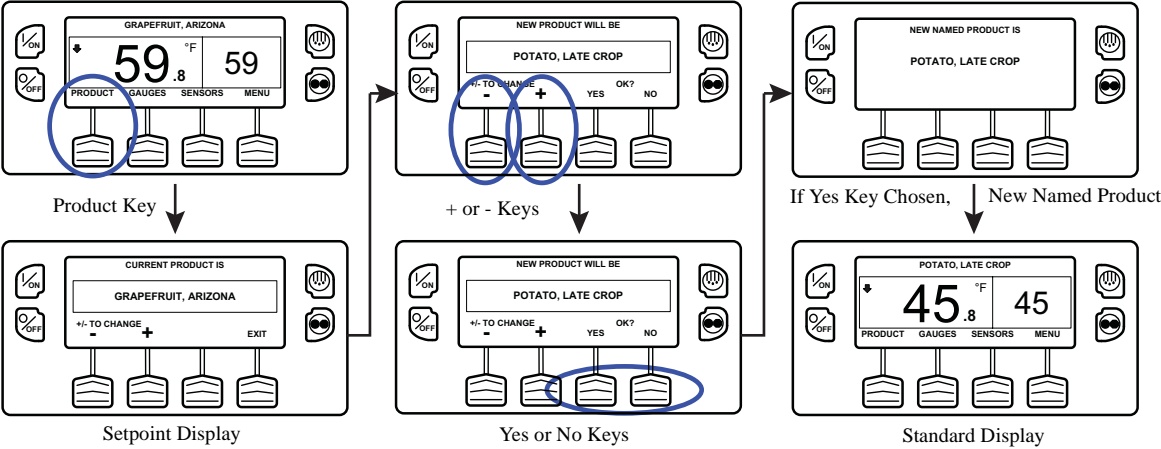


Figure 53: Changing the Setpoint, Named Product


## Changing the Setpoint - Both Numerical Setpoint and Named Product Available

If the Temperature Watch display is shown, press any soft key to return to the Standard Display. From the Standard Display, press the SETPOINT Key. Note that both PRODUCT and SETPOINT are displayed as shown (Figure 54).

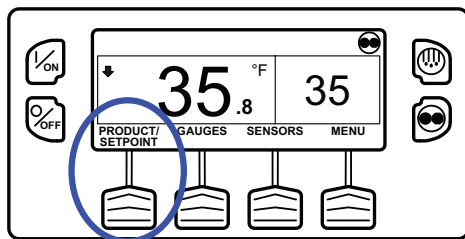

**Figure 54: PRODUCT and SETPOINT are displayed**

The NAMED PRODUCT / NUMERIC SETPOINT prompt will appear as shown (Figure 55).

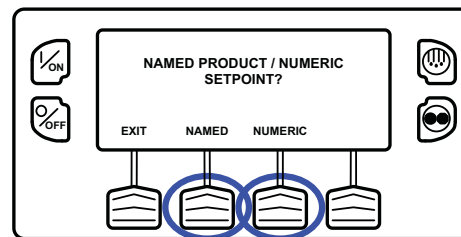

**Figure 55: NAMED PRODUCT / NUMERIC SETPOINT Prompt**

- Press the NUMERIC Soft Key to proceed with Changing the Setpoint - Numeric Setpoint change as previously shown.
- Press the NAMED Soft Key to proceed with Changing the Setpoint - Named Product change as shown previously.
- Press the EXIT Soft Key to return to the Standard Display.



# Starting the Diesel Engine


Diesel engine preheats and starts are automatic in both Continuous Mode and Cycle Sentry Mode. The engine will preheat and start as required when the unit is turned on. The engine preheat and start will be delayed in Cycle Sentry Mode if there is no current need for the engine to run. If any keys are being pressed on the HMI Control Panel the engine will not preheat and start until 10 seconds after the last key is pressed.

**NOTE:** *If the unit is equipped with optional Electric Standby there may be some additional prompts before the engine will start. See STARTING THE ELECTRIC MOTOR on the following pages for details.*

**CAUTION:** *The engine may start automatically any time the unit is turned on.*

**WARNING:** *Never use starting fluid.*

When the engine is preparing to start the HMI Control Panel will display the engine start screen (Figure 56). The preheat buzzer sounds during the engine preheat and crank sequence.

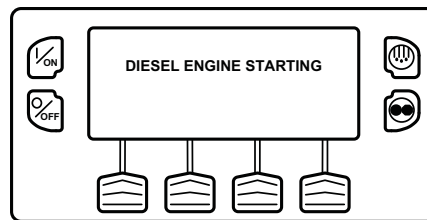

**Figure 56: Engine Start Screen**

After the engine is started the display returns to the Standard Display of temperature and setpoint.


## Starting the Electric Motor

Units equipped with the SmartPower option only.

**Electric Power Receptacle:** The electric power receptacle is used to connect the unit to an appropriate electric power source for electric standby operation (Figure 57). The electric power receptacle is usually mounted on the trailer below the HMI Control Panel. Make sure the unit and the power supply are turned off before connecting or disconnecting a power cord.


Electric motor starting is automatic in both Continuous Mode and Cycle Sentry Mode. The motor will start as required when the unit is turned on. If any keys are being pressed on the HMI Control Panel prior to the motor start, the motor start will be delayed until 10 seconds after the last key is pressed.

**CAUTION:** *The motor may start automatically any time the unit is turned on.*

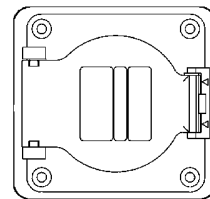

**Figure 57: Electric Power Receptacle**

When the motor is preparing to start the HMI Control Panel will display the motor start screen (Figure 58). The preheat buzzer sounds for 20 seconds before the electric motor starts.

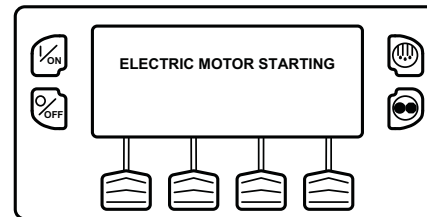


**Figure 58: Motor Start Screen**

# Switching from Diesel to Electric

Units equipped with the SmartPower option only.


If the Diesel to Electric Auto-Switch Enabled feature in Guarded Access is set YES then the unit will automatically switch to Electric Mode operation when standby power is connected and available.

If the Diesel to Electric Auto-Switch Enabled feature in Guarded Access is set NO then the prompt screen (Figure 59) will appear when standby power is connected and available.

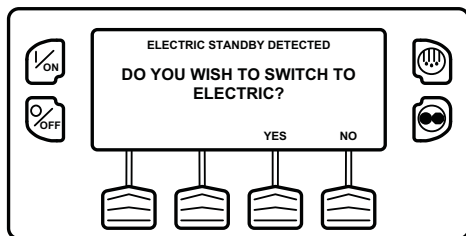

**Figure 59: Standby Power Connected**

If NO is selected, then the unit will continue to operate in Diesel Mode. If YES is selected then the display will briefly show the screen in Figure 60.

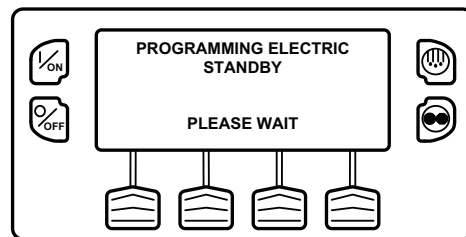

**Figure 60: YES Selected**

Electric Mode operation will briefly be confirmed. If unit operation is required the electric motor will start as shown previously under STARTING THE ELECTRIC MOTOR.


If the Diesel to Electric Auto-Switch Enabled feature in Guarded Access is set NO then the unit can also be switched from Diesel Mode to Electric Mode operation using the Electric Standby Selection from the Main Menu as shown later in this section.

## Switching from Electric to Diesel

### Units equipped with the SMARTPOWER option only.


If the Electric to Diesel Auto-Switch Enabled feature in Guarded Access is set YES then the unit will automatically switch to Diesel Mode operation when standby power is turned off or is no longer available.

If the Electric to Diesel Auto-Switch Enabled feature in Guarded Access is set NO and standby power is disconnected or fails, the unit will not automatically switch to Diesel Mode. This is primarily designed to prevent unauthorized diesel engine starts when the truck is indoors or on a ferry where engine operation is strictly prohibited. If the Electric to Diesel Auto-Switch Enabled feature in Guarded Access is set NO then the prompt screen (Figure 61) will appear when standby power is turned off or is no longer available.

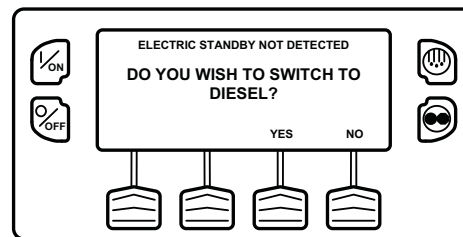

**Figure 61: Standby Power is Off**

If YES is selected then the display will briefly show the screen in Figure 62.

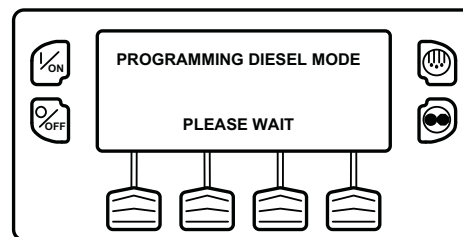

**Figure 62: Yes Selected**

## Operating Instructions

Diesel Mode operation will briefly be confirmed. If unit operation is required the diesel engine will start as shown previously under STARTING THE DIESEL ENGINE.

If the Electric to Diesel Auto-Switch Enabled feature in Guarded Access is set NO then the unit can also be switched from Diesel Mode to Electric Mode operation using the Diesel Selection from the Main Menu as shown later in this section.

## Initiating a Manual Defrost Cycle

Defrost cycles are usually initiated automatically based on time or demand. Manual defrost is also available

Manual defrost is available if the unit is running and the evaporator coil temperature is less than or equal to 45 F (7 C).

**NOTE: If the Rail Alternate feature is set YES defrost is allowed with an evaporator coil temperature less than or equal to 55 F (13 C).**

Other features such as door switch settings may not allow manual defrost under some conditions. To initiate a manual defrost cycle, press the Defrost Key (Figure 63).

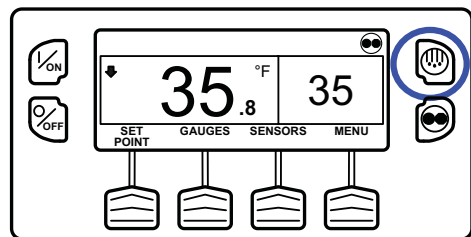


Figure 63: Press Defrost Key

The display briefly shows [DEFROST], [PROGRAMMING DEFROST - PLEASE WAIT] and then [DEFROST STARTED] (Figure 64).


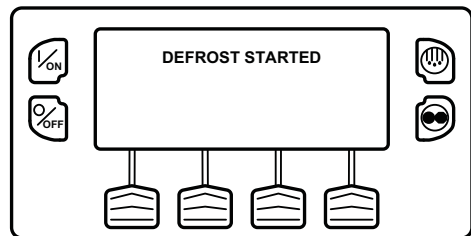



Figure 64: Defrost Started

The display then shows the Defrost display. The bar indicator shows approximately how much time remains to complete the defrost cycle. The bar indicator shows that the defrost cycle is about 25% complete (Figure 65).

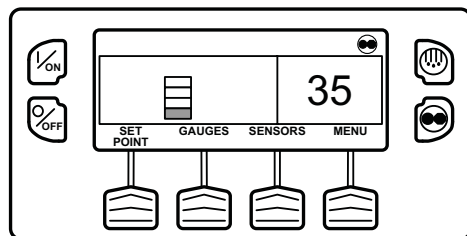


**Figure 65: Bar Indicator**

If conditions do not allow a defrost cycle, the display shown in Figure 66 will briefly appear. The display will then return to the Standard Display.

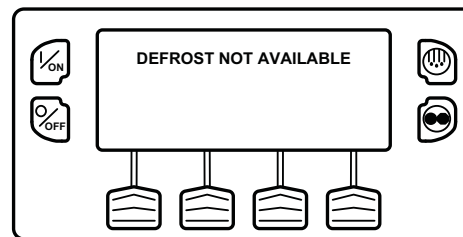

**Figure 66: Defrost Not Available**

See Figure 67 for an overview of the **Initiating a Manual Defrost Cycle** procedure.

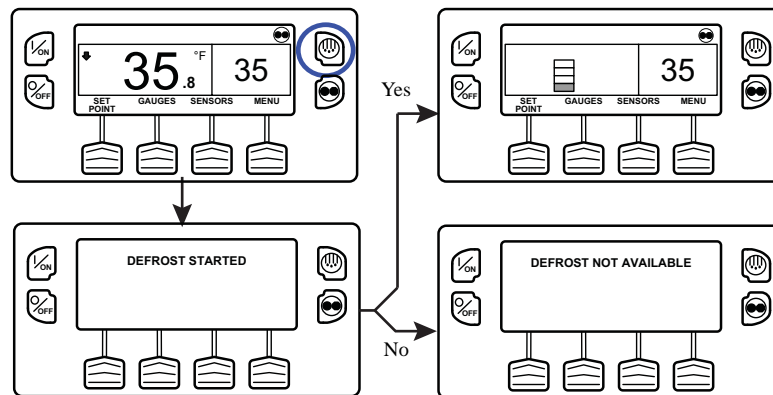

**Figure 67: Initiating a Manual Defrost Cycle**

## Terminating a Defrost Cycle

The defrost cycle terminates automatically when the coil temperature is greater than or equal to 58 F (14 C) or the defrost timer expires. Defrost can also be terminated by turning the unit off and back on.

**NOTE:** *If Rail Alternate is set YES the defrost cycle terminates at 70 F (21 C) or if the defrost timer expires.*


## Selecting Cycle Sentry or Continuous Mode

When Cycle Sentry Mode is selected the unit will start and stop automatically to maintain setpoint, keep the engine warm and the battery charged. When Continuous Mode is selected, the unit starts automatically and runs continuously to maintain setpoint and provide constant airflow.

**IMPORTANT:** *Cycle Sentry or Continuous Mode may not be selectable if OptiSet Plus is in use.*

See Figure 73 for an overview of the **Selecting Cycle Sentry or Continuous Mode** procedure.

If the unit is operating in Cycle Sentry Mode, the Cycle Sentry Icon will be present in the upper right corner of the display as shown below. If the Cycle Sentry Icon (Figure 68) is not present the unit is operating in Continuous Mode.

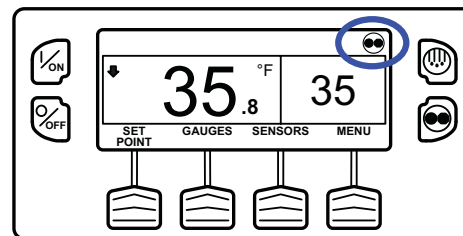


**Figure 68: Cycle Sentry Icon**

If allowed by OptiSet Plus, Cycle Sentry Mode or Continuous Mode is selected by pressing the Cycle Sentry/Continuous Key as shown in Figure 69.




## Operating Instructions

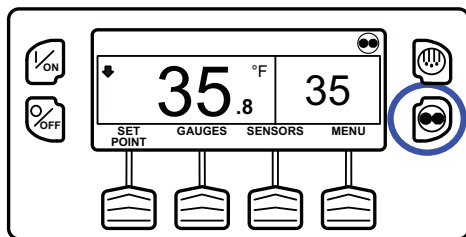

**Figure 69: Cycle Sentry/Continuous Key**


***NOTE: Cycle Sentry Mode or Continuous Mode can also be selected using the Main Menu > Mode Submenu.***

If the unit is in Cycle Sentry Mode, pressing the Cycle Sentry/Continuous Key changes the mode from Cycle Sentry Mode to Continuous Mode. The display confirms the change, as shown in Figure 70.

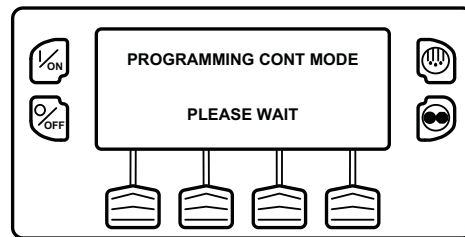


**Figure 70: Continuous Mode**

The new mode is confirmed for 3 seconds (Figure 71).

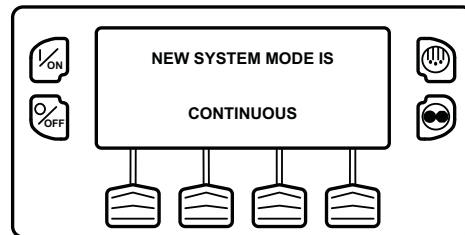

**Figure 71: New Mode Confirmed**

The display then returns to the Standard Display. In the example shown in Figure 72 the absence of the Cycle Sentry Icon indicates that the unit is running in Continuous Mode.

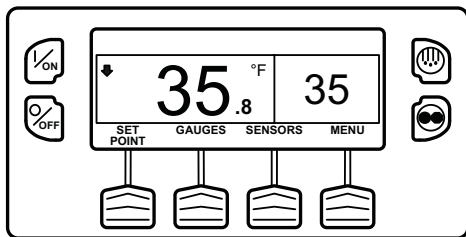


**Figure 72: Cycle Sentry Icon Not Shown = Continuous Mode**

Pressing the Cycle Sentry/Continuous Key again allows the operator to change back to Cycle Sentry Mode operation.

**IMPORTANT:** *If the unit is in Cycle Sentry Null and the mode is switched to Continuous Mode, the unit will start automatically.*

**IMPORTANT:** *Cycle Sentry or Continuous Mode may not be selectable if OptiSet Plus is in use.*

## Operating Instructions

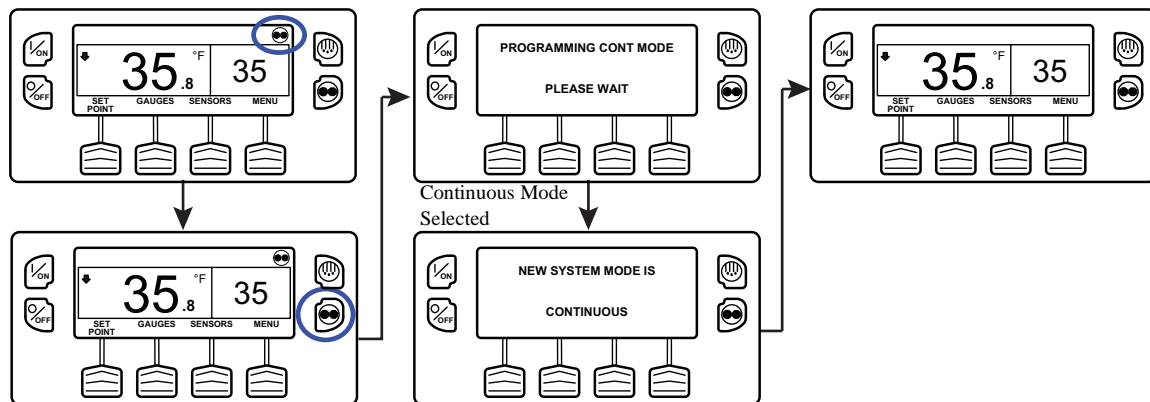

**Figure 73: Selecting Cycle Sentry or Continuous Mode**

## Using the Gauges Key

The GAUGES Key allows the operator to view the unit gauges. If the function of this key has been reassigned, the GAUGES Menu is also available in the Maintenance Menu.

To access the GAUGES Menu, press the GAUGES Key (Figure 74).

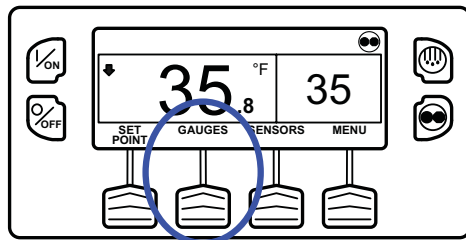


Figure 74: Gauges Key

The first gauge display will appear. Press the NEXT and BACK Keys to scroll through the gauges. Pressing the LOCK Key will lock the current gauge on the display (Figure 75).

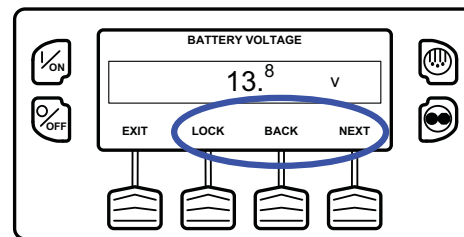


Figure 75: Gauge Display Locked

The gauges and I/O conditions available are shown on the next page. Not all gauges or I/O conditions may appear depending on unit configuration and software revision.

To return to the Standard Display press the EXIT Key.

## Gauges Available

**Coolant Temperature:** Displays the temperature of the engine coolant.

**Coolant Level:** Displays the coolant level in the overflow tank.

**Engine Oil Pressure:** Displays the engine oil pressure as OK or LOW.

## Operating Instructions

**Engine Oil Level Switch:** Displays the engine oil level as OK or LOW.

**Amps:** Displays the current flow in amps flowing to or from the unit battery.

**Battery Voltage:** Displays the voltage of the unit battery.

**Accessory Battery Voltage:** Displays the voltage at the alternator.

**Engine RPM:** Displays the engine speed in RPMs.

**Fuel Level Sensor:** Displays the fuel level if a fuel level sensor is installed.

**Discharge Pressure:** Displays the unit discharge pressure. (ETV units only)

**Suction Pressure:** Displays the unit suction pressure. (ETV units only)

**ETV Position:** Displays the current position of the ETV valve. (ETV equipped units only)

**Fresh Air Exchange:** Displays the current position of the optional Fresh Air Exchange Door.

**I/O (Input/Output State):** Displays the current state of the input/output devices listed here:


- |                                  |   |
|----------------------------------|---|
| • High Speed Relay/Electric Heat | • Spare Output 1                                |
| • Run Relay                      | • Spare Output 2                                |
| • Run Relay Feedback             | • Spare Output 3                                |
| • Alternator Excite Output       | • Spare Output 4                                |
| • Defrost Damper                 | • Spare Output 5                                |
| • Heat Output                    | • Fresh Air Exchange Output                     |
| • Motor RPM                      | • Fresh Air Exchange Feedback                   |
| • Spare Digital Input 1          | • Diesel/Electric Relay (SmartPower units only) |
| • Spare Digital Input 2          | • Electric Ready Input (SmartPower units only)  |

- Spare Digital Input 3
- Electric overload (SmartPower units only)
- Spare Digital Input 4
- Hot Gas Bypass (ETV units only)
- Spare Analog Input 1
- Spare Analog Input 2

## Using The Sensors Key


The SENSORS Key allows the operator to view the unit gauges. If the function of this key has been reassigned, the SENSORS Menu is also available in the Maintenance Menu.

To access the SENSORS Menu, press the SENSORS Key:

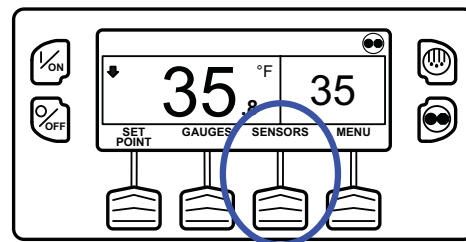

**Figure 76: Sensors Key**

The first sensor display will appear. Press the NEXT and BACK Keys to scroll through the sensors. Pressing the LOCK Key will lock the current sensor on the display. (Figure 77)

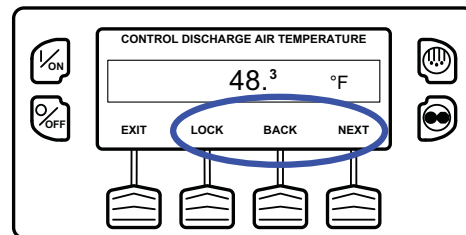

**Figure 77: Next, Back, Lock Keys**

## Operating Instructions

The sensors available are shown below.

To return to the Standard Display press the EXIT Key.

### Sensors Available

**Control Return Air Temperature:** Displays the temperature of the control return air sensor.

**Display Return Air Temperature:** Displays the temperature of the display return air sensor.

**Control Discharge Air Temperature:** Displays the temperature of the control discharge air sensor.

**Display Discharge Air Temperature:** Displays the temperature of the display discharge air sensor.

**Temperature Differential:** Displays the calculated difference between the control return air sensor and the control discharge air sensor.

**Evaporator Coil Temperature:** Displays the temperature of the evaporator coil sensor.

**Ambient Air Temperature:** Displays the temperature of the ambient air sensor.

\* **Spare 1 Temperature:** Displays the temperature of the spare 1 temperature sensor.

\* **Log Sensor 1:** Displays the temperature of the CargoWatch Data Logger temperature sensor 1.

\* **Log Sensor 2:** Displays the temperature of the CargoWatch Data Logger temperature sensor 2.

\* **Log Sensor 3:** Displays the temperature of the CargoWatch Data Logger temperature sensor 3.

\* **Log Sensor 4:** Displays the temperature of the CargoWatch Data Logger temperature sensor 4.

\* **Log Sensor 5:** Displays the temperature of the CargoWatch Data Logger temperature sensor 5.


\* **Log Sensor 6:** Displays the temperature of the CargoWatch Data Logger temperature sensor 6.

**Board Temperature Sensor:** Displays the internal temperature of the HMI Control Panel pc board.

\* If sensors have been added.

## Using the Main Menu


The Main Menu contains several additional submenus that allow the operator to view information and modify unit operation. To access the Main Menu press the MENU Key (Figure 78).

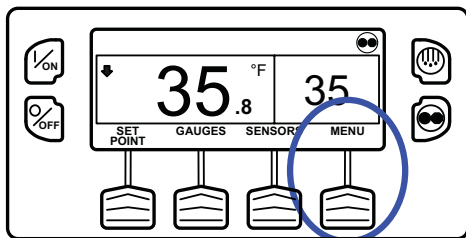

**Figure 78: Menu Key**

The first Main Menu choice will appear. Press and hold the UP and DOWN Keys to scroll through the menu choices. When the desired selection is shown on the display, press the SELECT Key to access it. The Pretrip submenu is displayed (Figure 79).

To return to the Standard Display press the EXIT Key.

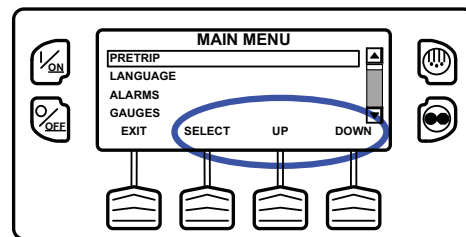

**Figure 79: Pretrip Submenu**

### Main Menu Choices

Each of these Main Menu choices will be explained in following pages of this chapter:

**Pretrip:** A Pretrip Test verifies unit operation.

**Flash Drive:** If a properly configured USB Flash Drive is currently connected to the USB Port on the unit Control Panel, the Flash Drive Menu will appear as a Main Menu selection.

**Languages (If Enabled):** If more than one language is enabled from the Guarded Access > Language Menu, this menu item will appear.



## Operating Instructions

**Alarms:** The Alarm Menu allows the operator to view any active alarms, and allows most alarms to be cleared.

**Gauges:** The Gauges Menu allows the operator to view the unit gauges and I/O conditions.

**Sensors:** The Sensors Menu allows the operator to view the unit and CargoWatch Data Logger temperature sensors.

**Data Logger (CargoWatch):** The CargoWatch Data Logger is physically located in the HMI Control Panel. It can support up to 6 optional temperature sensors.

**Hourmeters:** The Hourmeters Menu allows the operator to view the unit hourmeters that have the view feature enabled in the Guarded Access menu.

**Mode:** The Mode Menu allows the operator to change the unit operating modes that have been enabled in Guarded Access.

**Keypad Lockout:** If enabled in Guarded Access > Main Menu Configuration, the keypad can be locked to prevent unauthorized use.

**Start Sleep Mode:** If this feature enabled in Guarded Access > Main Menu Configuration, the operator can select and set Sleep Mode from the Mode Menu.

**SmartPower™ Electric Standby Option:** The Diesel/Electric Standby selection from the Main Menu allows the operator to manually select Diesel or Electric Mode operation on units equipped with the electric standby SmartPower option.

**Adjust Brightness:** The brightness of the HMI Control Panel display can be adjusted to allow for changing ambient light conditions.

**Time:** The Time and Date held by the HMI Control Panel can be checked. Time and Date cannot be changed from the Main Menu.

**Clear All ECU Faults:** Pressing this key will clear all existing Engine Control Unit (ECU) Fault Codes.

## Pretrip

Pretrip Test verifies unit operation. This display allows a Pretrip Test to be selected and initiated by the operator. If the Pretrip Test is entered with the unit shut down a Full Pretrip Test with device amp checks will be performed. If the Pretrip Test is entered with the unit running in either Diesel or Electric

Mode a Running Pretrip Test is performed. Test results are reported as PASS, CHECK or FAIL when the Pretrip Test is completed.

### Pretrip Test Conditions

- Current unit settings are saved and restored at the end of the Pretrip Test or if the unit is turned off and back on.
- Pretrip Test can be run in either Diesel or Electric Mode.
- The unit will auto switch from Diesel Mode to Electric Mode or from Electric Mode to Diesel Mode during a Pretrip Test if these features are enabled and the auto switch conditions occur.

### Conditions where Pretrip Tests are not allowed

- If any shutdown alarms are present. Pretrip tests are allowed with some Check and Log alarms.
- If the unit is in Sleep Mode.
- If the unit is in Service Test Mode, Output Test Mode or Evacuation Mode.

### Pretrip Test Sequence

Pretrip tests proceed in the order shown below. A Full Pretrip Test includes all tests. A Running Pretrip Test is started with the engine or motor running and does not include the Amp Checks or Engine Start Check.

**Amp Checks** - Each electrical control component is energized and the current drawn is confirmed as within specification.

**Engine Start** - The Engine will start automatically.

**Defrost** - If the coil temperature is below 45 F (7 C), a defrost cycle is initiated.

**RPM Check** - The engine RPM in high and low speed is checked during the Cool Check.

**Cool Check** - The ability of the unit to cool in low speed is checked.

**Heat Check** - The ability of the unit to heat in low speed is checked.

**Report Test Results** - The test results are reported as PASS, CHECK or FAIL when the Pretrip Test is completed. If test results are CHECK or FAIL alarm codes will exist to direct the technician to the source of the problem.

## Operating Instructions

### Pretrip Test Considerations

When performing a Pretrip Test, the following issues should be considered.


- If running a Pretrip Test on a trailer loaded with dry cargo, insure that proper airflow can occur around the load. If the load restricts airflow, false test results may occur. Also, Precedent units have high refrigeration capacity which results in rapid temperature changes. Sensitive dry cargo may be damaged as a result.
- If running a Pretrip Test on a trailer that has just been washed down, the extremely high humidity inside the trailer may result in false test results.
- If running a Pretrip Test on a trailer loaded with sensitive cargo, monitor the load temperature during the test as normal temperature control is suspended during pre-trip operation.
- Always perform Pretrip Tests with the trailer cargo doors closed to prevent false test failures.

### Performing a Pretrip Test

If a Pretrip Test is initiated with the engine shut down a Full Pretrip Test will be performed. If a Pretrip Test is initiated with the engine or motor running a Running Pretrip Test is performed.


- Before initiating a Pretrip Test, clear all alarm codes.
- To stop a Pretrip Test at any time turn the unit off.

Pretrip Tests are initiated using the Pretrip Menu. From the Standard Display, press the MENU Key (Figure 80).

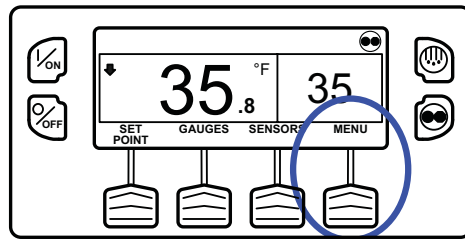


**Figure 80: Menu Key**

The Main Menu will appear. Press the UP or DOWN Key as required to choose the Pretrip Menu. When the Pretrip Menu is shown press the SELECT Key to start a Pretrip Test (Figure 81).

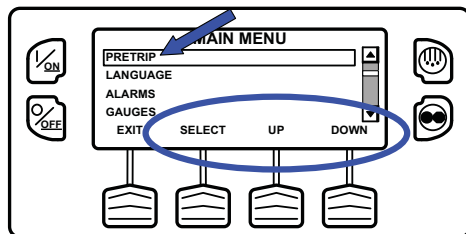


**Figure 81: Select Key**

The display will briefly show PROGRAMMING PRETRIP MODE (Figure 82). If the unit is not running a Full Pretrip Test will be initiated. If the unit is running in either Diesel or Electric Mode a Running Pretrip Test will be performed.

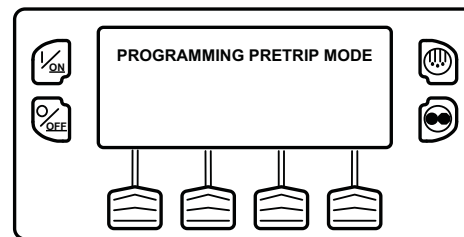

**Figure 82: Programming Trip Mode**


If all alarms were not cleared a prompt appears (Figure 83). Exit the Pretrip Test, clear all alarms and repeat the Pretrip Test.

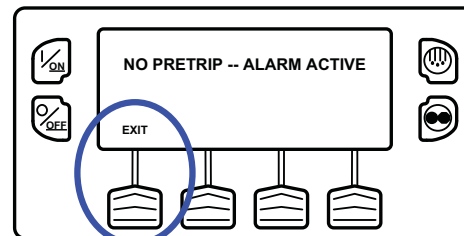

**Figure 83: Alarms Not Cleared**

## Operating Instructions

If all alarms were cleared, the Pretrip Test display appears (Figure 84).

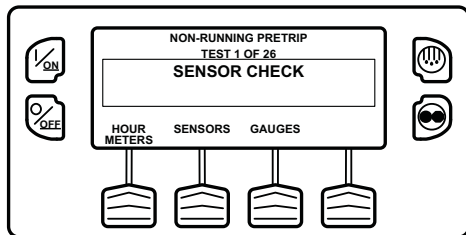


**Figure 84: Pretrip Test**

- The top line of the display indicates the unit is performing the non-running portion of the Pretrip Test.
- The second line measures test progress. The number of tests completed of the total number of tests to be performed is shown. In the example above the unit is performing Test 1 of 26, Sensor Check.
- The soft keys may be used during the Pretrip Test to select the Hourmeter, Gauge or Sensor menus.


- To stop a Pretrip Test at any time turn the unit off. This will generate Alarm Code 28 Pretrip Abort. Other alarm codes may also be generated. This is normal when the Pretrip Test is halted before completion.

When the non-running tests are complete the unit will start automatically and continue with the Running Pretrip Test. In the example shown in Figure 85 the unit is in the Running Pretrip and is performing Test 21 of 26, Cool Test.

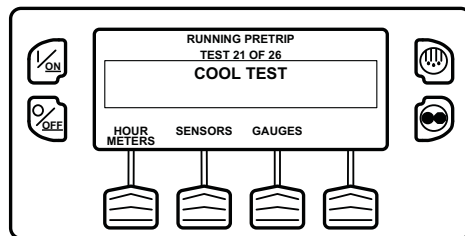

**Figure 85: Cool Test**

When all tests are complete, the results are reported as PASS, CHECK or FAIL (Figure 86). If the results are CHECK or FAIL, the accompanying alarm codes will direct the technician to the cause of the problem.

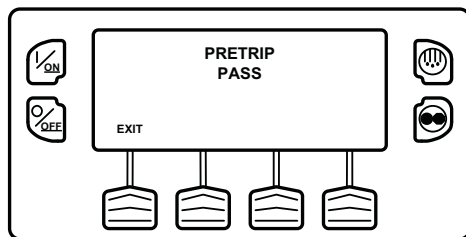

**Figure 86: Pretrip Pass**

If the Pretrip Test results are CHECK or FAIL the problem should be diagnosed and corrected by a Thermo King service technician before the unit is released for service.

To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.

See Figure 87 for an overview of the **Performing a Pretrip Test** procedure.

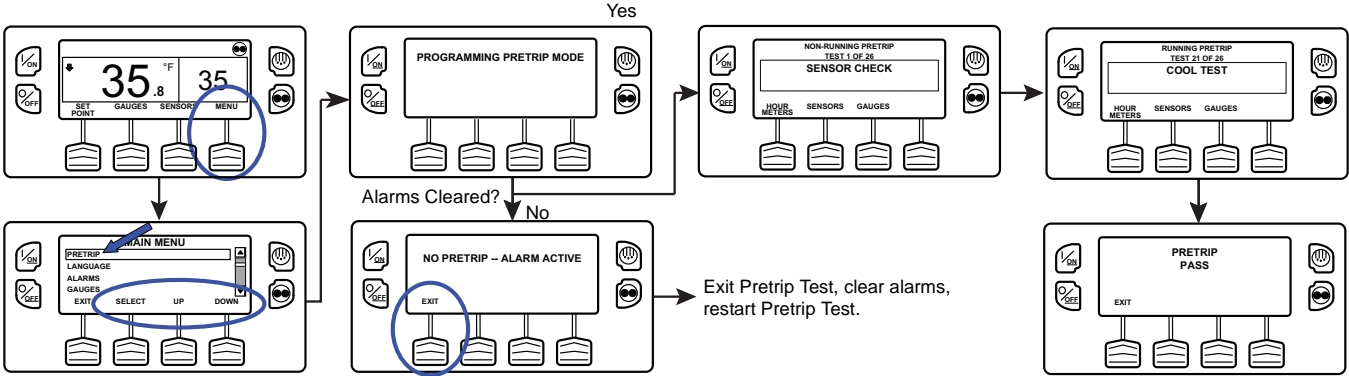


Figure 87: Performing a Pretrip Test

## Flash Drive

If a properly configured USB Flash Drive is currently connected to the USB Port on the unit Control Panel, the Flash Drive Menu will appear as a Main Menu selection. If a properly configured USB Flash Drive is connected to the USB Flash Drive connector, this feature allows the operator to select the desired Flash Drive function. If enabled when the Flash Drive was configured, the following functions may be available:

### Download

- Download the ServiceWatch Data Logger
- Download the CargoWatch Data Logger

### Flashload


- Flash load Base Controller Software
- Flash load HMI Control Panel Software

### OptiSet Plus

- SEND
  - Send OptiSet Plus files
- RETRIEVE
  - Retrieve OptiSet Plus files


If a USB Flash Drive is not connected to the unit, this feature will not appear in the Main Menu.

## Flash Drive Icon



•“The USB Icon (Figure 88) will appear in the upper left corner of the display as shown below when a USB Flash Drive is inserted in the USB Flash Drive USB Port on the Unit Control Panel.

•“The USB Icon will also appear if a computer is connected to the USB PC Computer USB Port on the Unit Control Panel.

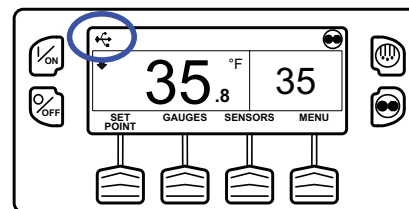


**Figure 88: Flash Drive Icon**




### Selecting the Flash Drive Menu from the Main Menu (If Already Connected)

To select the Flash Drive Menu, press the MENU Key (Figure 89). The Main Menu will appear.

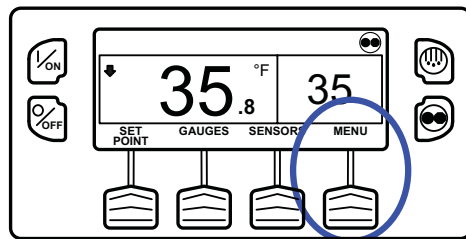

**Figure 89: Menu Key**



If a properly configured USB Flash Drive is connected to the Flash Drive Only USB Port on the Control Panel, the Flash Drive Menu will appear as a main Menu selection. Press the UP or DOWN Key as required to choose the Flash Drive Menu. When the Flash Drive Menu is shown press the SELECT Key to select the Flash Drive menu. (Figure 90).

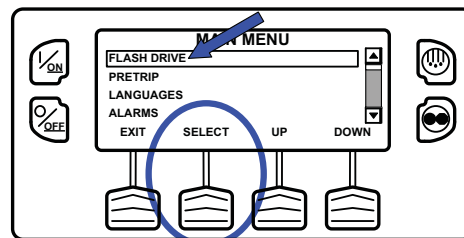

**Figure 90: Flash Drive Menu**

### Flash Drive (If Connected While the Unit is Turned On)


If a properly configured USB Flash Drive is connected to the USB Port on the unit Control Panel while the unit is turned on, a Flash Drive indication will appear for several seconds. Then the Flash Drive Menu will be shown (Figure 91).

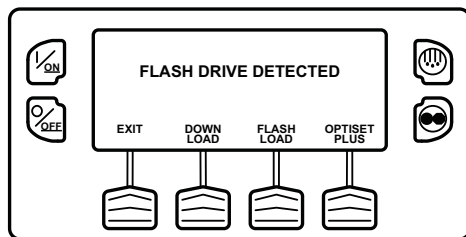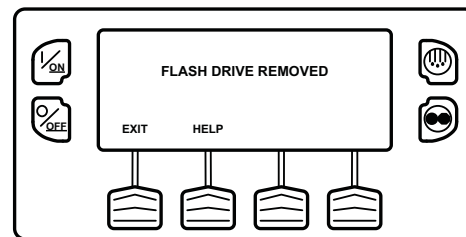**Figure 91: Flash Drive****Figure 92: Flash Drive Removed**

## Removing the Flash Drive

If the Flash Drive is disconnected, the display shown in Figure 92 will appear for 30 seconds and the display will return to the Standard Display. To return to the Standard Display immediately press the EXIT Soft Key.

If the HELP Soft Key is pressed the display shown in Figure 93 will appear.

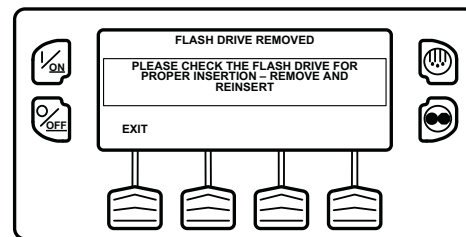**Figure 93: Help Soft Key Pressed**

### Languages (If Enabled)

If more than one language is enabled from the Guarded Access > Language Menu, this menu item will appear. If only one language is enabled, this menu will not appear. The Language Menu allows the operator to select a language from of enabled languages. All subsequent displays are shown in the selected language. English is the default language. See the Guarded Access Language Setup Menu in the Diagnostic Manual for technical details.

If Languages are not enabled from the Guarded Access Menu, this feature will not appear in the Main Menu.

**IMPORTANT:** *Exercise care when changing languages, as once changed all HMI Control Panel displays will be in the new language.*


### Available Languages

The following languages are available:

- English
- French
- Spanish


### Selecting an Alternate Language

To select an alternate language, press the MENU Key (Figure 94).

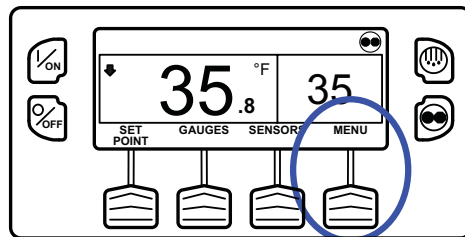


**Figure 94: Menu Key**

The Main Menu will appear. If more than one language is enabled, the Language Menu will appear as a main Menu selection (Figure 95). Press the UP or DOWN Key as required to choose the Language Menu. When the Language Menu is shown press the SELECT Key to select the Language menu.

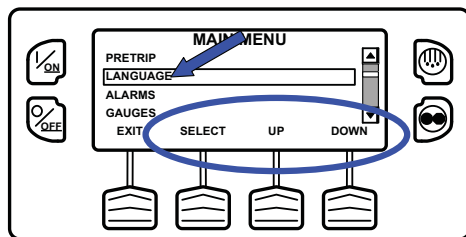


**Figure 95: Main Menu**

The Language menu will appear as shown in Figure 96. Press the + or - Keys to select the desired language. Only languages enabled from the Guarded Access Menu are available. When the desired language is shown (example is Español [Spanish]) press the YES Key to confirm the choice.

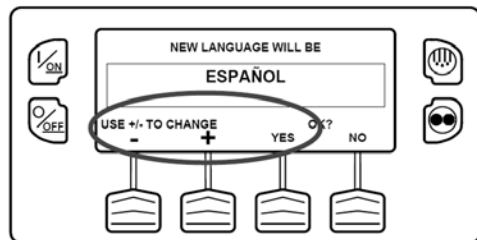

**Figure 96: Language Menu**

The display will briefly show PROGRAMMING LANGUAGE - PLEASE WAIT in the new language. The display will then return to the Language Menu, but will show the new language. Español (Spanish) is shown in Figure 97.

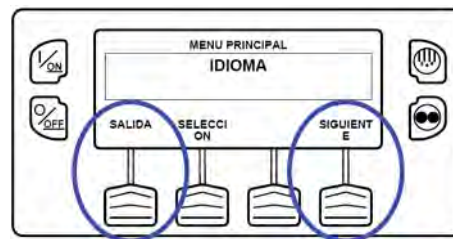


**Figure 97: New Language (Example: Español)**

Repeat the process to select a different language. To select a different Main Menu item press the NEXT (SIGUIENTE) Key. To return to the Standard Display press the EXIT (SALIDA) Key.

All displays will now be in the new language. Español (Spanish) is shown in Figure 98.


## Operating Instructions

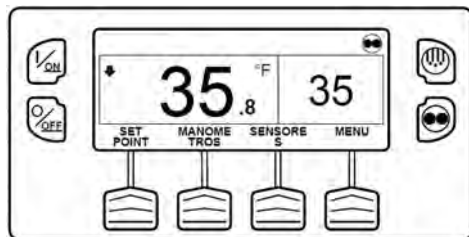

**Figure 98: New Language (Example: Español)**

To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.

See Figure 99 for an overview of the **Languages** selection procedure.

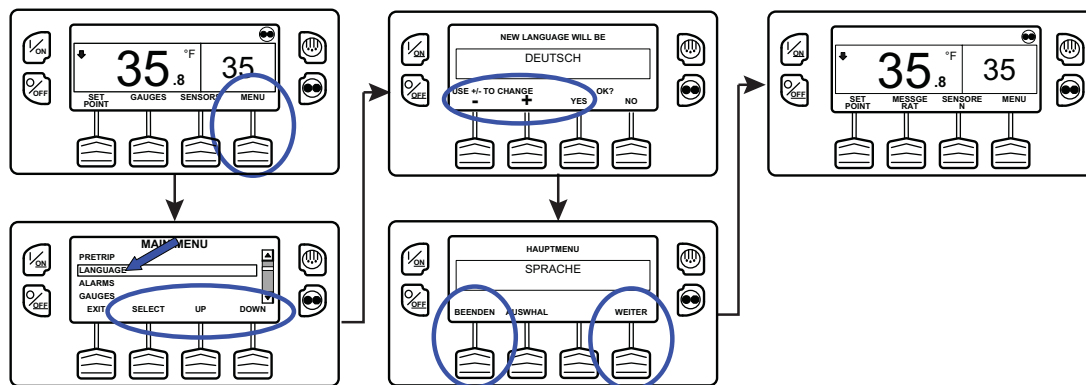


**Figure 99: Languages (If Enabled)**

## Operating Instructions


### Language Menu Quick Access

Should it be necessary at any time to change to English or any other installed language, return to the Standard Display and then press and hold the first and last soft keys for 5 seconds as shown below. The Standard Display shown in Figure 100 is Español (Spanish).

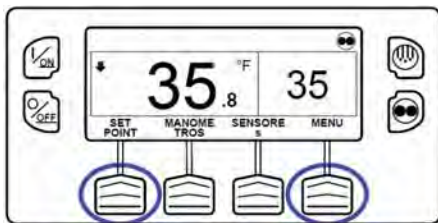

**Figure 100: Standard Display in Español**

After 5 seconds the Language Menu will appear in the current language as shown below. Press the + or - Keys to select the desired language. When the desired language is shown press the SI (YES) Key to confirm the choice (Figure 101).

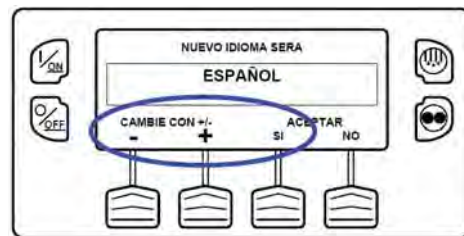

**Figure 101: Select Desired Language**

*NOTE: All languages in the installed software can be selected using this method.*

## Alarms

The Alarm Menu allows the operator to view any active alarms, and allows most alarms to be cleared.

## Log Alarms

If only Log Alarms exist the display shown in Figure 102 will appear and the optional remote alarm light will light for 30 seconds when the unit is turned on.

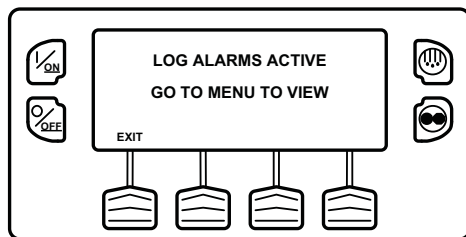


Figure 102: Log Alarms Exist

## Check Alarms

If a Check Alarm condition occurs while the unit is running the alarm icon will appear in the display as shown in Figure 103.

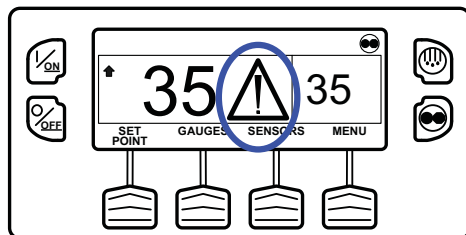


Figure 103: Alarm Icon

## Shutdown Alarms

If a Shutdown Alarm occurs while the unit is running it will be indicated by all of the following (Figure 104):

- The Alarm Icon will appear.
- The display, backlight and optional remote alarm light will flash on and off.
- The display will switch from normal video to reverse video and back to normal video. (Light areas become dark and dark areas become light.)

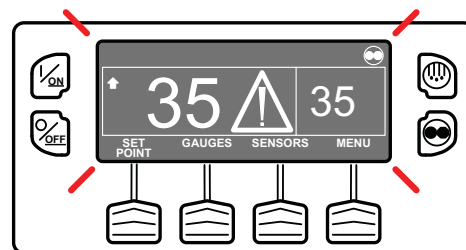


Figure 104: Reverse/Normal Video



### Pretrip Alarms

If an alarm occurs during a Pretrip Test the alarm code will be displayed as Pretrip Alarm XX, where XX is the alarm code.

#### Alarm Codes When Switching Between Diesel and Electric Mode

If a shutdown alarm occurs that affects only Diesel Mode operation and the unit is switched to electric, the Diesel Mode shutdown alarm becomes an Electric Mode log alarm. This allows the unit to run in Electric Mode without clearing the shutdown alarm that is preventing Diesel Mode operation. If the unit is switched back to Diesel Mode, the alarm again become a Diesel Mode shutdown alarm and prevents unit operation.

In the same manner, if a shutdown alarm occurs that affects only Electric Mode operation and the unit is switched to diesel, the Electric Mode shutdown alarm becomes a Diesel Mode log alarm to allow Diesel Mode operation. If the unit is switched back to Electric Mode, the alarm reverts to an Electric Mode shutdown alarm and prevents unit operation. If the unit is configured for electric to diesel Auto-Switch, it automatically starts and runs in Diesel Mode if an electric shutdown occurs.

### Clearing Alarm Codes

Most alarm codes can be cleared conventionally from the Alarm Menu using the CLEAR Key.

The following control and display sensor alarm codes can only be cleared from the Maintenance Menu or Guarded Access Menu:

- Alarm Code 03 Check Control Return Air Sensor
- Alarm Code 04 Check Control Discharge Air Sensor
- Alarm Code 203 Check Display Return Air Sensor
- Alarm Code 204 Check Display Discharge Air Sensor

The following alarm codes clear automatically:

- Alarm Code 64 Pretrip Reminder - Clears when a Pretrip Test is performed.
- Alarm Code 84 Restart Null - Clears when the unit is no longer in a restart null due to a Prevent Alarm.
- Alarm Code 85 Forced Unit Operation - Clears when the unit is no longer running in a forced mode due to a Prevent Alarm.


- Alarm Code 91 Check Electric Ready Input - Clears automatically when the unit starts running.
- Alarm Code 92 Sensor Grades Not Set - Clears when the sensor grade is changed from 5H.

If the Limited Alarm Restarts feature is enabled the following additional alarm codes may only be cleared from the Guarded Access Menu. If this is the case, the CLEAR soft key will not appear if the alarms are displayed from the Main Menu or the Maintenance Menu.

- Alarm Code 10 High Discharge Pressure
- Alarm Code 23 Cooling Cycle Fault
- Alarm Code 24 Heating Cycle Fault
- Alarm Code 32 Refrigeration Capacity Low


## Displaying and Clearing Alarm Codes

Alarms are displayed and cleared using the Alarm Menu. From the Standard Display, press the MENU Key (Figure 105).

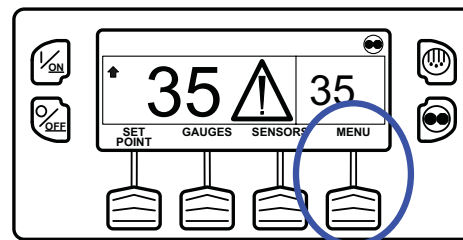

**Figure 105: Menu Key**


The Main Menu will appear. Press the UP or DOWN Key as required to choose the Alarms Menu (Figure 106). When the Alarms Menu is shown press the SELECT Key to select the Alarms menu.

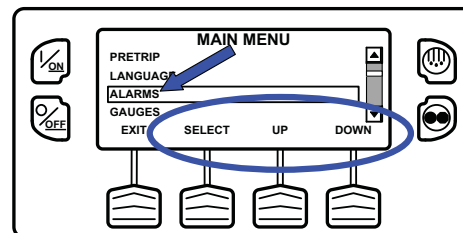

**Figure 106: UP/Down, Select Keys**


## Operating Instructions

The number of alarms (if more than one) and a list of the alarms with the most recent alarm first will be shown. In the example below, there are two alarms. The most recent is Alarm Code 5 Check Ambient Temp Sensor (Figure 107).

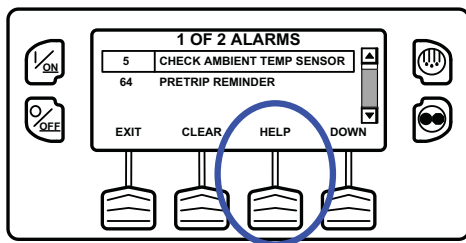


**Figure 107: Alarms Menu**

If necessary to view all alarms, scroll down using the DOWN Key (Figure 108).

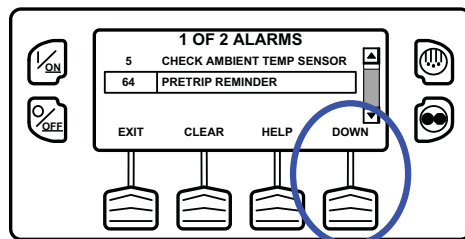

**Figure 108: Down Key**


If the alarm situation has been resolved press the CLEAR Key to clear the alarm (Figure 109).

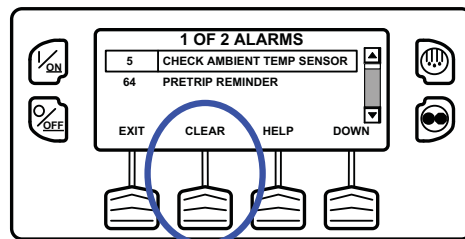

**Figure 109: Clear Key**


The display will briefly show CLEARING ALARM 5 – PLEASE WAIT. Then the Alarm Menu will reappear (Figure 110).

Note that Alarm Code 64 Pretrip Reminder cannot be cleared using the CLEAR Key. This alarm will clear automatically when a Pretrip Test is run.

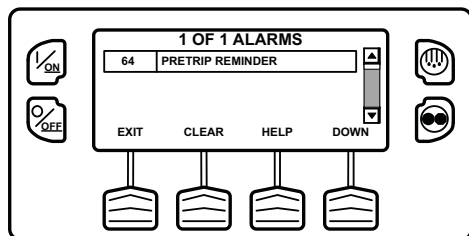


**Figure 110: Pretrip Reminder**

If a serious condition occurs, the unit will be shut down to prevent damage to the unit or the load. If this occurs, the Alarm Icon will appear, the display and backlight will flash on and off. (Figure 111)

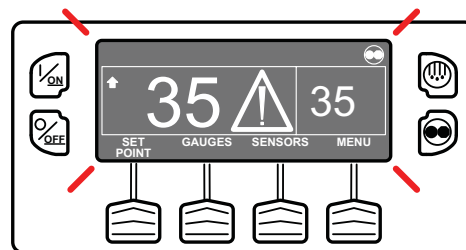

**Figure 111: Unit Shutdown**


The Alarm Menu display will display the Shutdown Alarm Code. For additional information regarding the alarm shown on the display, press the HELP Key (Figure 112).

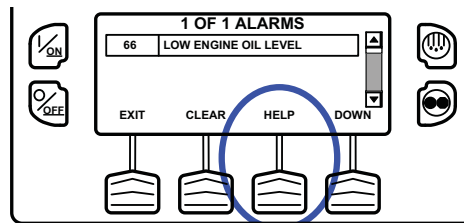

**Figure 112: Help Key**

## Operating Instructions

A help message will appear. Press the EXIT Key to return to the Alarms Menu (Figure 113). Check the oil level and add oil as required, clear the alarm and restart the engine.

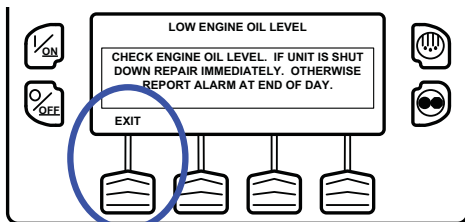


**Figure 113: Exit Key**

To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.

### Important Alarm Notes

- If an alarm will not clear, it may still exist. If the alarm is not corrected, it will not clear or may be immediately set again.
- If an alarm cannot be cleared from the Main menu, the Clear Key will not appear. These alarms must be cleared from the Maintenance or Guarded Access Menus.

See Figure 114 for an overview of the **Displaying and Clearing Alarm Codes** procedure.

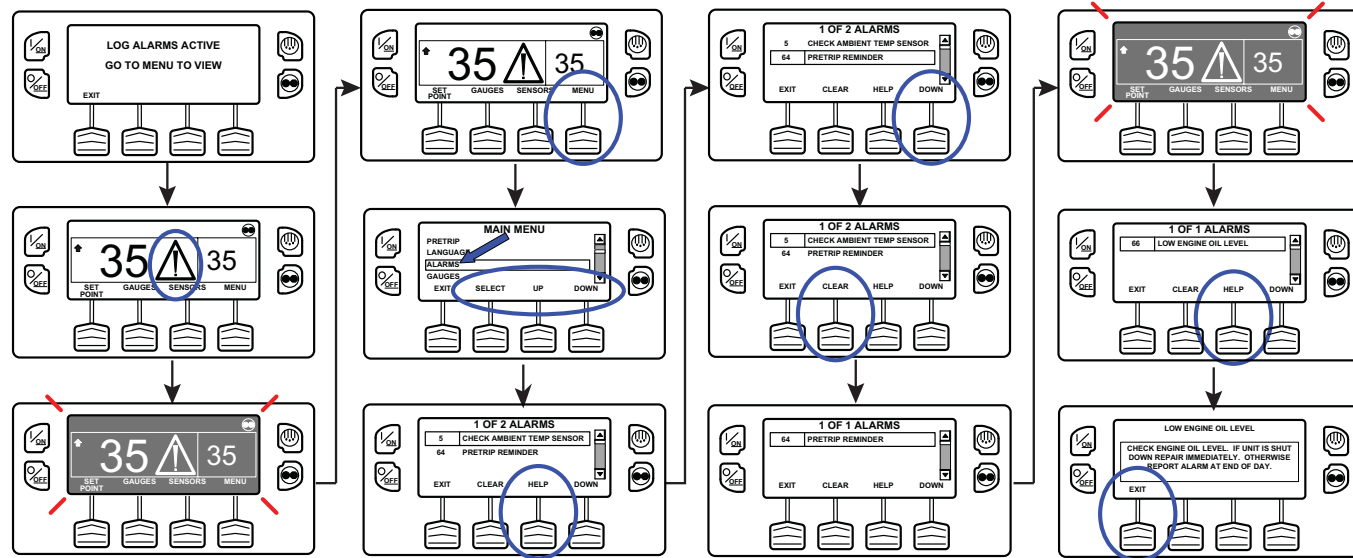


**Figure 114: Displaying and Clearing Alarm Codes**

# Gauges

The Gauges Menu allows the operator to view the unit gauges and I/O conditions. The unit gauges can always be viewed from the Main Menu. This is necessary if the GAUGES Soft Key on the Standard Display has been reassigned to a different function.


## Displaying Gauges

Gauges are displayed using the Gauges Menu. From the Standard Display, press the MENU Key (Figure 115).

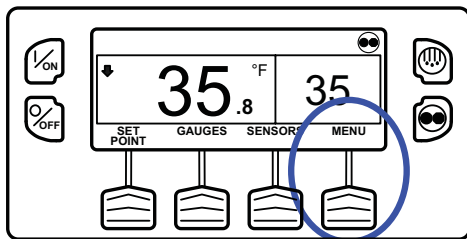


**Figure 115: Menu Key**

The Main Menu will appear. Press the UP or DOWN Key as required to choose the Gauges Menu. When the Gauges Menu is selected, press the SELECT Key to choose the Gauges menu (Figure 116).

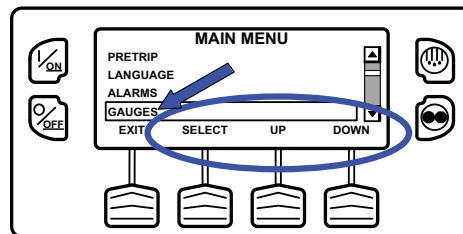

**Figure 116: Up, Down, Select Keys**

The first gauge display will appear. Press the NEXT and BACK Keys to scroll through the gauges and I/O conditions. Pressing the LOCK Key will lock the current gauge on the display (Figure 117).

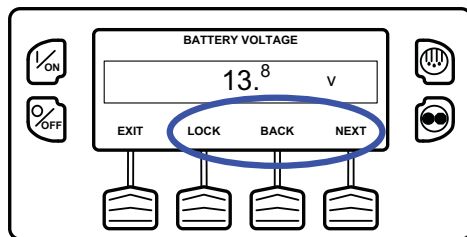

**Figure 117: Next, Back, Lock Keys**

The gauges and I/O conditions available are described in this section of the manual. Not all gauges or I/O conditions may appear depending on unit configuration and software revision.


To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.

## Sensors

The Sensors Menu allows the operator to view the unit and CargoWatch Data Logger temperature sensors. The sensors can always be viewed from the Main Menu. This is necessary if the SENSORS Soft Key on the Standard Display has been reassigned to a different function.

## Displaying Sensors

Sensors are displayed using the Sensors Menu. From the Standard Display, press the MENU Key (Figure 118).

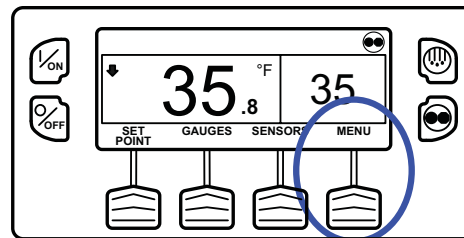


**Figure 118: Menu Key**

The Main Menu will appear. Press the UP or DOWN Key as required to choose the Sensors Menu. When the Sensors Menu is selected, press the SELECT Key to choose the Sensors menu.

The first sensors display will appear. Press the NEXT and BACK Keys to scroll through the gauges and I/O conditions. Pressing the LOCK Key will lock the current gauge on the display (Figure 119).



## Operating Instructions

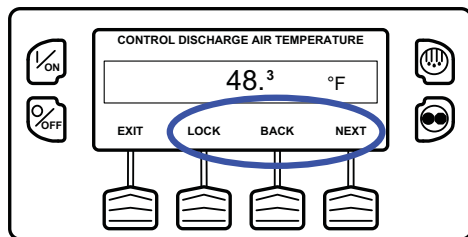

**Figure 119: Next, Back, Lock Keys**

The sensors available are described in this section of the manual.

To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.


## Data Logger (CargoWatch)

The CargoWatch Data Logger is physically located in the HMI Control Panel. It can support up to 6 optional temperature sensors.

When shipped from the factory, CargoWatch sensors 1 and 2 are turned on to be logged and CargoWatch sensors 3 through 6 are turned off. Also, digital input 1 is turned on to be logged and digital inputs 2 through 4 are turned off. Sensors and digital inputs can be turned on, off and configured using the CargoWatch menu in Guarded Access or with Wintrac. The CargoWatch Data Logger can also be configured using the USB Flash Drive OptiSet Plus Feature.


A Start of Trip can be sent to the unit ServiceWatch and CargoWatch Data Loggers. In addition, the CargoWatch Data Logger contents can be printed with a hand-held printer.

The ServiceWatch and CargoWatch Data Logger are accessed using the Data Logger Menu. From the Standard Display, press the MENU Key (Figure 120).

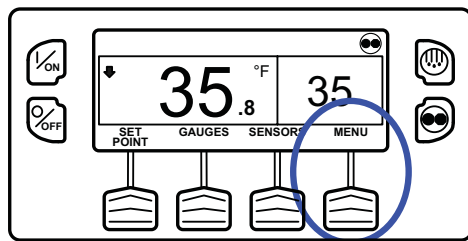

**Figure 120: Standard Screen, Menu Key**

The Main Menu will appear. Press the UP or DOWN Key as required to choose the Data Logger Menu. When the Data Logger Menu is selected, press the SELECT Key to choose the Data Logger menu (Figure 121).

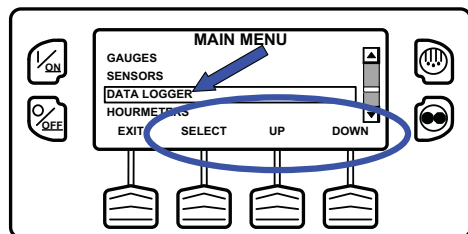


**Figure 121: UP, Down, Select Keys**

The Data Logger Menu will appear.

## Sending Start of Trip Marker to CargoWatch and ServiceWatch Data Loggers

To send a Start of Trip marker to the CargoWatch and ServiceWatch Data Loggers press the SELECT Key. The display will briefly show START OF TRIP COMPLETE to confirm that a Start of Trip marker was set in the CargoWatch Data Logger (Figure 122).

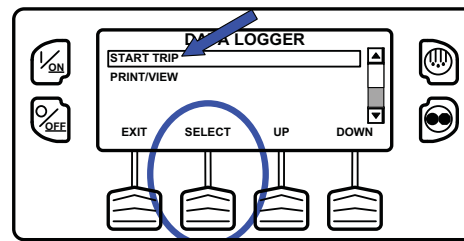


**Figure 122: Select Key, Start of Trip Complete**

**NOTE:** The start of trip marker is sent to both the CargoWatch and ServiceWatch data loggers.

### Printing CargoWatch Data Logger Reports

Press the DOWN Key to select the PRINT / VIEW feature and press the SELECT Key to choose Print/View.

The Print Data Menu will appear. The first Print Data Menu allows the operator to print a Delivery Ticket using a hand held printer. Pressing the SELECT Key will print the ticket (Figure 123). The Delivery Ticket is a short ticket that shows delivery specific details including the current temperature. A sample Delivery Ticket is shown in Figure 124.

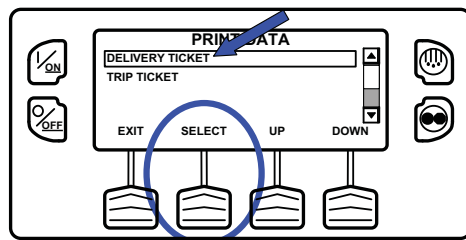

**Figure 123: Select Key, Print Delivery Ticket**

CONTROLLER VERSION NUMBER:	B007
CONTROLLER TYPE:	SR2
DATALOGGER VERSION NUMBER:	6512
TEMPERATURE UNITS:	FAHRENHEIT
START:	05/30/08 08:29:08
FINISH:	05/30/08 09:18:33
SENSORS:	2
SETPOINT:	32.0


Sensor	Min	Ave	Max	Last
#1:	35	35	35	35
#2:	---	---	---	---

SENSOR #1:	LOG SENSOR 1
SENSOR #2:	LOG SENSOR 2

**Figure 124: Sample Delivery Ticket**

Pressing the DOWN Key allows the operator to print a Trip Ticket using a hand held printer. Press the SELECT Key to print the ticket (Figure 125). The Trip Ticket is a long ticket that shows details for the current trip including a temperature history. The Trip Ticket is also called a Journey Ticket. A sample Trip Ticket is shown in Figure 126.

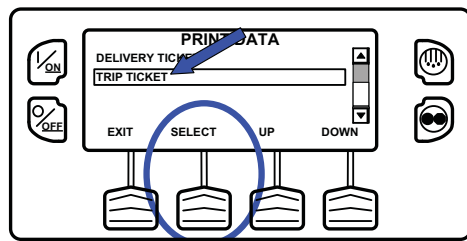

**Figure 125: Select Key, Print Trip Ticket**

```

UNIT SERIAL NUMBER:          xxxxxxxxxx
CONTROLLER SERIAL NUMBER:    A00021506190T3
TRAILER ID:                  xxxxxxxxxx
CONTROLLER VERSION NUMBER:   B007
CONTROLLER TYPE:             SR2
DATALOGGER VERSION NUMBER:   6512
TEMPERATURE UNITS:           FAHRENHEIT
START:                       05/30/08 09:50:08
FINISH:                       05/30/08 13:07:33
SENSORS:                      1
SETPPOINT:                    32.0

30 - MAY - 2008
1305  35.0
1250  35.2
1235  35.1
1220  35.2
1205  35.1
30 - MAY - 2008
1150  35.0
1135  35.0
1120  35.0
1105  34.9
1050  35.0
1035  35.0
1020  35.0
1005  35.1
0950  35.1

SENSOR #1:                    LOG SENSOR 1
SENSOR #2:                    LOG SENSOR 2
    
```

**Figure 126: Sample Trip Ticket**


# Hourmeters

The Hourmeters Menu allows the operator to view the unit hourmeters that have the view feature enabled in the Guarded Access menu. If the view feature for a particular hourmeter is not enabled then that hourmeter will continue to accumulate time but cannot be viewed from the Main Menu. However, all hourmeters can be viewed from the Maintenance Menu, even if they are not enabled. The hourmeters shown below are implemented.

## Viewing Hourmeters


Only Hourmeters that have been enabled in Guarded Access are shown from the Main Menu. The Hourmeters can be viewed only.

Hourmeters are displayed using the Hourmeter Display. From the Standard Display, press the MENU Key (Figure 127).

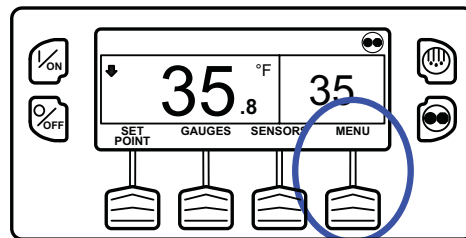


**Figure 127: Menu Key**

The Main Menu will appear. Press the UP or DOWN Key as required to choose the Hourmeter Menu. When the Hourmeter Menu is selected, press the SELECT Key to choose the Hourmeter Menu (Figure 128).

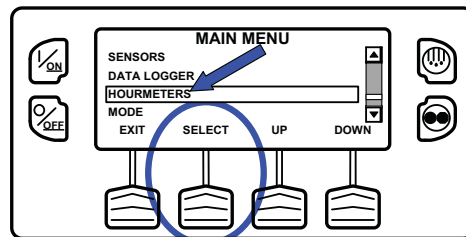

**Figure 128: Select Key**

Press the NEXT or PREVIOUS Key to scroll through the hourmeters (Figure 129).

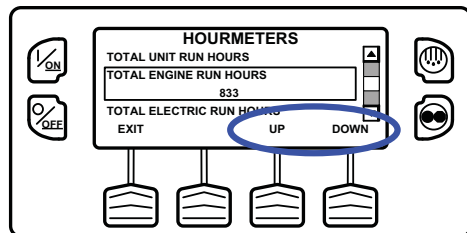

**Figure 129: Up/Down Keys**

Hourmeter names and definitions are shown in the table on the next page in the order they appear. Only hourmeters enabled in the Guarded Access Menu will be shown. To return to the Standard Display, press the EXIT Key.

When shipped from the factory, only these hourmeters are enabled for viewing from the Main Menu.

- Total Unit Run Hours
- Total Engine Run Hours
- Total Electric Run Hours

To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.

## Hourmeter Names and Definitions

Only configured hourmeters that have been enabled in the Viewable Hourmeter Setup Menu will be shown:

Hourmeter Name	Definition
Total Hours	Total number of hours the unit has been turned on (protection hours).
Total Run Time Hours	Total number of hours the unit has run in both diesel and Electric Mode.
Engine Hours	Total number of hours the unit has run in Diesel Mode.
Electric Run Hours	Total number of hours the unit has run in Electric Mode.
Total Run Reminder 1	User Programmable - The number of hours before a Total Unit Run Time Maintenance Reminder 1 occurs.

## Operating Instructions

Total Run Reminder 2	User Programmable - The number of hours before a Total Unit Run Time Maintenance Reminder 2 occurs.
Controller Power On	Total hours the controller and HMI Control Panel have been turned on.
Pretrip Reminder	User Programmable - number of hours before a Pretrip Reminder occurs.
Engine Reminder 1	User Programmable - The number of hours before an Engine Run Time Maintenance Reminder 1 occurs.
Engine Reminder 2	User Programmable - The number of hours before an Engine Run Time Maintenance Reminder 2 occurs.
Electric Reminder 1	User Programmable - The number of hours before an Electric Run Time Maintenance Reminder 1 occurs.
Electric Reminder 2	User Programmable - The number of hours before an Electric Run Time Maintenance Reminder 2 occurs.

***IMPORTANT: If a programmable hourmeter is not enabled or the view for that hourmeter is not turned on it will not appear in the display sequence.***

## Mode Menu

The Mode Menu allows the operator to change the unit operating modes that have been enabled in Guarded Access. Only Operating Modes that have been enabled from the Guarded Access > Main Menu Configuration Menu will be shown.

- Turns Off Cycle Sentry Mode/Turns On Cycle Sentry Mode (If Cycle Sentry is turned Off unit runs in Continuous). Note that selecting Cycle Sentry Mode or Continuous Mode can also be accomplished using the Cycle Sentry Key to the right of the display.
- Allows temperature to be displayed in either Fahrenheit or Celsius degrees (if enabled from the Guarded Access > Main Menu Configuration Menu).
- Allows the optional Fresh Air Exchange door to be opened or closed (if enabled from the Guarded Access > Hardware Configuration Menu).

- Allows Keypad Lockout to be selected (if enabled from the Guarded Access > Main Menu Configuration Menu).
- Start Sleep Mode (if enabled from the Guarded Access > Main Menu Configuration Menu).


When shipped from the factory, only the Cycle Sentry/Continuous Mode is enabled.

If OptiSet Plus is in use some modes may not be available.

To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.


## Using the Change Mode Menu

Mode changes are made using the Mode Menu. From the Standard Display, press the MENU Key (Figure 130).

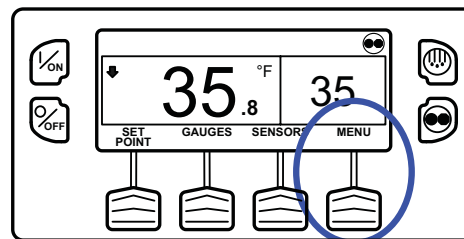

**Figure 130: Menu Key**

The Main Menu will appear. Press the UP or DOWN Key as required to choose the Mode Menu. When the Mode Menu is selected, press the SELECT Key to choose the Mode Menu (Figure 131).

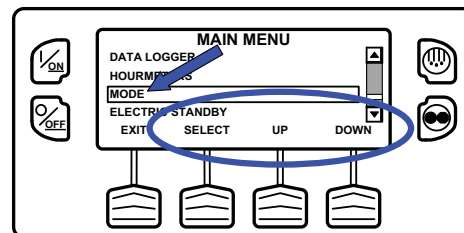


**Figure 131: Up, Down, Select Keys**



## Operating Instructions

The first enabled Change Mode Menu selection will appear. To choose that function, press the SELECT Soft Key. To Scroll through the enabled features in the Change Mode Menu, press the UP and DOWN Soft Keys (Figure 132).

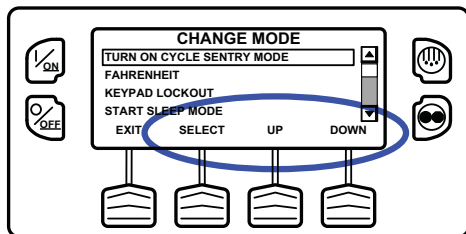


**Figure 132: Select, Up, Down Keys**

Possible Mode selections are shown later in this section.

- Only those modes that have been enabled will appear. Only the Cycle Sentry Menu is enabled on factory units.
- Not all modes may be available, depending on OptiSet Plus usage and the settings of other programmable features.
- To return to the Standard Display press the EXIT Key.
- The modes shown on the following pages may be available.


## Turn Cycle Sentry On or Off

Cycle Sentry Mode can be turned On or Off if Cycle Sentry Mode is allowed by OptiSet Plus. If Cycle Sentry is turned off the unit runs in Continuous Mode, unless Continuous Mode is not allowed by OptiSet Plus. Either Cycle Sentry or Continuous operation can be disabled via OptiSet Plus. From the Main Menu > Change Mode menu choose Turn On/Off Cycle Sentry Mode and press the SELECT Soft Key (Figure 133).

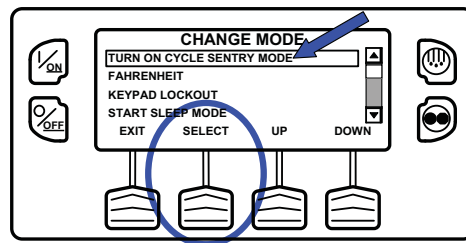

**Figure 133: Select Key**

If the unit is running in Cycle Sentry Mode, press the SELECT Soft Key (Figure 134) to turn off Cycle Sentry Mode as shown below.

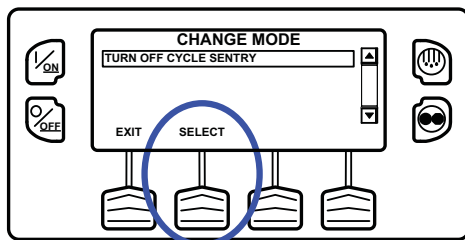

**Figure 134: Select Key**

Confirmation screens will appear briefly, the unit will switch to Continuous Mode operation and the Cycle Sentry Icon will disappear.


To turn Cycle Sentry back on press the SELECT Key again.

To leave this menu without changing the setting, press the EXIT Soft Key. To return to the Standard Display press the EXIT Soft Key again.

**NOTE:** *Cycle Sentry Mode can also be turned on and off using the Cycle Sentry Key on the HMI Control Panel.*

## Select Temperature Units


If this feature enabled in Guarded Access > Main Menu Configuration, the operator can select temperature units to be displayed as either degrees Fahrenheit or degrees Celsius. From the Main Menu > Change Mode menu choose Fahrenheit or Celsius and press the SELECT Soft Key (Figure 135).

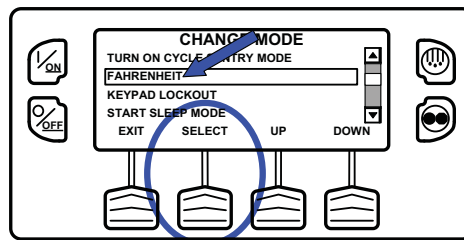

**Figure 135: Fahrenheit or Celsius, Select Key**

Choose the desired Temperature Units using the UP and DOWN Soft Keys and press the SELECT Soft Key to select the choice (Figure 136).

## Operating Instructions

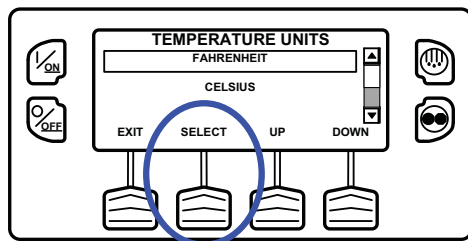

**Figure 136: Up, Down, Select Keys**

Temperatures will be displayed in the selected units.

- To leave this menu without changing the setting, press the EXIT Soft Key. To return to the Standard Display press the EXIT Soft Key again.


### Fresh Air Exchange Open or Closed

If this option is installed and enabled in Guarded Access > Main Menu Configuration, the Fresh Air Exchange option allows fresh outside air to be drawn into the trailer and the interior air to be exhausted by opening the Fresh Air Exchange door. This feature is beneficial when hauling loads that release gas as they ripen, such as potatoes. The Fresh Air Exchange

feature is only available with setpoints above 32 F (0 C). The feature is disabled with setpoints of 32 F (0 C) and below. This feature may not be available if OptiSet Plus is in use.

The Fresh Air Exchange feature should be used exactly as specified by the customer.

From the Change Mode menu choose Open Fresh Air Exchange and press the SELECT Soft Key (Figure 137).

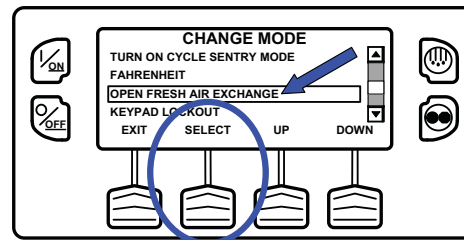

**Figure 137: Select Key**


The Fresh Air Exchange door will open. To close the Fresh Air Exchange door press the SELECT Key again.

**IMPORTANT:** *The Fresh Air Exchange feature should be used exactly as specified by the customer.*

- The Fresh Air Exchange door will only be open when the unit engine is running. The door will close when the engine shuts down to preserve unit battery life.
- The setting of the Fresh Air Exchange door will survive power off/power on cycles - if the door is set to “Open” by the operator it will continue to open any time the engine is running until it is set to “Close” by the operator.
- To leave this menu without changing the setting, press the EXIT Soft Key. To return to the Standard Display press the EXIT Soft Key again.


## Keypad Lockout

If enabled in Guarded Access > Main Menu Configuration, the keypad can be locked to prevent unauthorized use. If the keypad is locked, only the On Key and Off Key function. The keypad will remain locked even if the unit is turned off and back on. If Keypad Lockout is active, press and hold any soft key for 5 seconds to deactivate the feature. To turn the feature on, from the Change Mode menu choose Keypad Lockout and press the SELECT Soft Key (Figure 138).

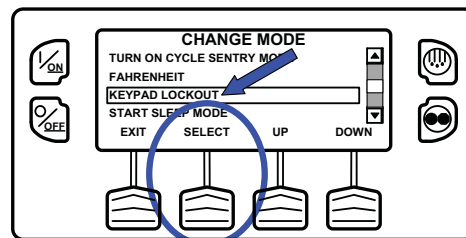

**Figure 138: Select Key**

A Confirmation Request will appear. To activate Keypad Lockout press the YES Soft Key. To leave this menu without turning the Keypad Lockout feature on, press the NO Soft Key (Figure 139).

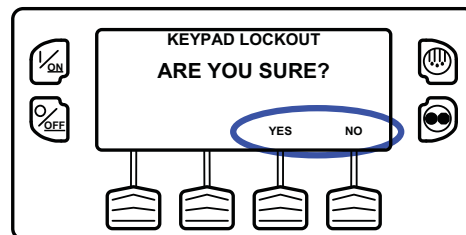

**Figure 139: NO Soft Key**


## Operating Instructions

If the YES Soft Key was pressed Keypad Lockout is active. Repeat the process to turn the Keypad Lockout feature off.

- If the keypad is locked, only the On Key and Off Key function. The keypad will remain locked even if the unit is turned off and back on.
- If Keypad Lockout is active, press and hold any soft key for 5 seconds to deactivate the feature.
- To return to the Standard Display press the EXIT Soft Key again.

## Start Sleep Mode

If this feature enabled in Guarded Access > Main Menu Configuration, the operator can select and set Sleep Mode from the Mode Menu. Sleep Mode is used to keep the engine warm and the battery charged when the unit is not in use. When the unit is Sleep Mode the display will show “SLEEP” and the current time. To turn the feature on, from the Change Mode menu choose Start Sleep Mode and press the SELECT Soft Key (Figure 140).

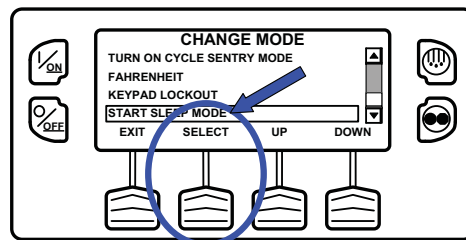

**Figure 140: Select Soft Key**

The following features are available in Sleep Mode. Follow the display prompts to select and set the features.

- **Program Wakeup Time:** This feature allows a wakeup time to be specified. When the selected time is reached the unit will start and resume normal operation.
  - If a Wakeup Time is selected the following features are available:
- **Day to Wake Up:** This feature allows the day the unit is to wake up to be specified.
- **Hour to Wake Up:** This feature allows the hour the unit is to wake up to be specified.

- **Minute to Wake Up:** This feature allows the minute the unit is to wake up to be specified.
- **Run Pretrip on Wakeup:** This feature allows a Pretrip Test to be automatically run when the unit wakes up.

### SmartPower Electric Standby Option

The Diesel/Electric Standby selection from the Main Menu allows the operator to manually select diesel or Electric Mode operation on units equipped with the electric standby SmartPower option. The unit can also be programmed to automatically switch to Electric Mode operation when standby power is available and to automatically switch to Diesel Mode operation if standby power fails or is removed. If the unit is programmed to automatically switch from diesel to electric and/or electric to diesel the associated screens do not appear.

- If the unit is currently operating in Diesel Mode the ELECTRIC STANDBY selection will appear in the Main Menu.
- If the unit is currently operating in Electric Mode the Diesel Mode selection will appear in the Main Menu.

### Electric Mode Operation

If a unit equipped with the electric standby SmartPower option is running in Diesel Mode, the Diesel to Electric Auto-Switch feature is set NO and the unit is connected to a source of standby power, this feature allows the operator to manually select Electric Mode operation. This feature does not appear if the electric standby SmartPower option is not installed or if the Diesel to Electric Auto-Switch feature is set YES.

### Diesel Mode Operation

If a unit equipped with the electric standby SmartPower option is running in Electric Mode, the Electric to Diesel Auto-Switch feature is set NO, this feature allows the operator to manually select Diesel Mode operation. This feature does not appear if the electric standby SmartPower option is not installed or if the Electric to Diesel Auto-Switch feature is set YES.


## Operating Instructions

### Switching from Diesel to Electric

If the unit is running in Diesel Mode and the Diesel to Electric Auto-Switch Enabled feature in Guarded Access is set YES then the unit will automatically switch to Electric Mode operation when standby power is connected and available. The screens shown below will not appear.


If the unit is running in Diesel Mode and the Diesel to Electric Auto-Switch Enabled feature in Guarded Access is set NO, the unit can be switched to Electric Mode using the Electric Standby selection from the Main Menu.

From the Standard Display, press the MENU Key (Figure 141).

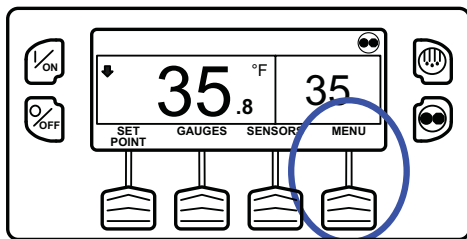

**Figure 141: Menu Key**

From the Main Menu choose Electric Standby and press the SELECT Soft Key (Figure 142).

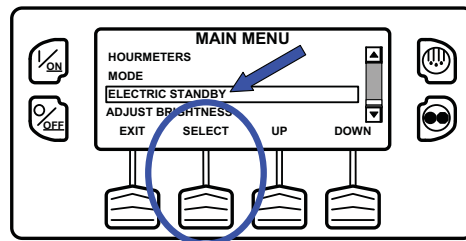


**Figure 142: Select Key**

If the unit has standby power available and is turned on, the electric standby run screen will appear. The new mode is confirmed for 10 seconds. The unit will start and run in Electric Mode. If electric standby power is not available or fails, the display will prompt for a return to Diesel Mode as shown below.

Any engine related Shutdown Alarms become Log Alarms when the unit is switched to Electric Mode operation. If the unit is switched back to Diesel Mode these alarms again become Shutdown Alarms.

## Electric Standby Power Fails or is Disconnected

If the electric standby power source fails or is disconnected and manual switching to Diesel Mode is selected, the unit will prompt for a switch to Diesel Mode (Figure 143).

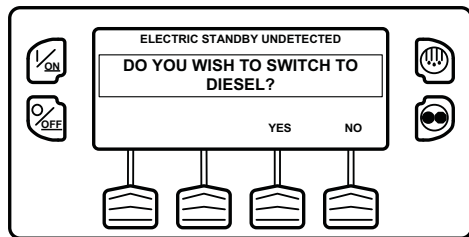

**Figure 143: Diesel Mode Prompt**

- Pressing the YES Soft Key will switch unit operation back to Diesel Mode.
- Pressing the NO Soft Key will allow the unit to remain in Electric Mode even though standby power is not available.

The unit will not run and Alarm Code 91 Check Electric Ready Input will be set as a prevent alarm.

## Switching from Electric to Diesel


If the unit is running in Electric Mode and the Electric to Diesel Auto-Switch Enabled feature in Guarded Access is set YES then the unit will automatically switch to Diesel Mode operation when standby power is no longer available. The screens shown below will not appear.

If the Diesel to Electric Auto-Switch Enabled feature in Guarded Access is set NO and standby power is disconnected or fails, the unit will not automatically switch to Diesel Mode. This is primarily designed to prevent unauthorized diesel engine starts when the truck is indoors or on a ferry where engine operation is strictly prohibited.

From the Standard Display, press the MENU Key (Figure 144).




## Operating Instructions

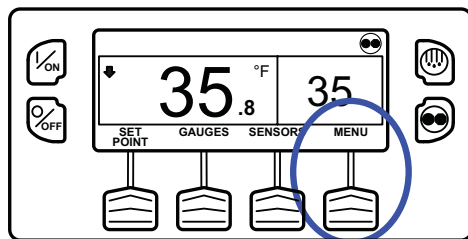

**Figure 144: Menu Key**

From the Main Menu choose Diesel Mode and press the SELECT Soft Key (Figure 145).

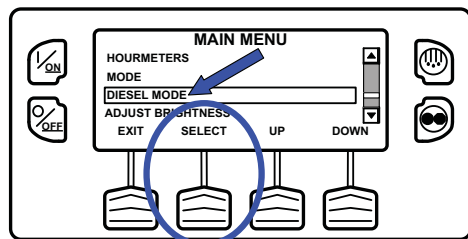

**Figure 145: Select Key**


The new mode is confirmed for 10 seconds. The unit will start and run in Diesel Mode.

Any electric standby related Shutdown Alarms become Log Alarms when the unit is switched to Diesel Mode operation. If the unit is switched back to Electric Mode these alarms again become Shutdown Alarms.

### Adjust Brightness


The brightness of the HMI Control Panel display can be adjusted to allow for changing ambient light conditions. The choices available to the operator are HIGH, MEDIUM, LOW and OFF. OFF actually results in a very dim screen suitable for low light conditions.

Display brightness is adjusted using the Adjust Brightness Menu. From the Standard Display, press the MENU Key (Figure 146).

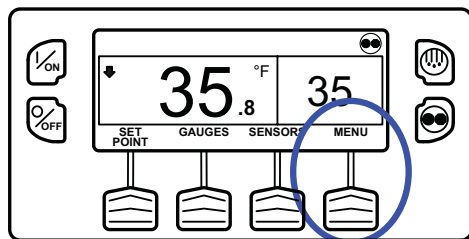


**Figure 146: Menu Key**

The Main Menu will appear. Press the UP or DOWN Key as required to choose the Adjust Brightness Menu. When the Adjust Brightness is selected, press the SELECT Key to choose the Adjust Brightness (Figure 147).

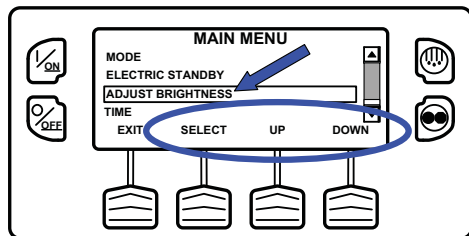

**Figure 147: Select Key**

The Display Brightness menu will appear as shown below. Press the UP or DOWN Soft Keys to select the desired display brightness. When the desired brightness is shown press the SELECT Soft Key to confirm the choice (Figure 148).

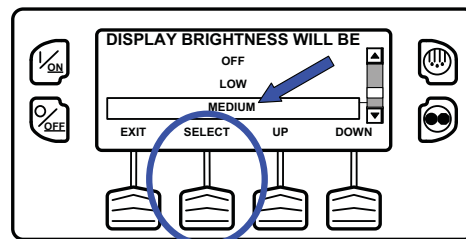


**Figure 148: Select Key**

To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.

## Time


The Time and Date held by the HMI Control Panel can be checked. Time and Date cannot be changed from the Main Menu. The time and date is accessed using the Main Menu. From the Standard Display, press the MENU Key (Figure 149).

## Operating Instructions

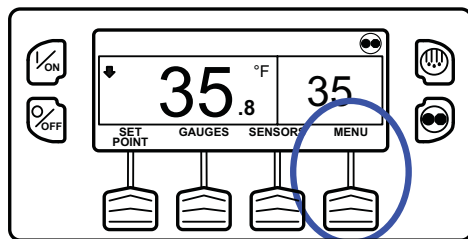


**Figure 149: Menu Key**

The Main Menu will appear. Press the UP or DOWN Key as required to choose the Time Menu. When the Time Menu is selected, press the SELECT Key to choose the Time Menu (Figure 150).

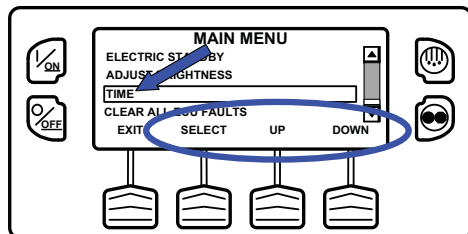

**Figure 150: Select Key**

The date and time held in the HMI Control Panel will be shown on the display (Figure 151). Time and Date cannot be changed from the Main Menu.

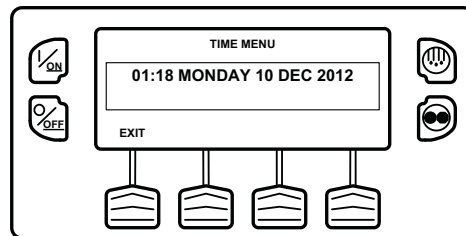

**Figure 151: Date and Time**


To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.

## Clear All ECU Faults

Pressing this key will clear all existing Engine Control Unit (ECU) Fault Codes. This may allow continued unit operation should an ECU fault code result in engine shutdown.


- Any Thermo King Alarm Codes associated with the Engine Control Unit (ECU) Fault Codes will also be cleared.
- The Thermo King Alarm Codes and Engine Control Unit (ECU) Fault Codes that were cleared can be viewed in the ServiceWatch and ECU Data Loggers.

Engine Control Unit (ECU) Fault Codes are cleared using the Clear All ECU Faults Menu. From the Standard Display, press the MENU Key (Figure 152).

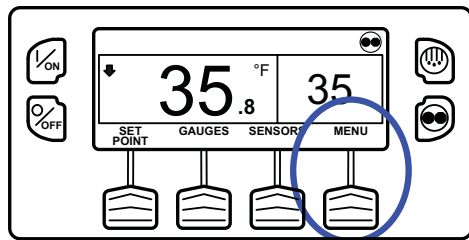

**Figure 152: Menu key**


The Main Menu will appear. Press the UP or DOWN Key as required to choose the Clear All ECU Faults Menu. When the Clear All ECU Faults Menu is selected, press the SELECT Key to choose the Clear All ECU Faults Menu (Figure 153).

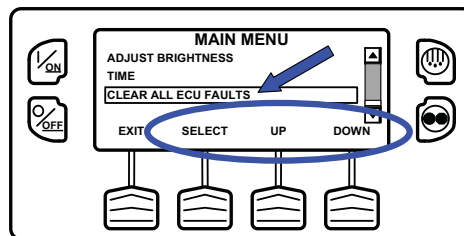

**Figure 153: Select Key**

The Clear All ECU Faults Prompt will appear. To clear all Engine Control Unit (ECU) Faults and associated Thermo King Faults press the CLEAR Soft Key (Figure 154).

## Operating Instructions

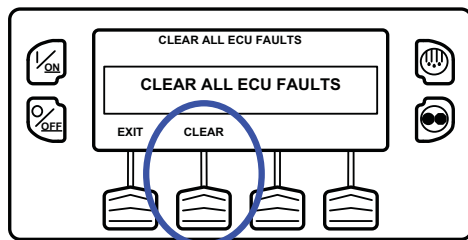


**Figure 154: Clear Key**

All Engine Control Unit (ECU) Faults and associated Thermo King Faults will be cleared.

To return to the Main Menu press the EXIT Key. To return to the Standard display press the EXIT Key again.

# Optional Rear Remote Control Panel

The optional Rear Remote Control Panel is connected to the control system and is used to operate the unit from a remote location, typically at the rear of the trailer. In the illustration below all display segments are turned on.

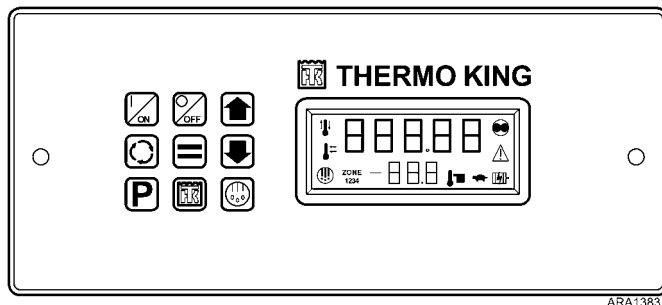

**Figure 155: Rear Remote Control Panel**

## Rear Remote Control Panel Functionality

The Rear Remote Control Panel functions that are available to the user are determined by the setting of the Rear Remote Control Action features in the Guarded Access / Unit Configuration Menu. The Rear Remote Control Action can be set to either RUN or STAND BY.

When the unit is turned on at the Rear Remote Control Panel either the Standard Display or [STAnd by] will appear on the display.

## Rear Remote Control Action Set to Run

If the Rear Remote Control Action is set to RUN the Standard Display will be present on the Rear Remote Control Panel and the unit will start and run when the Rear Remote Control Panel ON Key is pressed. Pressing the Rear Remote Control Panel OFF Key will turn the unit off.

## Optional Rear Remote Control Panel

If the control system is powered up from the Rear Remote Control Panel the Standard Display will appear in both the Rear Remote Control Panel display and the unit Control Panel display. When set to RUN the Rear Remote Control Panel allows the following:

- Turn the unit on and off
- Unit will start and run
- Change the Setpoint
- Select Cycle-Sentry or Continuous Mode
- Display discharge air temperature
- Display and clear alarm codes
- Initiate a manual defrost cycle
- Send a Start of Trip marker to the ServiceWatch and CargoWatch Data Loggers
- Initiate a Pretrip Test

## Rear Remote Control Action Set to STAND BY


If the Rear Remote Control Action is set to STAND BY, pressing the Rear Remote Control Panel ON Key will power up the control system, but the unit will not start and run. Pressing the Rear Remote Control Panel OFF Key will turn the unit off. The Control Panel on the unit must be used to start and stop unit operation.

In addition to turning the unit on and off, when set to STAND BY the Rear Remote Control Panel allows the following:

- Turn the unit on and off
- Unit will not start and run
- Change the Setpoint
- Select Cycle Sentry or Continuous Mode (unless prevented by OptiSet Plus)
- Display discharge air temperature
- Display and clear alarm codes
- Send a Start of Trip marker to the ServiceWatch and CargoWatch Data Loggers

When in STAND BY, the unit will not start and run and a defrost cycle or Pretrip Test cannot be started.

If the control system is powered up from the remote control panel a stand by message will appear in both the remote control panel display and the unit Control Panel display as shown in Figure 156 and Figure 157.

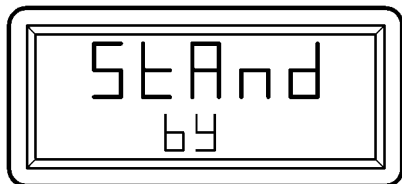

ARA1384

**Figure 156: Rear Remote Control Panel Display**




ARA1385

**Figure 157: Unit Control Panel Display**

When the StAnd bY display is shown, press the Select Key to show the Remote Standard Display. When the remote standard Display is shown, the setpoint and operating mode can be changed, the discharge air temperature can be displayed and alarms can be viewed and cleared. In addition, a Start of Trip can be sent to the data loggers.

After the last key is pressed, the display will return to the StAnd bY display shown in Figure 158 in about 10 seconds.

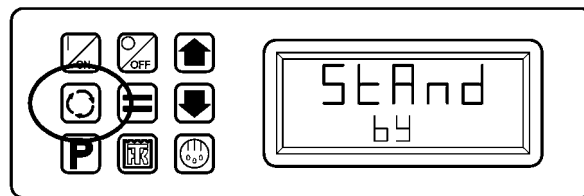


ARA1386

**Figure 158: Press Select Key**



### Keypad

The nine touch sensitive keys are used to turn the unit on and off. They also allow the setpoint to be changed, Cycle Sentry or Continuous Mode to be selected, Alarm Codes and other operating data to be displayed and Pretrip Tests and Defrost Cycles to be performed. A Start of Trip marker can also be sent to the data loggers.

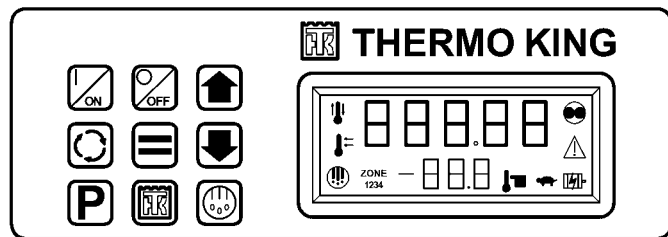

ARA1387


**Figure 159: Rear Remote Control Panel**

	<b>ON Key</b>	Turns the unit on as determined by the setting of Rear Remote Control Action.
	<b>OFF Key</b>	Turns the unit off.
	<b>Up Arrow Key</b>	Increases setpoint or changes other setting.
	<b>Down Arrow Key</b>	Decreases setpoint or changes other setting.
	<b>Select Key</b>	Allows Cycle-Sentry to be turned on and off, displays the discharge air temperature and alarms.
	<b>Enter Key</b>	Executes a prompt or loads a new setpoint or other setting.
	<b>Pretrip Key</b>	Initiates a Pretrip Test.

	<b>TK Logo Key</b>	Sends a Start of Trip marker to the data logger.
	<b>Defrost Key</b>	Initiates a defrost cycle if conditions allow.

## Display

The display normally shows the Standard Display of return air temperature and setpoint. The icons on either side of the display indicate operating modes and alarms. The display shown here has all possible segments lighted. The display icons are defined below.

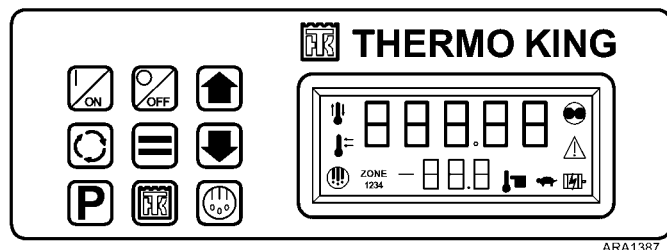


ARA1387

**Figure 160: Rear Remote Control Panel**

	<b>Cool Icon</b>	This icon appears when the unit is cooling.
	<b>Heat Icon</b>	This icon appears when the unit is heating.
	<b>Modulation Icon</b>	This icon appears when the unit is in modulation.
	<b>Defrost Icon</b>	This icon appears when the unit is defrosting.
	<b>Cycle-Sentry Icon</b>	This icon appears when the unit is operating in Cycle-Sentry mode.
	<b>Alarm Icon</b>	This icon appears when an alarm condition has been detected.
	<b>Electric Standby Icon</b>	This icon appears when the unit is operating in the optional electric standby mode.
	<b>Setpoint Icon</b>	This icon appears when the setpoint is being shown in the display.
	<b>Not Used</b>	This icon appears during a remote control panel test but is not currently used.

### Reading a Typical Remote Standard Display

The Remote Standard Display shows the temperature and setpoint. The icons at the sides of the display indicate operating conditions.

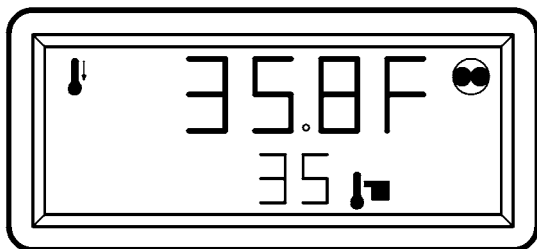

ARA1388

**Figure 161: Remote Standard Display**


The Remote Standard Display in Figure 161 shows the following information:

- The temperature (typically return air temperature) is 35.8°F.
- The setpoint is 35°F.

- The unit is cooling as shown by the icon at the upper left side of the display.
- The unit is operating in Cycle Sentry mode as shown by the icon at the upper right side of the display.

### Remote Control Panel Lockout

The remote control panel may be locked out during some control system functions such as Service Test Mode, Interface Board Test Mode and while setting programmable features. If this is the case the display shown in Figure 162 will appear. The display will return to the Remote Standard Display when allowed by the control system.

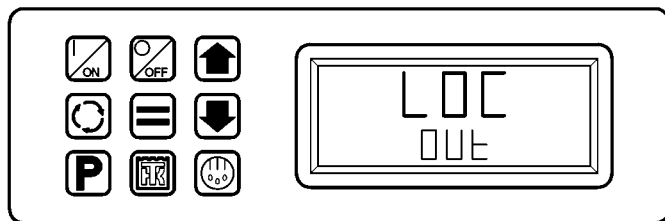

ARA1389

**Figure 162: Remote Lock Out Display**

## Turning the Unit ON or OFF (Configured for STAND BY Operation)

The control system is turned on by pressing the ON Key and off by pressing the OFF Key. When the On Key is pressed the remote display briefly shows all segments and then StAnd by as shown in Figure 163. A stand by message will also appear on the unit Control Panel display. The setpoint can be changed but the unit will not start and run. Only the Select Key, Enter Key and Up and Down Arrow Keys are functional. The unit can be started and run by pressing the unit Control Panel ON Key.

**IMPORTANT:** To change the setpoint, press the Select Key to show the Remote Standard Display. The setpoint can now be changed as shown on page 128.


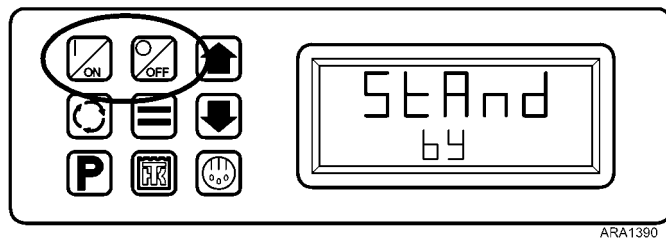


Figure 163: Stand By Display

## Turning the Unit On and Off (Configured for RUN Operation)

The unit is turned on by pressing the ON key and off by pressing the OFF key. When the ON key is pressed the remote display briefly shows all segments and then COn FIG as the control system initializes. Then the Remote Standard Display will appear as shown in Figure 164. The unit will start and run if necessary.

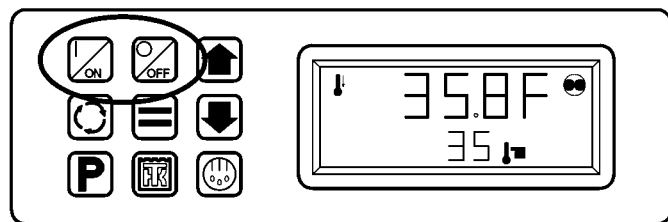


**Figure 164: Standard Display**

## Changing the Setpoint

The setpoint can be changed when the Remote Standard Display is shown.

1. When the Remote Standard Display is shown, press the Up or Down Arrow Keys to select the desired setpoint (Figure 165).

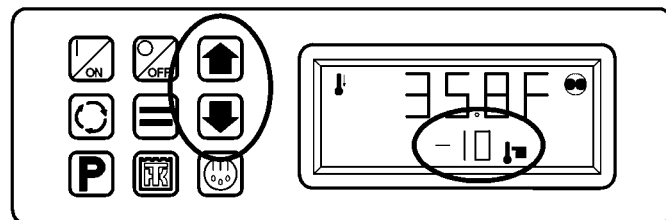

**Figure 165: Press Up or Down Arrow Keys**

- When the desired setpoint is shown on the display, immediately press the Enter Key to load the new setpoint. The display will briefly show [Lod] and then the new setpoint will reappear in the display.

**IMPORTANT:** The Enter key (Figure 166) must be pressed or the setpoint will not be changed. The display will return to the Standard Display and the setpoint will return to the old setpoint in about 10 seconds if the Enter Key is not pressed. Alarm Code 127 Setpoint Not Entered is set, to indicate that the setpoint change was started but not completed.

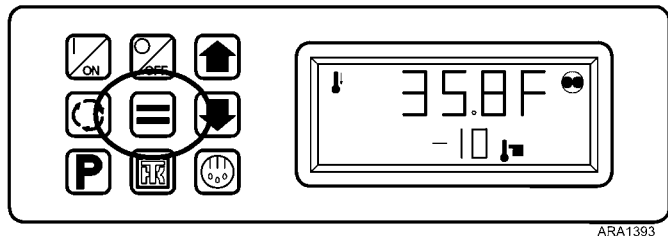


Figure 166: Press Enter Key

**IMPORTANT:** Confirm that the correct setpoint is set.

## Selecting Cycle-Sentry or Continuous Mode

Cycle Sentry or Continuous Mode operation can be changed using the Select Key.

- When the Remote Standard Display is shown, press the Select key once to display the Cycle Sentry prompt.


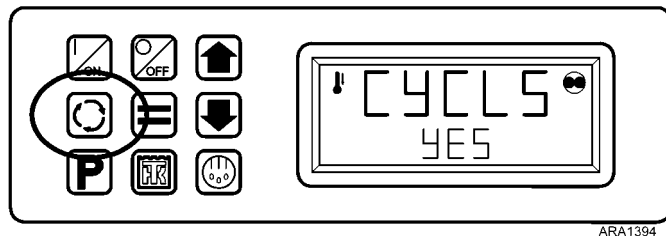


Figure 167: Press Select Key


- Use the Up and Down Arrow Keys to chose either YES or nO. Yes = Cycle Sentry Mode. nO = Continuous Mode.

## Optional Rear Remote Control Panel

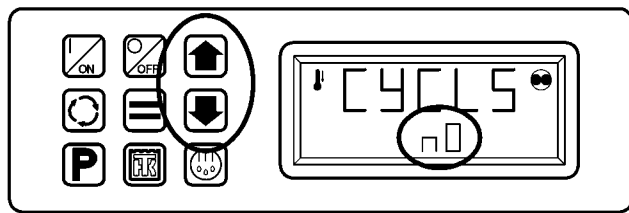

**Figure 168: Press Up or Down Arrow Keys**

- When the desired selection is shown, press the Enter Key (Figure 169) to load the setting. The display will briefly show [Lod] and then the new selection will briefly appear in the display.

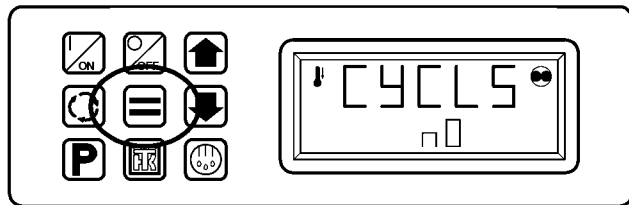


**Figure 169: Press Enter Key**

- The display will then return to the Remote Standard Display.

## Displaying the Discharge Air Temperature

The discharge air temperature can be shown using the Select Key.

- When the Remote Standard Display is shown, press the Select Key twice. The discharge air temperature will be shown in the display for about 10 seconds.

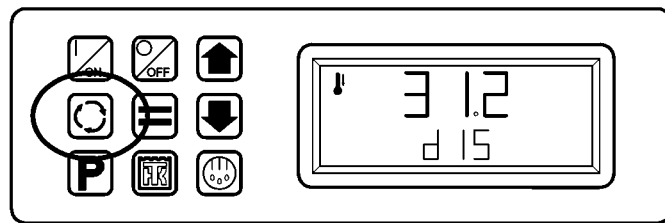


**Figure 170: Press Select Key Twice**

- The display will then return to the Remote Standard Display.

## Viewing and Clearing Alarm Codes


Alarm Codes can be displayed and cleared using the Select Key.

1. When the Remote Standard Display is shown, press the Select Key three times. Any alarm codes present will be shown in the display, with the most recent alarm code shown first. If no alarm codes are present the display will show [00].

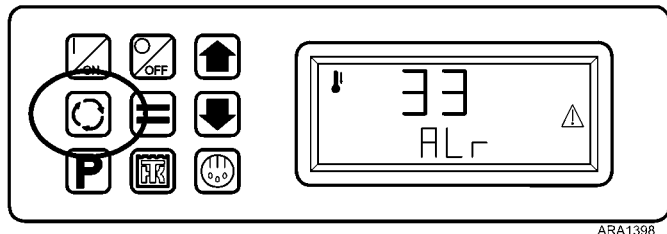


**Figure 171: Press Select Key Three Times**

2. To clear a displayed alarm code, press the Enter Key. The display will briefly show CLEAR ALM.

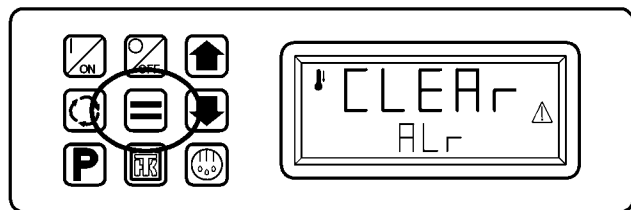

**Figure 172: Press Enter Key**

3. If any additional alarms are present, the next alarm will be shown. If no other alarms are present the display will briefly show [00].

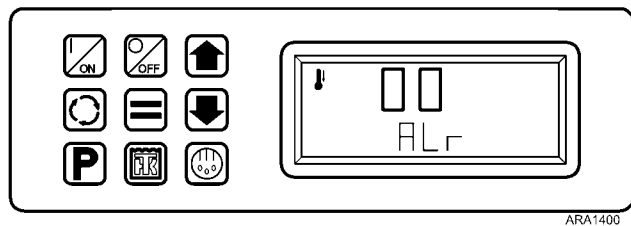

**Figure 173: No Alarms Display**

4. The display will then return to the Remote Standard Display.



## Starting a Manual Defrost Cycle

If conditions allow, a manual defrost cycle can be initiated using the Defrost Key.

1. Press the Defrost Key. The defrost prompt [EnTER dEF] will appear in the display.

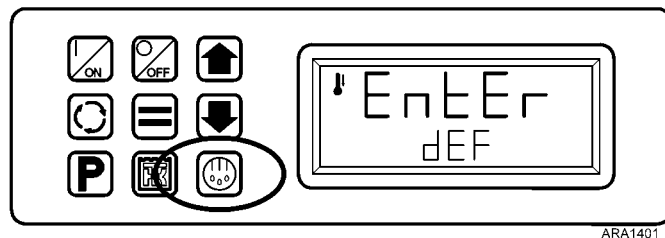


Figure 174: Press Defrost Key

2. When the defrost prompt is shown, press the Enter Key to start a manual defrost. The display will briefly show LOAd dEF and then a defrost cycle will begin if conditions allow.

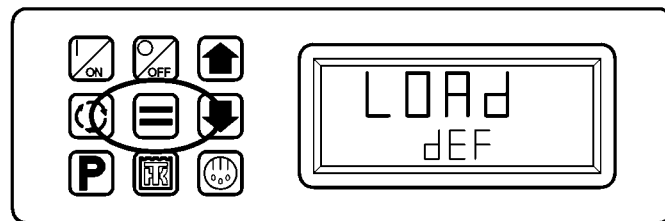


Figure 175: Press Enter Key

3. The display will return to the Remote Standard Display. The Defrost Icon will be shown in the display.

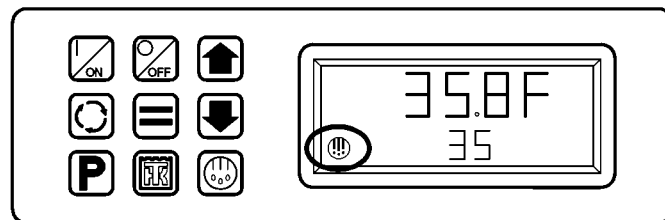



Figure 176: Defrost Icon Displayed

4. The defrost cycle will terminate automatically.

## Sending a Start of Trip Marker


A Start of Trip marker can be sent to the data loggers using the TK Logo Key.

1. Press the TK Logo Key. The Start of Trip [EnTER SOt] prompt will appear in the display.

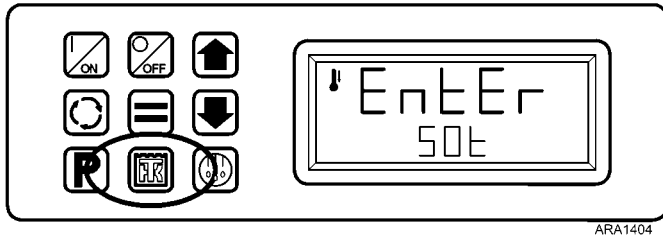

**Figure 177: Press TK Logo Key**

2. When the Start of Trip prompt is shown, press the Enter Key to send a Start of Trip marker to the CargoWatch and ServiceWatch data loggers. The display will briefly show LOAd SOt.

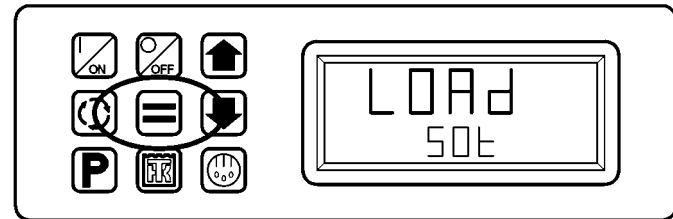

**Figure 178: Press Enter Key**

3. The display will then return to the Remote Standard Display.

### Running a Pretrip Test

A Pretrip Test can be started using the Pretrip Key as long as the unit is not in STAND BY. If the unit is not running when the Pretrip Test is started a Full Pretrip Test will be performed. If the unit is running when the Pretrip Test is started a Running Pretrip Test will be performed.

1. Clear any alarm codes as shown previously.
2. Press the Pretrip Key. The Pretrip [EntEr PrE] prompt will appear in the display.

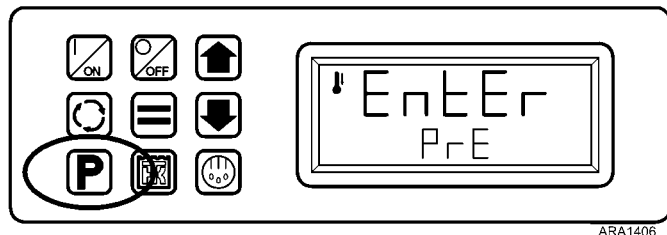


Figure 179: Press Pretrip Key

3. When the Pretrip prompt is shown, press the Enter Key to start a Pretrip Test. The display will briefly show LOAd PrE. If the unit is not running a Full Pretrip Test will be performed. If the unit is running a Running Pretrip Test will be performed.


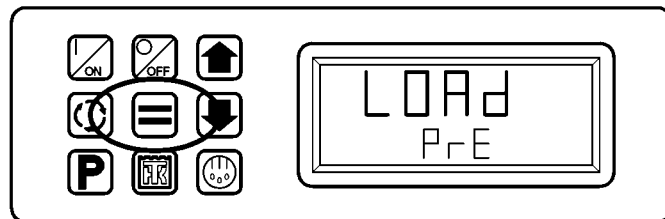



Figure 180: Press Enter Key

4. When the Pretrip Test is running the display will show PrE trP. The Control Panel will show the Pretrip Test progress.

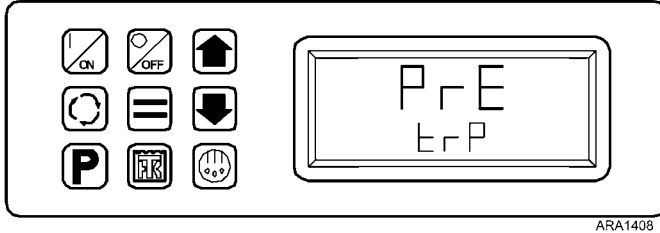

**Figure 181: Pretrip Display**

5. When the Pretrip Test is complete the display will show PASS, CHEC or FAIL. Pressing the Select Key will return to the Remote Standard Display.

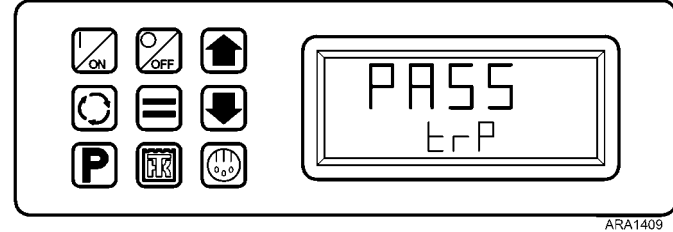

**Figure 182: Pass Pretrip Display**

# Loading and Enroute Inspections

This chapter describes pre-loading, post loading, and enroute inspection procedures. Thermo King refrigeration units are designed to maintain the required product load temperature during transit. Follow these recommended loading and enroute procedures to help minimize temperature related problems.


## Pre-Loading Inspection

1. Pre-cool products before loading. Note any variances on the manifest.
2. Inspect door seals and vent doors for condition and a tight seal with no air leakage.
3. Inspect the trailer inside and out. Look for:
  - Damaged or loose trailer skin and insulation
  - Damaged walls, air ducts, floor channels or “T” flooring
  - Clogged defrost drain tubes
  - Blocked return air bulkhead

4. Verify that the setpoint temperature is correct for your cargo. Pre-cool the trailer as required.
5. Supervise product loading to ensure sufficient air space around and through the load. Airflow around the cargo must not be restricted.

***NOTE: If the warehouse is not refrigerated, operate the unit with doors closed until cargo is ready to be loaded. Then turn off the unit, open cargo doors and load cargo. When cargo is loaded, close trailer doors and restart the unit.***

***The unit can be operated with the cargo box doors open if the truck is backed into a refrigerated warehouse and the dock door seals fit tightly around the trailer.***

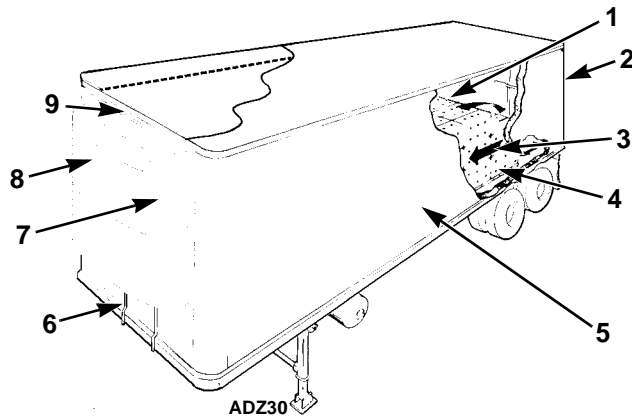

1.	Correct load height (trailers without chutes)
2.	Tight doors and gaskets
3.	Good air circulation around load
4.	Proper cargo temperature ( <b>prior</b> to loading)
5.	Interior/exterior walls and insulation in good condition
6.	Clear defrost drains
7.	Good outside air circulation
8.	Unit inspection
9.	Tight seals

**Figure 183: Loading Considerations**

### Post-Loading Inspection

Post-loading inspections ensure the cargo has been loaded properly. To perform a post-load inspection:

1. Inspect the evaporator outlets for blockage.
2. Turn the unit off before opening the cargo box doors to maintain efficient operation.

***NOTE: The unit can be operated with the cargo box doors open if the truck is backed into a refrigerated warehouse and the dock door seals fit tightly around the trailer.***

3. Perform a final check of the load temperature. If the load is above or below temperature, make a final notation on the manifest.



***CAUTION: Cargo must be pre-cooled to the proper temperature before loading. The unit is designed to maintain temperature, not cool an above-temperature load.***

4. Close or supervise the closing of the cargo box doors. Make sure they are securely locked.
5. Make sure the setpoint is at the temperature listed on the manifest.
6. If the unit was stopped, restart using the correct starting procedure. See the Operating Instruction chapter in this manual.
7. Start a manual defrost cycle 30 minutes after loading. See the Manual Defrost procedure in this manual.

### Enroute Inspections

Complete the following enroute inspection every four hours. This will help minimize temperature related problems.

#### Inspection Procedure

1. Verify setpoint is correct.
2. Check the return air temperature reading. It should be within the desired temperature range.
3. Initiate a manual defrost cycle after each enroute inspection.

#### Inspection Troubleshooting

1. If a temperature reading is not within the desired temperature range, refer to the troubleshooting table on the following pages. Correct problem as required.

2. Repeat the Enroute Inspection every 30 minutes until the compartment temperature is within the desired temperature range. Stop the unit if the compartment temperature is not within the desired temperature range on two consecutive 30 minute inspections, especially if the compartment temperature appears to be moving away from the setpoint.
3. Immediately contact the nearest Thermo King Service Center or your company office.
4. Take all necessary steps to protect and maintain proper load temperature.



***CAUTION: Stop the unit if the compartment temperature remains higher than the desired temperature range from the setpoint on two consecutive 30 minute inspections. Contact the nearest Thermo King Service Center or your company office immediately. Take all necessary steps to protect and maintain proper load temperature.***



## Inspection Troubleshooting

Problem	Cause	Remedy
<b>A return air temperature reading is not within desired temperature range of the setpoint.</b>	The unit has not had time to cool down to correct temperature.	Refer to the load log history. Look for above temperature load records, properly pre-cooled cargo compartment, length of time on road, etc. Correct as required. Continue monitoring return air temperature until the reading is within the desired temperature range of the setpoint.
	The unit may have a low refrigerant charge.	Check the receiver tank sight glass for refrigerant level. If liquid is not showing in the receiver tank sight glass, the refrigerant charge may be low. A competent refrigeration technician is required to add refrigerant or repair the system. Contact the nearest Thermo King dealer, authorized Service Center, or call the Thermo King Cold Line for referral. Consult the Table of Contents for Cold Line information.
	The unit is in defrost or has just completed a defrost cycle.	Monitor the return air temperature after the defrost cycle is completed to see if the temperature returns to the desired temperature range of the setpoint.
	The evaporator is plugged with frost.	Initiate a manual defrost cycle. The defrost cycle will automatically terminate when complete. Continue monitoring the return air temperature until the reading is within the desired temperature range of the setpoint.

Problem	Cause	Remedy
	Improper air circulation in the cargo compartment.	Inspect the unit and cargo compartment to determine if the evaporator fan(s) are working and properly circulating the air. Poor air circulation may be due to improper loading of the cargo, shifting of the load, or fan belt slippage. Correct as required. Continue monitoring return air temperature until problem is corrected.
	The unit did not start automatically.	Determine the cause for not starting. Correct as required. Continue monitoring the return air temperature until the reading is within the desired temperature range of the setpoint.

# Alarm Codes

## Introduction

An alarm code is generated when the microprocessor senses an abnormal condition. Alarms direct an operator or service technician to the source of a problem.

Multiple alarms can be present at one time. All generated alarms will be stored in memory until cleared by the operator. Document all alarm occurrences and report them to the service technician.

See “Alarms Menu” in the Operation Instructions Chapter for information about viewing and clearing alarms.

***NOTE: Some alarms (3, 4, 74, 203, and 204) cannot be cleared in the Alarms Menu, they must be cleared in the Maintenance Menu or the Guarded Access Menu. Contact your supervisor or a Thermo King dealer about clearing those alarms.***

***IMPORTANT: Always record any Alarm Codes that occur - in the order that they occur - as well as any other pertinent information. This information is extremely valuable to service personnel.***


***NOTE: In some cases alarms cannot be cleared, or cannot be cleared after they have occurred a specified number of times. If such is the case, these alarms must be cleared by service personnel. See “Clearing Alarm Codes” on page 145.***

## Alarm Types

The four types of alarms are described below.


**Log Alarms:** Log Alarms are indicated by the Log Alarms screen, which appears for approximately 30 seconds (just before the Standard Display appears) each time the unit is turned on. The Alarm Display must be used to view the existing alarms. This level of alarm serves as a notice to take

corrective action before a problem becomes severe. Maintenance items such as a maintenance reminder hour meter reaching its time limit are log alarms.

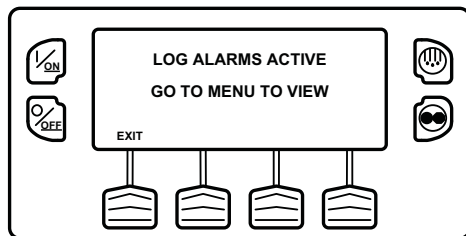

**Figure 184: Log Alarms Screen**

**Check Alarms:** Check Alarms are indicated by the Alarm Display in which the large Alarm Icon will appear on the Standard Display as shown below in Figure 185. The Alarm Menu must be used to view the existing alarms. This level of alarm serves as a notice to take corrective action before a problem becomes severe. The unit will run with check alarms but some features and functions may be inhibited.

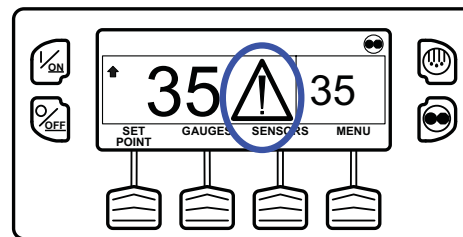

**Figure 185: Alarm Display**


**Prevent Alarms:** Prevent Alarms are also indicated by the Alarm Display as shown in Figure 185. The Alarm Menu must be used to view the existing alarms. The unit may stop running and wait a timed interval or until conditions allow and then restart. If the unit is waiting to restart, Alarm Code 84 Restart Null will be present along with the Prevent Alarm. In other cases the unit may restart or run with reduced performance to determine if continued operation is possible. If the alarm does not reoccur with reduced performance the unit will then return to full performance. If the unit is operating with reduced performance Alarm Code 85 Forced Unit Operation will also be present.

## Alarm Codes

**Shutdown Alarms:** Shutdown Alarms are indicated by the Alarm Display. Shutdown alarms also cause the display and backlight to flash on and off, and the display will switch from normal video to reverse video and back to normal video (light areas become dark and dark areas become light as shown in Figure 186). Shutdown alarms force the unit into shutdown. The unit will remain in shutdown and will not restart until the shutdown alarm is cleared. Exceptions are some engine and electric shutdown alarms become that log alarms when switched to the alternate operating mode (diesel to electric or electric to diesel).

If a shutdown alarm occurs that affects only Diesel Mode operation and the unit is switched to electric (either manually or automatically), the Diesel Mode shutdown alarm becomes an Electric Mode log alarm. This allows the unit to run in Electric Mode without clearing the shutdown alarm that is preventing Diesel Mode operation. If the unit is switched back to Diesel Mode, the alarm again becomes a Diesel Mode shutdown alarm and prevents unit operation. If the unit is configured for electric to diesel autoswitch, it automatically starts and runs in Diesel Mode if an electric shutdown occurs.

In the same manner, if a shutdown alarm occurs that affects only Electric Mode operation and the unit is switched to diesel (either manually or automatically), the Electric Mode shutdown alarm becomes a Diesel Mode log alarm to allow Diesel Mode operation. If the unit is switched back to Electric Mode, the alarm reverts to an Electric Mode shutdown alarm and prevents unit operation.

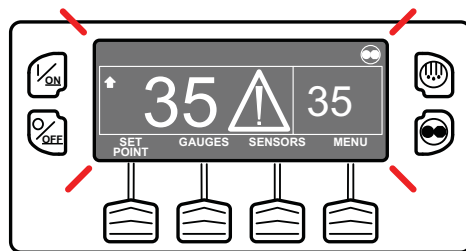

**Figure 186: Shutdown Alarm Display**

## Pretrip Alarm Codes

If an alarm occurs during a Pretrip Test the alarm code will be displayed as Pretrip Alarm XX, where XX is the alarm code.

## Clearing Alarm Codes

Most alarm codes can be cleared conventionally from the Alarm Menu using the CLEAR Key. See the Operating Instructions chapter for procedures.

The operator should contact a supervisor or a Thermo King dealer about clearing alarms using the Guarded Access Menu.

Refer to the table on the following pages for alarm corrective action.

**NOTE:** *Document all alarm faults and report them to the service technician.*

There are three levels of corrective action that can be taken when an alarm condition occurs.

**OK To Run:** An alarm condition exists but does not affect unit operation. Corrective action can occur at a later date.

**Check As Specified:** An alarm condition exists that could affect unit operation. Follow directions in the Corrective Action column on the following chart.

**Take Immediate Action:** An alarm condition exists that will damage the unit or load. Take immediate action to correct the problem.

**NOTE:** *The corrective actions listed in the Operating Instructions chapter and in the chart on the following pages are suggestions only. Always consult your company for final decisions.*

**NOTE:** *The chart on the following pages shows all possible alarm codes for all possible applications. Not all codes will be applicable to each individual unit.*

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action		
			Ok To Run	Check	Shut Down
00	No Alarms Exist	None required	X		
2	Evaporator Coil Sensor	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X	
3	Control Return Air Sensor	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X	
4	Control Discharge Air Sensor	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X	
5	Ambient Air Sensor	Report alarm at end of day.	X		
6	Coolant Temp Sensor	Report alarm at end of day.	X		
7	Engine RPM Sensor	Report alarm at end of day.	X		
9	High Evaporator Temperature	Manually monitor load temperature. Report alarm at end of the day.		X	

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
10	High Discharge Pressure	If unit is shut down repair immediately. Otherwise, report alarm at end of day.			X	
11	Unit Controlling on Alternate Sensor	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X		
12	Sensor or Digital Input Shutdown	The indicated zone is no longer able to operate and has been shut down. Repair immediately.			X	
13	Sensor Calibration Check	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X		
17	Engine Failed to Crank	If unit is shut down repair immediately. Otherwise, report alarm at end of day.		X		
18	High Engine Coolant Temperature	If unit is shutdown repair immediately. Otherwise, report alarm at end of day.		X		
19	Low Engine Oil Pressure	If unit is shutdown repair immediately. Otherwise report alarm at end of day.		X		



### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action		
			Ok To Run	Check	Shut Down
20	Engine Failed to Start	If unit is shutdown repair immediately. Otherwise, report alarm at end of day.		X	
21	Cooling Cycle Check	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X	
22	Heating Cycle Check	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X	
23	Cooling Cycle Fault	The indicated zone is no longer able to operate and has been shut down. Repair immediately.			X
24	Heating Cycle Fault	The indicated zone is no longer able to operate and has been shut down. Repair immediately.			X
25	Alternator Check	If unit is shutdown repair immediately. Otherwise, report alarm at end of day.		X	
26	Refrigeration Capacity	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X	

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
28	Pretrip Abort	Report alarm at end of day.	X			
29	Defrost Damper Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X		
30	Defrost Damper Stuck	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.			X	
31	Oil Pressure Switch	If unit is shutdown repair immediately. Otherwise, report alarm at end of day.		X		
32	Refrigeration Capacity Low	The indicated zone is no longer able to operate and has been shut down. Repair immediately.			X	
33	Check Engine RPM	Report alarm at end of day.	X			
35	Run Relay Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.			X	

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action		
			Ok To Run	Check	Shut Down
36	Electric Motor Failed to Run	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.			X
37	Engine Coolant Level	Check coolant level, add as needed. Report alarm at end of day.	X		
38	Electric Phase Reversed	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.			X
39	Water Valve Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X	
40	High Speed Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X	
41	Check Engine Coolant Temperature	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X		
42	Unit Forced to Low Speed	Report alarm at end of day.	X		

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
43	Unit Forced to Low Speed Modulation	Report alarm at end of day.	X			
44	Check Fuel System	Refill fuel tank.			X	
45	Hot Gas Bypass or Hot Gas Bypass Circuit	If unit is shutdown repair immediately. Otherwise, report alarm at end of day.		X		
46	Check Air Flow	If unit is shut down repair immediately. Otherwise, report alarm at end of the day. Cargo may be restricting air flow, check load.		X		
48	Check Belts/Clutch	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.			X	
50	Reset Clock	Report alarm at end of day.	X			
52	Heat Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X		

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
54	Test Mode Time-out	Service Test or Interface Board Test time out after 15 minutes. Report alarm at end of day.	X			
56	Host Evap Fan Low Speed	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
57	Host Evap Fan High Speed	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
61	Low Battery Voltage	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X		
62	Ammeter Out of Calibration	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.				X
63	Engine Stopped	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.				X
64	Pretrip Reminder	Report alarm at end of day.	X			

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
65	Abnormal Temperature Differential	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day		X		
66	Low Engine Oil Level	Check engine oil level. If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.			X	
67	Liquid Line Solenoid Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X		
68	Internal Controller Fault	Report alarm at end of day.	X			
70	Hourmeter Failure	Report alarm at end of day.		X		
74	Controller Reset to Defaults	Report alarm at end of day.		X		
79	Internal Data Logger Overflow	Report alarm at end of day.		X		
80	Compressor Temp Sensor	Report alarm at end of day.	X			
82	High Compressor Temperature Shutdown	If unit is shutdown repair immediately. Otherwise, report alarm at end of day.			X	

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
83	Low Engine Coolant Temperature	If unit is shutdown repair immediately. Otherwise, report alarm at end of day.		X		
84	Restart Null	Report alarm at end of day.	X			
85	Forced Unit Operation	Report alarm at end of day.	X			
86	Discharge Pressure Sensor	Report alarm at end of day.	X			
87	Suction Pressure Sensor	Report alarm at end of day.	X			
89	Check Electronic Throttling Valve Circuit	If unit is shutdown repair immediately. Otherwise, report alarm at end of day.		X		
90	Electric Overload	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.				X
91	Electric Ready Input	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.				X
92	Sensor Grades Not Set	Report alarm at end of day.		X		

## Table of Alarm Codes

**NOTE:** Not all alarm codes are available with all microprocessor controllers or all revisions of software.

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
93	Low Compressor Suction Pressure	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.			X	
96	Low Fuel Level	Check engine fuel level and add fuel. If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X		
98	Fuel Level Sensor	Report alarm at end of day.	X			
99	High Compressor Pressure Ratio	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.			X	
105	Receiver Tank Pressure Solenoid Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X		
106	Purge Valve Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X		
107	Condenser Inlet Solenoid Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X		



### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action		
			Ok To Run	Check	Shut Down
108	Door Open Time-out	Close Doors. Report alarm at end of day.		X	
110	Suction Line Solenoid Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X	
111	Unit Not Configured Correctly	Report alarm at end of day.		X	
112	Remote Fans	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X	
113	Electric Heat Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X	
114	Multiple Alarms - Cannot Run	If unit is shutdown repair immediately. Otherwise, report alarm at end of day.			X
117	Auto switch from Diesel to Electric	Report alarm at end of day.	X		

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
118	Auto switch from Electric to Diesel	Report alarm at end of day.	X			
120	Alternator Exciter Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.		X		
121	Liquid Injection Circuit	If unit is shutdown, repair immediately. Otherwise report alarm at end of day.		X		
122	Diesel/Electric Relay Circuit	If unit is shutdown, repair immediately. Otherwise, report at end of day.		X		
127	Setpoint Not Entered	Be sure the setpoint is set to the required temperature.		X		
128	Engine Run Time Maintenance Reminder #1	Report alarm at end of day.	X			
129	Engine Run Time Maintenance Reminder #2	Report alarm at end of day.	X			

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
130	Electric Run Time Maintenance Reminder #1	Report alarm at end of day.	X			
131	Electric Run Time Maintenance Reminder #2	Report alarm at end of day.	X			
132	Total Unit Run Time Maintenance Reminder #1	Report alarm at end of day.	X			
133	Total Unit Run Time Maintenance Reminder #2	Report alarm at end of day.	X			
134	Controller Power On Hours	Report alarm at end of day.	X			
141	Autoswitch Diesel to Electric Disabled	Report alarm at end of the day.	X			
143	Remote Zone Drain Hose Heater Output	If unit is shutdown, repair immediately. Otherwise, report at end of day.	X			

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
144	Lost Expansion Module CAN Communication	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.			X	
145	Loss of Controller "On" Feedback Signal	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.			X	
146	Software Version Mismatch	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.	X			
148	Autoswitch Electric to Diesel Disabled	Report alarm at end of the day.		X		
150	Out of Range Low	Manually monitor load temperature. Report alarm at end of the day.	X			
151	Out of Range High	Manually monitor load temperature. Report alarm at end of the day.	X			
153	Expansion Module Flash Load Failure	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.	X			

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
157	OptiSet Plus Mismatch	Manually monitor load temperature. Report alarm at the end of the day	X			
158	Primary Software Failed to Load	Report alarm at end of the day.		X		
159	Check Battery Condition	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X		
160	Lost Radio Expansion Board (REB) CAN Communication	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X		
203	Display Return Air Sensor	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X		
204	Display Discharge Air Sensor	Manually monitor load temperature with independent thermometer. Report alarm at end of day.		X		
230	Future REB Alarm					
231	Future REB Alarm					

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
232	Future REB Alarm					
233	REB Transitioning From Conservative to Full Null	Report alarm at end of the day.		X		
234	Relative Humidity Sensor	Report alarm at end of the day.	X			
251	REB Miss-configured	Report alarm at end of the day.	X			
252	Check Fresh Air Exchange Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
500	Host Evaporator Fan Low Speed	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
501	Host Evaporator Fan High Speed	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
502	Host Evaporator Fan RPM Sensor	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
503	Host Condenser Fan 1 RPM Sensor	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
504	Host Condenser Fan 2 RPM Sensor	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
505	Roadside Condenser Fan Motor Speed Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
506	Curbside Condenser Fan Motor Speed Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
507	Digital Scroll Output Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
508	Speed Request Communication Error	Report alarm at end of the day.	X			
509	Engine Control Unit (ECU) Failed to Enable	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
510	Engine Control Unit (ECU) Run Signal Failed	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
511	Engine Wait to Start Time Delay Expired	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
512	High Compressor Suction Pressure	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
513	Low Compressor Suction Ratio	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
514	Minimum ETV Discharge Superheat Temperature	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
515	Minimum ETV Discharge Superheat Temperature	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			



### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
516	I/O Controller to Application Controller Communication Failure	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
517	Check for Water in Fuel System	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
518	Generator Ground Fault	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
519	Check Battery Charger Input Power	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
520	Check Battery Charger Output Power	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
521	Battery Charger External/Environmental Fault	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
522	Battery Temperature Sensor Alarm	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
523	Battery Temperature Sensor Alarm	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
524	Generator Operational Limit Vout to Frequency Ratio	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
525	Generator Frequency Range Fault	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
526	Generator Operational Limit Output Current	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			
527	Reserved		X			
528	Controller Not Receiving Messages From Battery Charger	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X			

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action		
			Ok To Run	Check	Shut Down
529	Check Fuel Pump Circuit	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X		
530	Low Pressure Differential	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X		
531	Check Economizer Pressure Sensor	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X		
538	Engine J1939 CAN Datalink Degraded	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X		
539	Engine J1939 CAN Datalink Failed	If unit is shutdown, repair immediately. Otherwise, report alarm at end of day.	X		
599	Engine Service Tool Connected	Maintenance information only. Report alarm at end of the day.	X		
600	Check Crankshaft Speed Sensor	Report alarm at end of the day.		X	

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
601	Check Camshaft Speed Sensor	Report alarm at end of the day.		X		
602	Check Intake Throttle Position Sensor	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X		
603	Check Exhaust Pressure Sensor	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X		
604	Check Coolant Temperature Sensor	Report alarm at end of the day.		X		
605	Check Fresh Air Temperature Sensor	Report alarm at end of the day.		X		
606	Reserved			X		
607	Check Fuel Temperature Sensor	Report alarm at end of the day.		X		
608	Check Rail Pressure Sensor	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X		

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action		
			Ok To Run	Check	Shut Down
609	Check Intake Pressure Sensor	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X	
610	Check Atmospheric Pressure Sensor	Report alarm at end of the day.		X	
611	Check Glow Plug Circuit	Report alarm at end of the day.		X	
612	Check Intake Throttle Circuit	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X	
613	Check Injector(s)	Report alarm at end of the day.		X	
614	Check High Pressure Fuel Pump	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X	
615	Rail Pressure Fault	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X	

## Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action			
			Ok To Run	Check	Shut Down	
616	Engine Overspeed	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X		
617	Internal ECU Fault	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X		
618	Check EGR System	Report alarm at end of the day.		X		
619	ECU Main Relay Fault	Report alarm at end of the day.		X		
620	Reserved					
621	Reserved					
622	Reserved					
623	TRU CAN Message Timeout	Report alarm at end of the day.		X		
624	Check Intake Air Temperature Sensor	Report alarm at end of the day.		X		

### Table of Alarm Codes

*NOTE: Not all alarm codes are available with all microprocessor controllers or all revisions of software.*

Code	Description	Corrective Action	Level Of Action		
			Ok To Run	Check	Shut Down
625	Check Intake Air Temperature Sensor	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X	
626	Check Exhaust Temperature Sensor	Report alarm at end of the day.		X	
699	Unknown ECU Fault	If unit is shut down repair immediately. Otherwise, report alarm at end of the day.		X	

# Jump Starting

If the battery in a unit is discharged or run down, the unit may be jump started using jumper cables and another battery or vehicle. Consider the following precautions and be careful when jump starting a unit.



**WARNING:** *A battery can be dangerous. A battery contains a flammable gas that can ignite or explode. A battery stores enough electricity to burn you if it discharges quickly. A battery contains battery acid that can burn you. Always wear goggles or safety glasses and personal protective equipment when working with a battery. If you get battery acid on you, immediately flush it with water and get medical attention.*



**CAUTION:** *Unhook the semi tractor from the trailer before using the tractor to jump start the unit on the trailer. The negative ground circuit is complete when the tractor is hooked to the trailer. This can cause dangerous sparks when the positive connection is made at the battery.*

**IMPORTANT:** *Make sure to use a 12-volt battery to jump start the unit. If you are using a vehicle, make sure it has a 12-volt battery with a negative ground system. Do not use a “hot shot” booster device or a 24-volt source.*

Read and understand the following procedure completely before connecting any jumper cables. Use good jumper cables made with #2 gauge (or larger) cables.

1. Make sure the unit is turned off. If you are using a vehicle, make sure its ignition is also turned off.
2. Open the front doors on the unit. The battery is located to the right of the engine.
3. Check the discharged battery to make sure it is not damaged or frozen. Do not jump start a damaged or frozen battery. Check the vent caps to make sure they are tight.
4. Identify the positive (+) and negative (–) battery terminals.




# Jump Starting



**CAUTION:** Do not use a match or lighter as a light near the battery. Use a flashlight. A flame or a spark can ignite the gas in the battery and cause it to explode.

5. Remove the red cover from the positive (+) battery terminal on the unit's battery.

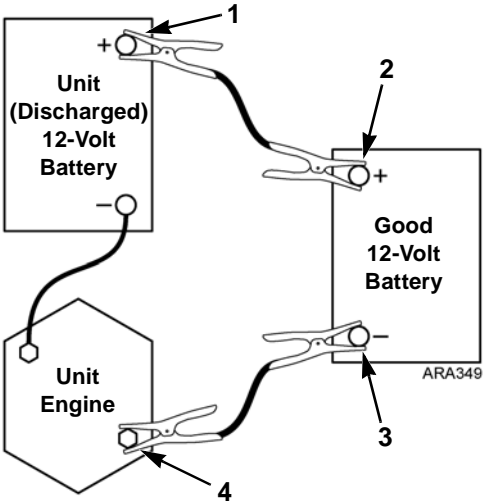

1.	Positive (+) Terminal on Unit Battery
2.	Positive (+) Terminal on Good Battery
3.	Negative (-) Terminal on Good Battery
4.	Starter Mounting Bolt on Unit Engine

Figure 187: Sequence for Connecting Jumper Cables

6. Connect the red positive (+) jumper cable to the positive (+) battery terminal on the unit's battery. Do not let the other end of the jumper cable touch anything that conducts electricity.



***CAUTION: Allowing the positive (+) jumper cable to short can produce dangerous sparks.***


7. Connect the other end of the red positive (+) jumper cable to the positive (+) battery terminal on the good battery.
8. Connect the black negative (-) jumper cable to the negative (-) battery terminal on the good battery. Do not let the other end of the jumper cable touch anything that conducts electricity.
9. Connect the black negative (-) jumper cable to the lower starter mounting bolt on the unit's engine.
10. If you are using a vehicle to jump start the unit, start the vehicle and let it run for a few minutes. This will help charge the discharged battery.



***CAUTION: Be careful around fans and belts. Keep your hands away from moving parts when an engine is running.***

11. Turn the unit on and let it start automatically or start it manually. If the unit will not crank or start, contact a qualified technician.  
  
***NOTE: Some units with microprocessors will show an alarm code and will not try to start until the battery voltage is above 10 volts.***
12. After the unit starts, remove the jumper cables in reverse order: black negative (-) from the unit starter mounting bolt, black negative (-) from the good battery, red positive (+) from the good battery, and red positive (+) from the unit battery (that was discharged).

## Jump Starting

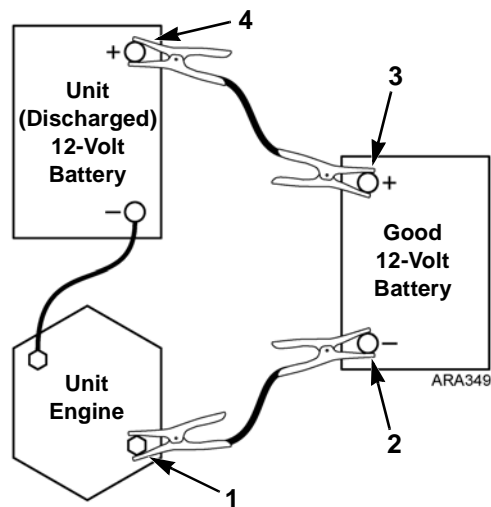

1.	Starter Mounting Bolt on Unit Engine
2.	Negative (-) Terminal on Good Battery
3.	Positive (+) Terminal on Good Battery
4.	Positive (+) Terminal on Unit Battery

**Figure 188: Sequence for Disconnecting Jumper Cables**

# Specifications

---

## Engine

Model	TK486V25 (Tier 4)
Number of Cylinders	4
Cylinder Arrangement	In-line vertical, number 1 on flywheel end
Firing Order	1-3-4-2
Direction of Rotation	Counterclockwise viewed from flywheel end
Fuel Type	No. 2 diesel fuel under normal conditions No. 1 diesel fuel is acceptable cold weather fuel
Oil Capacity	12 quarts (11.4 liters) crankcase and oil filter Fill to full mark on dipstick
Oil Type	API Classification CI-4 or better ACEA Rating E3 or better for Europe

### Engine (Continued)

Oil Viscosity	14 F to 122 F (-10 C to 50 C): SAE 15W-40 (Synthetic) 5 to 104 F (-15 to 40 C): SAE 15W-40 5 to 104 F (-15 to 40 C): SAE 10W-30 (Synthetic or Synthetic Blend) -13 to 104 F (-25 to 40 C): SAE 10W-40 -13 to 86 F (-25 to 30 C): SAE 10W-30 -22 to 122 F (-30 to 50 C): SAE 5W-40 (Synthetic) Below -22 F (-30 C): SAE 0W-30 (Synthetic)
Engine rpm:	Low Speed Operation High Speed Operation
	1450 ± 25 rpm 2200 ± 25 rpm
Engine Oil Pressure	18 psig (127 kPa) minimum in low speed 45 to 57 psig (310 to 390 kPa) in high speed
Intake Valve Clearance	0.006 to 0.010 in. (0.15 to 0.25 mm)
Exhaust Valve Clearance	0.006 to 0.010 in. (0.15 to 0.25 mm)
Valve Setting Temperature	70 F (21 C)
Low Oil Pressure Switch (Normally Closed)	17 ± 3 psig (117 ± 21 kPa)
Engine Coolant Thermostat	160 F (71 C)

## Engine (Continued)

Engine Coolant Type	<p>ELC (Extended Life Coolant), which is “RED”            Use a 50/50 concentration of any of the following equivalents:            Chevron Dex-Cool            Texaco ELC            Havoline Dex-Cool®            Havoline XLC for Europe            Shell Dexcool®            Shell Rotella            Saturn/General Motors Dex-Cool®            Caterpillar ELC            Detroit Diesel POWERCOOL® Plus</p> <p><b><i>CAUTION: Do not add “GREEN” or “BLUE-GREEN” conventional coolant to cooling systems using “RED” Extended Life Coolant, except in an emergency. If conventional coolant is added to Extended Life Coolant, the coolant must be changed after 2 years instead of 5 years.</i></b></p>
Coolant System Capacity	7.5 quarts (7.1 liters)
Radiator Cap Pressure	15 psig (103 kPa)

## Engine (Continued)

Drive:	Standard Units	Direct to compressor; belts to AC generator, alternator, and water pump
	Smart Power Units	Centrifugal clutch to compressor; belts to electric standby motor, AC generator, alternator, and water pump

## Belt Tension

Belt		
	New Belt	Field Reset
AC Generator and Alternator Belt - Standard Units: 37 or 65 Amp Alternator 120 Amp Alternator	106 Hz (111 lbs) 121 Hz (144 lbs)	92 Hz (84 lbs) 105 Hz (108 lbs)
AC Generator Belt - Smart Power Units and Standard Units with Optional Battery Charger	106 Hz (111 lbs)	92 Hz (84 lbs)
Water Pump Belt	126 Hz (40 lbs)	118 Hz (32 lbs)

## Belt Tension

Compressor Drive Belt - Smart Power Units Only 12 HP Electric Motor 19 HP Electric Motor	131 Hz (236 lbs) 150 Hz (300 lbs)	114 Hz (177 lbs) 130 Hz (223 lbs)
Alternator Belt - Smart Power Units Only: All Alternators	216 Hz (75 lbs)	187 Hz (56 lbs)

## Refrigeration System

Compressor	Thermo King X430LSC5
Refrigerant Charge—Type	14.5 lb (6.6 kg)—R404A
Compressor Oil Charge	4.3 qt (4.1 liters)*
Compressor Oil Type	Polyol Ester type P/N 203-513
Heat/Defrost Method:	Engine Operation Electric Operation
	Hot gas Hot gas and optional electric heater strips
High Pressure Cutout	470 +7/-35 psig (3241 + 48/-241 kPa) Automatic reset @ 375 ± 38 psig (2586 ± 262 kPa)



## Refrigeration System

*\* When the compressor is removed from the unit, oil level should be noted or the oil removed from the compressor should be measured so that the same amount of oil can be added before placing the replacement compressor in the unit.*

## Electrical Control System

Low Voltage	12.5 Vdc
High Voltage	230 Vac from AC generator at engine low speed 345 Vac from AC generator at engine high speed
Battery	One, group C31, 12 volt, (950 CCA recommended for operation below -15 F [-26 C])
Fuses	See "Fuses" on page 29.
Battery Charging	12 volt, 37 amp, brush type, Thermo King Alternator
Voltage Regulator Setting	13.95 to 14.35 volts @ 77 F (25 C)

## Electrical Components

<b>NOTE: Disconnect components from unit circuit to check resistance.</b>		
<b>Component</b>	<b>Current Draw (Amps) at 12.5 Vdc</b>	<b>Resistance—Cold (Ohms)</b>
Fuel Solenoid: Pull-in Coil	35 to 45	0.2 to 0.3
Hold-in Coil	0.5	24 to 29
High Speed (Throttle) Solenoid	2.9	4.3
Air Heater	89	0.14
Pilot Solenoid	0.7	17.0
Electronic Throttling Valve:		
Coil A (Red [EVA] and Blue [EVB] Wires)	—	20 to 35
Coil B (Black [EVC] and White [EVD] Wires)	—	20 to 35
Hot Gas Bypass Valve (if used)	1.1	11.1
Starter Motor	350-475*	
<b>* On-the-engine cranking check. Bench test is approximately 140 amps.</b>		

## Electrical Components

<b>AC Generator</b>  Low Engine Speed (1450 rpm) Output High Engine Speed (2200 rpm) Output	230 Vac at 54.9 Hz Nominal Vac - Measured Vac, Load Dependent 345 Vac at 90 Hz Nominal Vac - Measured Vac, Load Dependent
<b>Fan Motors</b>  Evaporator Fan Motor: Low Speed Power Rating High Speed Power Rating High Fan Speed at Low Engine Speed Low Fan Speed at High Engine Speed Low Fan Speed at Low Engine Speed High Speed Current Draw at Low Engine Speed Low Speed Current Draw at High Engine Speed Low Speed Current Draw at Low Engine Speed	  1.20 hp (0.90 kW) 1.75 hp (1.31 kW) 1700 rpm at low engine speed (1450 rpm) 1800 rpm at high engine speed (2200 rpm) 1180 rpm at low engine speed (1450 rpm) 3.8 amps at low engine speed (1450 rpm) 3.1 amps at high engine speed (2200 rpm) 2.6 amps at low engine speed (1450 rpm)
Condenser Fan Motor (each:      Power Rating Fan Speed at Low Engine Speed Fan Speed at High Engine Speed Current Draw at Low Engine Speed Current Draw at High Engine Speed	0.50 hp (0.37 kW) 1770 rpm low engine speed (1450 rpm) 2700 rpm at high engine speed (2200 rpm) 1.8 amps (per motor) at low engine speed (1450 rpm) 2.0 amps (per motor) at high engine speed (2200 rpm)

# Electrical Standby (Smart Power Units Only)

*NOTE: A transformer is used to convert 460 Vac to 230 Vac in units configured to use electric standby input voltage of 460 Vac.*

## Electric Motor and Overload Relay

Voltage/Phase/Frequency	Horsepower	Kilowatts	rpm	Full Load (amps)	Overload Relay Setting (amps)
230/3/60	12.0	9.0	1760	31.2	34
460/3/60	12.0	9.0	1760	15.6	20
460/3/60	19.0	14.2	3500	21.7	32

## Electric Heater Strips

Number	3
Watts	1000 watts (each)
Resistance	48 ohms (each)
Overload Relay Setting	6 amps

## Standby Power Cord Requirements

Supply Circuit Breaker:	12 HP Motor 230/3/60	70 amps
	12 HP Motor 460/3/60	40 amps
	19 HP Motor 460/3/60	60 amps
Extension Cord Size:	12 HP Motor 230/3/60	8 AWG Power Cable, 25 to 50-foot length
(All 4 conductor, 2000 Vac, Type W Power Cable)		
	12 HP Motor 230/3/60	6 AWG Power Cable, 75-foot length
	12 HP Motor 460/3/60	10 AWG Power Cable, up to 75-foot length
	19 HP Motor 460/3/60	8 AWG, Power Cable, up to 75-foot length

## Electric Fuel Heater (Optional)

Electric Fuel Heater:	Resistance	0.9 to 1.1 ohms
	Current Draw at 12.5 Vdc	11.4 to 13.9 amps
	Internal Thermostat Minimum Closing Temp.	30 F (-1 C)
	Internal Thermostat Maximum Opening Temp.	75 F (24 C)
2FH/2HP Fuse		20 amps

# Warranty

Terms of the Thermo King Warranty are available on request. Please reference document TK 50046 for the Thermo King Trailer Unit Warranty.

See the “EPA Emission Control System Warranty Statement” chapter earlier in this manual for the EPA Emission Control System Warranty.

# Glossary

This glossary is published for informational purposes only and the information being furnished herein should not be considered as all-inclusive or meant to cover all contingencies.

**NOTE:** *Additional terms not found in the glossary may be located in the index section of this manual.*

**accumulator:** A device located in the suction line to collect liquid refrigerant and meter it safely back to the compressor as gas.

**ambient air temperature:** Temperature of the air surrounding an object.

**amp:** Abbreviation for ampere. The basic measuring unit of electrical current.

**bar:** A metric unit of pressure. 1 bar = 100 kPa = 14.5 psi.

**Battery Sentry:** Part of the CYCLE-SENTRY™ system. The Battery Sentry module monitors alternator charge rate and will keep the unit running until the battery is adequately charged.

**box temperature:** The temperature within a temperature-controlled compartment.

**Btu (british thermal unit):** The quantity of heat required to raise the temperature of one pound of water by one degree Fahrenheit. 1 Btu = 252 calories.

**bulkhead:** 1) *return air bulkhead.* A metal or plastic “wall” placed at the front of the box to prevent loading of product tightly against the Thermo King unit. (Loading too close to the unit restricts air flow and system efficiency.) 2) *bulkhead divider.* A thick, insulated “wall” used to separate compartments of a multi-temperature truck or trailer.

**calorie:** The amount of heat required to raise temperature of one gram of water one degree Celsius. 1 calorie = 0.004 Btu.

**Celsius:** The metric unit of temperature measurement. The preferred alternate to the term centigrade. Abbreviated “C.”

**centigrade.** See *Celsius*.



## Glossary

**CFC:** Chlorofluorocarbon. A chlorine-based refrigerant consisting of chlorine, fluorine and carbon. Example: R12. In many countries it is illegal to release this type of refrigerant to the atmosphere because chlorine damages the earth's atmosphere. CFC refrigerants are not used in modern Thermo King units.

**circuit breaker:** A thermal device that automatically interrupts an electrical circuit when the current in the circuit exceeds the predetermined amperage rating of the breaker. See *amp*.

**coil:** A cooling or heating element made of pipe or tube, formed into a helical or serpentine shape, that may be equipped with thin metal fins to aid heat transfer.

**cold curtains:** Flexible vinyl curtains used to reduce air exchange between the refrigerated compartment and the outside during door openings.

**compound gauge:** A gauge calibrated in psig (or kPa) to measure pressure, and in inches of mercury (Kg/cm<sup>2</sup>) to measure vacuum.

**compressor:** The refrigeration component that compresses refrigerant vapor and creates refrigerant flow.

**condenser:** An arrangement of tubing in which the vaporized and compressed refrigerant is liquefied as heat is removed.

**cycles per second:** See *Hertz*.

**damper door:** A door on the evaporator section that closes during defrost to prevent hot air from entering the refrigerated cargo compartment.

**data logger:** An electronic device that monitors and stores unit operating and temperature data for later review. Examples: DMS, DAS, DRS and AccuTrac.

**DE:** Dual Evaporator. A multi-temp host unit with two evaporators capable of refrigerating two separate, longitudinal compartments.

**defrost:** The removal of accumulated ice from an evaporator coil. Periodic defrost is necessary when the evaporator coil is operating below freezing. Defrost is required more frequently when the air passing through the evaporator has a high moisture content.

**defrost termination switch:** A component that terminates defrost operation at a specific temperature.

**defrost timer:** A solid state module that initiates defrost at selected intervals. Also establishes a maximum defrost duration if normal circuits malfunction.

**dehydrator:** A device used to remove moisture from refrigerant. Also called a drier.

**discharge air temperature:** The temperature of air leaving the evaporator.

**drier:** See *dehydrator*.

**ERC:** Extended Remote Unit Control. (Door switches) An option on Thermo King multi-temperature units to improve temperature control when doors are opened during delivery. When a compartment door is opened, the refrigeration unit for that compartment may be forced to NULL, defrost, or some other mode. Opening a compartment door may also affect the operating mode of other compartments. ERC systems are connected in a variety of ways to meet customer needs.

**ETV (Electronic Throttling Valve) :** A device used with a microprocessor to precisely control the refrigeration system.

**evaporator:** The part of the refrigeration system that absorbs heat during the cooling cycle.

**F:** See *Fahrenheit*.

**Fahrenheit:** A unit of temperature measurement used in the United States. Abbreviated “F.”

**freeze up:** 1) Failure of a refrigeration system to operate normally due to moisture in the refrigerant and the formation of ice at the expansion valve. The expansion valve may be frozen shut or open, causing improper unit operation in either case. 2) The formation of a solid ice mass over the evaporator coil reducing air flow.

**fuse:** An electrical safety device (typically a cartridge) inserted into an electrical circuit. It contains material that will melt or break when the current is increased beyond a specific value. When this occurs, the circuit is opened and electrical current flow is stopped.

**fusible link:** An electrical safety device (typically a short piece of wire) inserted into an electrical circuit. The wire melts or breaks when the current is increased beyond a specific value. When this occurs, the circuit is opened and electrical current flow is stopped.

**Hertz:** A unit of frequency equal to one cycle per second. Abbreviated “Hz.”

## Glossary

**HFC:** A refrigerant consisting of hydrogen, fluorine and carbon. Examples: R134a and 404A. HFC refrigerants contain no chlorine and are, therefore, considered “safe” for the environment.

**high pressure relief valve:** A safety valve on the refrigeration system that allows refrigerant to escape from the system if pressure exceeds a predetermined value.

**hp (horsepower):** A unit of power equivalent to 746 watts or 550 foot-pounds per second.

**HPCO (High Pressure Cut Out Switch):** A pressure-operated switch that opens to stop unit operation when discharge pressure reaches a predetermined maximum.

**invertible:** A multi-temperature truck or trailer unit designed to allow the placement of deep-frozen cargo in any compartment. See *Multi-Temp*.

**kPa:** Kilopascals. A metric unit of pressure. 1 kPa = 0.01 bar = 0.145 psi.

**load:** 1) The product being refrigerated and transported.  
2) The amount of heat being removed by the refrigeration system. (For example, a compressor is under a heavy heat load when expected to cool a very warm box.)

**LPCO (Low Pressure Cut Out Switch):** A pressure-operated switch that opens to stop unit operation when suction pressure reaches a predetermined minimum.

**modulation:** An optional system that reduces load (product) dehydration and avoids “top freeze.”

**movable bulkhead:** A thick, insulated, portable wall-like device used to compartmentalize a temperature-controlled truck or trailer. See *bulkhead*.

**Multi-Temp:** A Thermo King truck or trailer unit capable of maintaining different set-points in multiple compartments.

**no. 1 diesel fuel:** A grade of diesel fuel formulated to prevent “jelling” in low ambient temperatures.

**no. 2 diesel fuel:** A grade of diesel fuel formulated for moderate to warm ambient temperatures.

**ohm:** An electrical unit measuring the amount of resistance (opposition to the current flow) in an electrical circuit.

**pre-cooling:** 1) To cool down an empty box (temperature-controlled area) to the desired load temperature prior to loading. 2) To cool cargo to a desired temperature before loading.

**pre-heat:** The heating of diesel engine glow plugs prior to start-up. Some engines use an intake manifold heater rather than glow plugs.

**pre-trip inspection:** Checking the operation of a refrigeration system before loading.

**psi:** Pounds per square inch. A unit of pressure.  
1 psi = 0.069 bar = 6.89 kPa.

**psig:** Pounds per Square Inch Gauge. Pressure in pounds per square inch as displayed by a gauge calibrated to zero when open to the atmosphere.

**receiver tank:** A refrigerant storage device included in nearly all Thermo King units.

**refrigerant:** The medium of heat transfer in a refrigeration system which absorbs heat by evaporating at a low temperature and releases heat by condensing at a higher temperature.

**refrigerant oil:** A special oil used to lubricate compressors in refrigeration systems.

**remote evaporator:** A separate evaporator unit located in a second or third compartment of a multi-temperature truck or trailer unit.

**return air bulkhead:** A structure (metal or plastic) mounted in the front of a trailer and designed to prevent restriction of return air flow to the Thermo King unit due to improper loading. See *bulkhead*.

**return air temperature:** The temperature of the air returning to the evaporator. See box temperature.

**rpm:** Revolutions per minute.

**setpoint:** The temperature selected on a thermostat or microprocessor controller. This is normally the desired box temperature.

**short cycling:** When a refrigeration unit cycles between the heat and cool modes more often than normal.

**sight glass:** A system component that permits visual inspection of oil or refrigerant level and condition.

**thermostat:** A device that controls unit modes of operation to maintain a selected box temperature.

**top freeze:** When the top portion of perishable cargo is damaged by freezing temperatures discharged from the refrigeration unit. This may occur near the front of the box when product is placed too close to the cold, discharge air flow.

## Glossary

**Vac (volts alternating current):** An electric current that reverses direction at regularly recurring intervals.

**Vdc (volts direct current):** An electric current that flows in one direction only and is constant in value.

**volts:** The basic measuring unit of electrical potential.

**watt:** The basic measuring unit of electrical power.

# Maintenance Inspection Schedule

---

Pretrip	Every 1,500 Hours	Every 3,000 Hours*	Annual/ 4,500 Hours	Inspect/Service These Items
				<b>Microprocessor</b>
•				Run Pretrip Test
				<b>Engine</b>
•				Check fuel supply.
•				Check engine oil level.
•	•	•	•	Inspect belts for condition and proper tension.
•	•	•	•	Check engine oil pressure hot, on high speed (should display "OK").
•	•	•	•	Listen for unusual noises, vibrations, etc.

\*3,000 hours or two years, whichever occurs first.

\*\* Based on EPA 40 CFR Part 89.

## Maintenance Inspection Schedule

Pretrip	Every 1,500 Hours	Every 3,000 Hours*	Annual/ 4,500 Hours	Inspect/Service These Items
•	•	•	•	Check engine coolant level and antifreeze protection (-30 F [-40 C]).
	•	•	•	Drain water from fuel tank and check vent.
	•	•	•	Inspect/clean electric fuel pump filter.
	•	•	•	Check and adjust engine speeds (high and low speed).
	•	•	•	Check condition of drive coupling bushings per Service Bulletin T&T 171.
			•	Check engine mounts for wear.
		•		Replace EMI 3000 air cleaner element at 3,000 hours or two years (whichever occurs first).
		•		Replace fuel filter/water separator.
		•		Change engine oil and oil filter (hot). Requires oil with API Rating CI-4 or better (ACEA Rating E3 for Europe).
	•			Inspect/clean EGR system (valve, piping, and cooler).

\*3,000 hours or two years, whichever occurs first.

\*\* Based on EPA 40 CFR Part 89.

## Maintenance Inspection Schedule

Pretrip	Every 1,500 Hours	Every 3,000 Hours*	Annual/ 4,500 Hours	Inspect/Service These Items
		•	—	<p>Adjust engine valve clearance.</p> <p>Test fuel injection nozzles at least every 3,000 hours. **</p> <p>Replace fuel return lines between fuel injection nozzles every 10,000 hours.</p> <p>Change ELC (red) engine coolant every 5 years or 12,000 hours. Units equipped with ELC have an ELC nameplate on the expansion tank.</p>
				<b>Electrical</b>
	•  •	•  •	•  •  •  •	<p>Inspect battery terminals and electrolyte level.</p> <p>Inspect wire harness for damaged wires or connections.</p> <p>Inspect AC generator and alternator wire connections for tightness.</p> <p>Inspect electric motors.</p>

\*3,000 hours or two years, whichever occurs first.

\*\* Based on EPA 40 CFR Part 89.



## Maintenance Inspection Schedule

Pretrip	Every 1,500 Hours	Every 3,000 Hours*	Annual/ 4,500 Hours	Inspect/Service These Items
				<b>Refrigeration</b>
•	• • •	• • •	• • • • • —	<p>Check refrigerant level.</p> <p>Check for proper suction pressure.</p> <p>Check compressor oil level and condition.</p> <p>Check compressor efficiency and pump down refrigeration system.</p> <p>Empty oil collection container mounted on compressor.</p> <p>Replace dehydrator and check discharge and suction pressure every two (2) years.</p>

\*3,000 hours or two years, whichever occurs first.

\*\* Based on EPA 40 CFR Part 89.

## Maintenance Inspection Schedule

Pretrip	Every 1,500 Hours	Every 3,000 Hours*	Annual/ 4,500 Hours	Inspect/Service These Items
				<b>Structural</b>
•	•	•	•	Visually inspect unit for fluid leaks.
•	•	•	•	Visually inspect unit for damaged, loose or broken parts (includes air ducts and bulkheads).
	•	•	•	Inspect idlers for bearing wear (noise).
	•	•	•	Clean entire unit including condenser and evaporator coils and defrost drains.
	•	•	•	Check all unit and fuel tank mounting bolts, brackets, lines, hoses, etc.

\*3,000 hours or two years, whichever occurs first.


\*\* Based on EPA 40 CFR Part 89.

# Serial Number Locations


**Unit:** Nameplates on the evaporator fan housing and on the roadside of the evaporator.

**Engine:** See the engine identification plate located on the engine valve cover.

**Compressor:** Stamped between the cylinders on the front end above the oil pump.

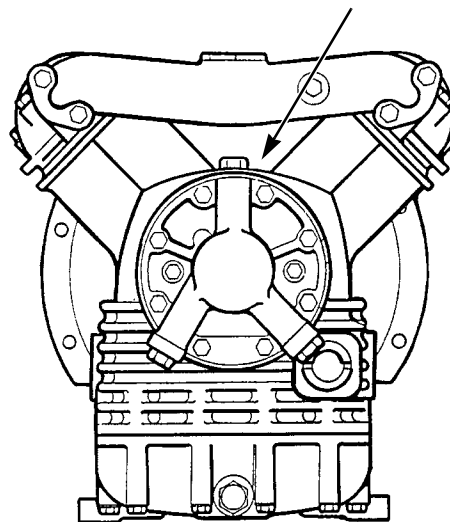

**Figure 189: Compressor Serial Number Location**

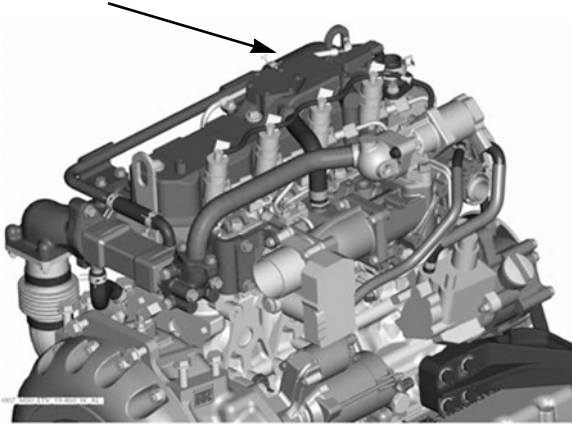

**Figure 190: Engine Serial Number Location**



**Figure 191: Unit Serial Number Plate Locations**

**Serial Number Locations**



ARA793

1.	Unit Serial Number
2.	Bill of Material Number
3.	Unit Model
4.	Unit ID

**Figure 192: Unit Serial Number Plate**

# Emergency Cold Line



AMA1585

The answering service at the factory will assist you in reaching a dealer to get the help you need. The Cold Line is answered 24 hours a day by personnel who will do their best to get you quick service at an authorized Thermo King Dealer.

If you can't get your rig rolling, and you have tried the Thermo King North American Service Directory (available from any Thermo King dealer) to reach a dealer without success, *then* call the Toll Free Emergency Cold Line Number (888) 887-2202.

# **Recover Refrigerant**

**At Thermo King, we recognize the need to preserve the environment and limit the potential harm to the ozone layer that can result from allowing refrigerant to escape into the atmosphere.**

**We strictly adhere to a policy that promotes the recovery and limits the loss of refrigerant into the atmosphere.**

**In addition, service personnel must be aware of Federal regulations concerning the use of refrigerants and the certification of technicians. For additional information on regulations and technician certification programs, contact your local THERMO KING dealer.**

# **CALIFORNIA**

## **Proposition 65 Warning**

**Diesel exhaust is a chemical known to  
the State of California to cause cancer.**



## A

alarm codes 142

corrective action 145

types 142

amber status light 33

automatic start/stop safety precautions 12

## B

battery inspection 35

belt tension, specifications 178

belts inspection 35

## C

coils inspection 36

compressor oil sight glass 28

control panel 38

display 38

keys 40

CYCLE-SENTRY

start-stop controls 24

## D

data logging 25

defrost 26

defrost drain inspection 36

Defrost key 39, 40, 48, 83

door inspection 36

## E

ELC (extended life coolant) 21

electrical components, specifications 182

electrical control system, specifications 181

electrical hazards 12

electrical inspection 35

electrical standby, specifications 184

electronic throttling valve (ETV) 22

Emergency Cold Line 201

EMI 3000 22

engine compartment components 28

engine coolant level 35

engine oil dipstick 28

engine oil level 35

engine, specifications 175

enroute inspections 139

ETV (electronic throttling valve) 22

extended life coolant (ELC) 21

F

first aid for refrigerant 14

first aid for refrigerant oil 14

FreshSet 26

front doors

    opening 27

fuel level 35

fuses 29

H

high pressure cutout switch 29

high pressure relief valve 29

HMI control panel 38

I

introduction 7

J

jump starting 171

L

loading procedures

enroute inspections 139

post-loading inspection 138

pre-loading inspection 136

low oil level switch 29

low oil pressure switch 29

M

maintenance inspection schedule 193

manual pretrip inspection 35

microprocessor On/Off switch 38

Mode key 40

O

Off key 39, 40, 48

On key 39, 40, 47

OptiSet Plus 26

overload relay 29

P

post-loading inspection 138

preheat buzzer 29

pre-loading inspection 136

pretrip inspection, manual 35

protection devices 28

## R

rear remote control panel 121

receiver tank sight glass 28

refrigerant oil safety 14

refrigerant safety 12

refrigeration system, specifications 179

remote status light 32

## S

safety precautions 11

- automatic start/stop operation 12

- electrical hazards 12

- first aid for refrigerant 14

- first aid for refrigerant oil 14

- general safety practices 11

- refrigerant 12

- refrigerant oil 14

Serial Number Locations 198

smart FETs 29

SMART REEFER 2 (SR-2) Controller 23, 37

soft keys 40

specifications

- electric fuel heater 185

SR-2 Controller 23, 37

status light, remote 32

structural inspection 35

## U

unit description 18

## W

warranty 186